

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LIORQUE](#) /

› [LIORQUE Digital Kitchen Timer Instruction Manual](#)

LIORQUE YGH5249

LIORQUE Digital Kitchen Timer Instruction Manual

Model: YGH5249

INTRODUCTION

Thank you for choosing the LIORQUE Digital Kitchen Timer. This versatile device is designed to assist you with precise time management in various daily activities, from cooking and studying to managing classroom tasks. Featuring a large, clear LCD display and multiple functionalities, it aims to simplify your timing needs. Please read this manual carefully to ensure proper use and maintenance of your timer.



Figure 1: LIORQUE Digital Kitchen Timer

SETUP

Battery Installation

Your LIORQUE Digital Kitchen Timer requires 2 AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open the compartment.
3. Insert 2 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The timer display should now light up, indicating successful installation.



Figure 2: Battery Compartment and Stand

OPERATING INSTRUCTIONS

Modes: Timer, Stopwatch, and Clock

The LIORQUE timer features three primary modes:

- **Timer Mode (Countdown):** Set a specific time for the timer to count down from.
- **Stopwatch Mode (Count-up):** Measure elapsed time from zero.
- **Clock Mode:** Displays the current time (12/24-hour format).

To switch between Timer/Stopwatch mode and Clock mode, **press and hold the ST/SP button for 2 seconds.**

Digital Timer & Clock



Figure 3: Switching Between Countup and Clock Modes

Setting the Time (Clock Mode)

In Clock Mode, you can set the current time:

1. While in Clock Mode, **long press any of the 1H, 5M, 1M, or 5S buttons** to enter time setting mode. The digits will start flashing.
2. Press the corresponding buttons (1H, 5M, 1M, 5S) to adjust the hours, minutes, or seconds.
3. Press the **ST/SP** button to confirm and exit setting mode.

Setting the Timer (Countdown Mode)

To set a countdown time:

1. Ensure the timer is in Timer/Stopwatch mode (not Clock mode).
2. Use the **1H, 5M, 1M, and 5S** buttons to set your desired countdown time. Each press adds the corresponding time increment.
3. Press the **ST/SP** button to start the countdown.
4. To pause the countdown, press **ST/SP** again. Press it once more to resume.
5. To reset the timer to zero, press the **RESET** button.

Using Stopwatch Mode (Count-up)

To use the stopwatch function:

1. Ensure the timer is in Timer/Stopwatch mode and reset to 00:00:00.
2. Press the **ST/SP** button to start counting up.
3. Press **ST/SP** again to pause the count.
4. Press **RESET** to clear the stopwatch to zero.

Two Kinds of Counting Modes



Figure 4: Count-up and Countdown Modes

Custom Mode

The Custom Mode allows you to save a frequently used countdown time for quick recall:

1. Set your desired countdown time using the 1H, 5M, 1M, and 5S buttons.
2. **Press and hold the CUSTOM button for 2 seconds.** The timer will beep to confirm the setting is saved.
3. Now, whenever you press the **CUSTOM** button, the timer will automatically load this saved time.

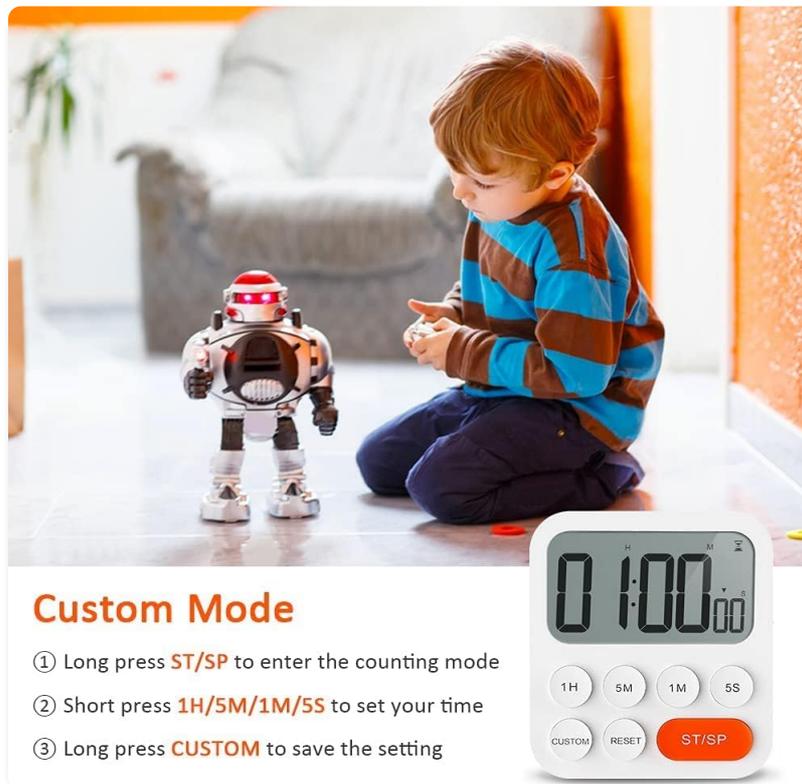


Figure 5: Setting a Custom Time

Adjusting Alarm Volume

The timer offers three alarm volume levels: Mute, Low, and High. A switch on the side of the timer allows you to select your preferred volume.

- Slide the switch to the top for **High** volume.
- Slide the switch to the middle for **Low** volume.
- Slide the switch to the bottom for **Mute**.

When the alarm is set to Mute, the display will flash to indicate the end of the countdown without sound.



Figure 6: Volume Adjustment Switch

Placement Options

The LIORQUE timer offers flexible placement options:

- **Magnetic Back:** Attach the timer to any metal surface, such as a refrigerator or oven door, using its strong magnetic back.
- **Fold-out Stand:** Use the integrated kickstand to place the timer upright on a countertop, desk, or table.
- **Lanyard Hole:** A small hole at the top allows you to hang the timer using a lanyard or hook (lanyard not included).



Figure 7: Multiple Placement Options

Official Product Video

Watch this official video from LIORQUE for a visual guide on the timer's multifunctional features, including battery installation, mode switching, and custom settings.

Your browser does not support the video tag.

Video 1: LIORQUE Kitchen Timer Multifunctional (Duration: 0:44)

MAINTENANCE

To ensure the longevity and optimal performance of your LIORQUE Digital Kitchen Timer:

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse it in water.
- Avoid exposing the timer to extreme temperatures or direct sunlight for prolonged periods.
- If the timer will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Timer not responding to button presses.	Temporary software glitch or low battery.	Remove and reinsert batteries. If issue persists, replace batteries.
Alarm is not sounding.	Volume switch is set to Mute.	Slide the volume switch on the side to Low or High.
Custom setting not saving.	CUSTOM button not held long enough.	Ensure you press and hold the CUSTOM button for at least 2 seconds until a confirmation beep is heard.

SPECIFICATIONS

- **Model:** YGH5249
- **Color:** White
- **Material:** Metal
- **Dimensions:** 1.18 x 3.7 x 3.85 inches
- **Item Weight:** 4.2 ounces
- **Screen Size:** 3.7 Inches
- **Power Source:** 2 x AAA Batteries (included)
- **Volume Settings:** 3 (Mute, Low, High)

WARRANTY AND SUPPORT

LIORQUE products are manufactured with quality and reliability in mind. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official LIORQUE website. Please retain your proof of purchase for warranty purposes.