

[manuals.plus](#) /

› [Bonsenkitchen](#) /

› [Bonsenkitchen HB3203 4-in-1 Immersion Blender User Manual](#)

Bonsenkitchen HB3203

Bonsenkitchen HB3203 4-in-1 Immersion Blender User Manual

Model: HB3203

INTRODUCTION

Thank you for choosing the Bonsenkitchen HB3203 4-in-1 Immersion Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The complete Bonsenkitchen HB3203 4-in-1 Immersion Blender set.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit.
- Blades are sharp. Handle with care.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- Do not use outdoors.

COMPONENTS OVERVIEW

The Bonsenkitchen HB3203 4-in-1 Immersion Blender includes the following components:

- Main Motor Unit (with power and TURBO buttons)
- Stainless Steel Immersion Blending Shaft
- Whisk Attachment
- 500ml Chopper Bowl with Blade and Lid
- 700ml Measuring Cup



Image: Dimensions of the Bonsenkitchen HB3203 components.

SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food. Ensure the appliance is unplugged before assembly or disassembly.

Assembling the Immersion Blender:

1. Align the blending shaft with the motor unit.
2. Twist clockwise until it locks securely into place.
3. To detach, twist counter-clockwise and pull apart.

Assembling the Whisk Attachment:

1. Insert the whisk into the whisk gear box.
2. Align the whisk gear box with the motor unit.
3. Twist clockwise until it locks securely into place.
4. To detach, twist counter-clockwise and pull apart.

Assembling the Chopper:

1. Carefully place the chopper blade onto the center pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Align the motor unit with the chopper lid.
5. Twist clockwise until it locks securely into place.
6. To detach, twist counter-clockwise and pull apart.

OPERATING INSTRUCTIONS

Ensure the appliance is correctly assembled and plugged into a 220V power outlet before operation.

Using the Immersion Blender:

- Submerge the blending shaft into the ingredients.
- Press and hold the **Power** button to start blending.
- Adjust the speed by rotating the dial on top of the motor unit (20 variable speeds).
- For maximum power, press and hold the **TURBO** button.
- Release the button to stop operation.
- Ideal for soups, sauces, smoothies, and baby food.



Blender



Soups



Baby Food



Smoothies



Milkshakes


Image: Immersion blender in use for blending.

Using the Whisk Attachment:

- Attach the whisk to the motor unit as described in the Setup section.
- Place the whisk into the ingredients (e.g., egg whites, cream).
- Press and hold the **Power** button to start whisking.
- Adjust speed as needed.
- Release the button to stop.
- Suitable for whipping cream, beating eggs, and preparing cake batter.



Whisk

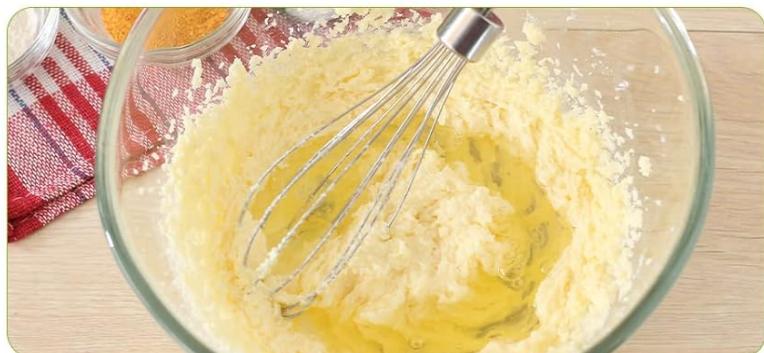

Egg Whites



Whipping Cream



Cake Batter

Image: Whisk attachment in use.

Using the Chopper:

- Assemble the chopper as described in the Setup section.
- Ensure the lid is securely locked onto the chopper bowl and the motor unit is attached.
- Press and hold the **Power** button to start chopping.
- Use short pulses for coarse chopping or hold for finer results.
- Release the button to stop.
- Effective for chopping meat, cheese, onions, carrots, and nuts.



Chopper



Meat



Cheese



Onion



Carrot



Nuts

Image: Chopper attachment in use.

Speed Control and Turbo Function:

The appliance features 20 adjustable speeds, controlled by a rotating dial on the top of the motor unit. The **TURBO** button provides instant maximum power, suitable for tougher ingredients or achieving a very fine consistency quickly.

20 Adjustable Speed & 1000W Powerful Motor

Adjust the speed to finely control crushing & blending effect

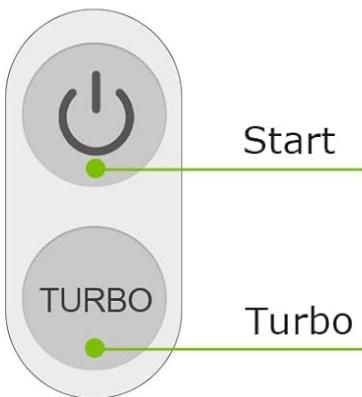


Image: Detail of the 20 adjustable speed dial and 1000W motor.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

- **Always unplug the appliance before cleaning.**
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Blending Shaft, Whisk, Chopper Bowl, Measuring Cup:** These removable accessories can be washed by hand with warm soapy water. Rinse thoroughly and dry immediately.
- **Chopper Blade:** Handle the chopper blade with extreme care as it is very sharp. Wash with warm soapy water and rinse.
- **Dishwasher Safety:** Do not place any parts in the dishwasher. Hand washing is recommended to preserve the

quality and lifespan of the components.

- **Storage:** Store the appliance and its accessories in a dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

If you encounter any issues with your Bonsenkitchen HB3203, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to accessory.	Ensure the appliance is securely plugged into a working outlet. Check that the motor unit is correctly locked onto the desired attachment.
Motor runs, but ingredients are not blending/chopping.	Attachment not properly secured; ingredients too large or too hard; too much liquid/ingredients.	Ensure the blending shaft or chopper blade is correctly attached. Cut ingredients into smaller pieces. Do not overfill the container.
Appliance stops during operation.	Overheating due to prolonged use or processing tough ingredients.	Unplug the appliance and let it cool down for at least 15-20 minutes. Reduce the amount of ingredients or process in smaller batches.
Unusual noise or smell.	Foreign object in blade; motor issue.	Immediately unplug the appliance. Check for any obstructions around the blade. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Bonsenkitchen customer support.

SPECIFICATIONS

Feature	Detail
Brand	Bonsenkitchen
Model Number	HB3203
Color	Black
Product Dimensions (L x W x H)	6.3 x 6.3 x 37 cm
Item Weight	1.24 Kilograms
Capacity (Measuring Cup)	700 Milliliters
Capacity (Chopper Bowl)	500 Milliliters
Power	1000 Watts
Voltage	220 Volts
Material	Stainless Steel
Number of Speeds	20 (Adjustable)

Feature	Detail
Special Features	Multiple attachments, Four blades, Safety lock, Multiple speeds, TURBO function
Components Included	Immersion blender, whisk, 500ml chopper bowl, 700ml measuring cup
Recommended Uses	Blending, Chopping, Whisking
Power Source	Electric Cable


WARRANTY AND SUPPORT

This Bonsenkitchen product comes with 2 years of technical support.

For technical assistance, warranty claims, or any questions regarding your appliance, please contact Bonsenkitchen customer service through your purchase platform or the official Bonsenkitchen website.

© 2025 Bonsenkitchen. All rights reserved.

Related Documents - HB3203

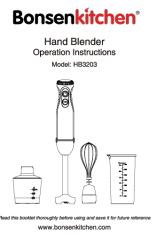
 <p>Bonsenkitchen Hand Blender Operation Instructions Model: HB3203</p> <p>Read this booklet thoroughly before using and save it for future reference. www.bonsenkitchen.com</p>	<p>Bonsenkitchen Hand Blender HB3203 Operation Instructions</p> <p>This document provides comprehensive operation instructions for the Bonsenkitchen Hand Blender, Model HB3203. It covers important safeguards, parts and accessories, technical data, package contents, detailed operating instructions for the blender, egg whisk, and chopper, a recommended use chart, cleaning and maintenance guidelines, troubleshooting tips, warranty claim procedure, and environmental disposal information.</p>
 <p>Bonsenkitchen Hand Blender Operation Instructions Model: HB3203</p> <p>Read this booklet thoroughly before using and save it for future reference. www.bonsenkitchen.com</p>	<p>Bonsenkitchen HB3203 Hand Blender Operation Instructions</p> <p>Detailed operation instructions and safety guidelines for the Bonsenkitchen HB3203 Hand Blender, covering its use for blending, whisking, and chopping, along with maintenance and troubleshooting tips.</p>
 <p>Bonsenkitchen Hand Blender Operation Instructions Model: HB3201</p> <p>Read this booklet thoroughly before using and save it for future reference. www.bonsenkitchen.com</p>	<p>Bonsenkitchen HB3201 Hand Blender Operation Instructions & Guide</p> <p>Comprehensive guide for the Bonsenkitchen HB3201 immersion hand blender, covering safety, operation, cleaning, troubleshooting, and technical specifications.</p>

 <p>Bonsenkitchen Coffee Maker Operation Instructions Model CM8002 www.bonsenkitchen.com</p>	<p><u>Bonsenkitchen CM8002 Coffee Maker Operation Instructions</u></p> <p>Detailed operating instructions for the Bonsenkitchen CM8002 coffee maker, covering setup, brewing with ground coffee or capsules, milk frothing, cleaning, maintenance, and troubleshooting. Includes safety precautions and technical specifications.</p>
 <p>Bonsenkitchen SINGLE-SERVE COFFEE MAKER Operation Manual Model CM3302 Read this booklet thoroughly before using and save it for future reference www.bonsenkitchen.com</p>	<p><u>Bonsenkitchen Single-Serve Coffee Maker CM3302 Operation Manual</u></p> <p>Operation manual for the Bonsenkitchen Single-Serve Coffee Maker, Model CM3302. Includes important safeguards, technical data, package contents, operating instructions, cleaning and maintenance, descaling, troubleshooting, and warranty information.</p>
 <p>Bonsenkitchen SINGLE-SERVE COFFEE MAKER Operation Manual Model CM3401 Read this booklet thoroughly before using and save it for future reference www.bonsenkitchen.com</p>	<p><u>Bonsenkitchen CM3401 Single-Serve Coffee Maker Operation Manual</u></p> <p>Operation manual for the Bonsenkitchen CM3401 single-serve coffee maker, detailing important safeguards, technical data, features, operating instructions for both capsule and ground coffee, cleaning and maintenance, descaling, troubleshooting, warranty, and disposal instructions.</p>

Documents - Bonsenkitchen – HB3203

Bonsenkitchen

Hand Blender
Operation Instructions
Model: HB3203

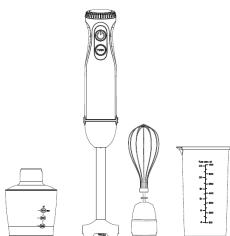

Read this booklet thoroughly before using and save it for future reference
www.bonsenkitchen.com

[\[pdf\] Instructions](#)


BonsenkitchenPage 1 Bonsenkitchen Hand Blender Operation Instructions Model HB3203 500 TURBO floz max ml 24700 600 20 16 400 12 300 8 200 100 ↴ C1h3C8n2kDLm media amazon images I C1h3C8n2kDL |||

...

lang: score:23 filesize: 6.14 M page_count: 39 document date: 2023-04-27

Bonsenkitchen

Hand Blender
Operation Instructions
Model: HB3203

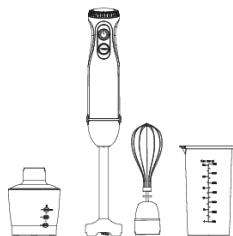

Read this booklet thoroughly before using and save it for future reference
www.bonsenkitchen.com

[\[pdf\]](#) User Manual


HB3203 US 2023 1 11 Bonsenkitchen Stainless Steel Immersion Hand Blender Manual v
1683863349 cdn shopify s files 0364 2012 4808 |||

...

lang: score:21 filesize: 2.41 M page_count: 24 document date: 2023-05-12

Bonsenkitchen

Hand Blender
Operation Instructions
Model: HB3203

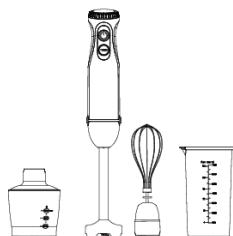

Read this booklet thoroughly before using and save it for future reference
www.bonsenkitchen.com

[\[pdf\]](#) Bonsenkitchen Hand Blender HB3203 Operation Instructions

This document provides comprehensive operation instructions for the Bonsenkitchen Hand Blender, Model HB3203. It covers important safeguards, parts and accessories, technical data, package contents, detailed operating instructions for the blender, egg whisk, and chopper, a recommended use chart, cleaning and maintenance guidelines, troubleshooting tips, warranty claim procedure, and environmental disposal information.

lang: score:21 filesize: 3.67 M page_count: 24 document date: 2022-12-15

Quick cleaning
Between processing tasks, hold the hand blender in the beaker half filled with water and turn on for a few seconds.

	✓	✗	✗
	✓	✗	✗
	✓	✓	✗
	✓	✓	✓
	✓	✓	✓
	✓	✗	✗
	✓	✓	✓
	✓	✗	✗
	✓	✓	✓
	✓	✓	✓

[\[pdf\]](#)

HB3203 2022 12 29 Manuale dell utente Bonsenkitchen Frullatore a Immersione Multifunzione 4 in 1 20 Velocità Regolabili Minipimer con Frusta Tritatutto da 500 ml e Misurino 700 Robot Cucina 1000W Senza BPA Amazon it Casa cucina 91 oCOfNiBL m media amazon images I |||

...

lang: score:16 filesize: 686.89 K page_count: 1 document date: 2022-12-29