

manuals.plus /

- › [Esatto](#) /
- › [Esatto 8kg Front Load Washing Machine EFLW800 User Manual](#)

Esatto EFLW800

Esatto 8kg Front Load Washing Machine

Model: EFLW800

Brand: Esatto

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your Esatto 8kg Front Load Washing Machine, model EFLW800. Please read it thoroughly before installation and first use, and keep it for future reference.



Front view of the Esatto 8kg Front Load Washing Machine, highlighting its compact design and energy/water rating labels. The Esatto EFLW800 is designed to provide precise garment care with its 15 washing programs. It features a user-friendly control panel, a convenient delay start option, and functions like Pre-Wash and Extra Rinse for enhanced cleaning.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the washing machine is properly grounded before use.
- Do not allow children to play with or operate the appliance. The machine is equipped with a child lock function for safety.
- Never force the door open during operation. Wait until the cycle is complete and the door unlocks automatically.
- Do not wash items that have been soiled with flammable substances.
- Unplug the appliance from the power outlet before cleaning or maintenance.
- Ensure all hoses are securely connected to prevent leaks.

3. PRODUCT FEATURES

Your Esatto EFLW800 washing machine comes equipped with several features designed for convenience and effective cleaning:



Detailed view of the washing machine's control panel, showing the program dial and LED display.

- **15 Wash Programs:** A variety of programs to suit different fabric types and soil levels, including Quick 15, Cotton, Delicate, and Jeans.

- **LED Display:** Provides clear information on cycle status, time remaining, and selected options.
- **Pre-Wash Function:** Ideal for heavily soiled clothes, providing an initial wash cycle before the main wash.
- **Extra Rinse Function:** Ensures thorough rinsing, removing detergent residue for sensitive skin or heavily soiled items.
- **24-Hour Delay Start:** Allows you to set the machine to start a cycle at a later time, fitting laundry into your schedule.
- **Child Lock:** Prevents accidental changes to settings or operation by children.
- **1200 rpm Max Spin Speed:** Efficiently removes water from clothes, reducing drying time.

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. The Esatto EFLW800 is designed for freestanding installation.



Rear view of the washing machine, illustrating the water inlet and drain hoses, and power cord connection.



The Esatto EFLW800 washing machine positioned in a typical laundry setting.

4.1 Unpacking

- Carefully remove all packaging materials.
- Remove the transit bolts from the rear of the machine before use. Refer to the diagram on the back of the machine for bolt locations.

4.2 Positioning

- Place the machine on a firm, level surface.
- Adjust the leveling feet at the bottom of the machine to ensure it is stable and does not wobble.
- Ensure there is adequate space around the machine for ventilation and hose connections.

4.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain or sink, ensuring it is not kinked.
- Plug the power cord into a grounded electrical outlet. The machine includes surge protection.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your Esatto EFLW800 washing machine:



The washing machine door open, revealing the stainless steel drum and detergent dispenser.

5.1 Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.
- Close the door firmly until it clicks.

5.2 Adding Detergent and Softener

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- If desired, add fabric softener to the designated compartment.
- Push the dispenser drawer back in completely.

5.3 Program Selection

- Turn the program dial to select one of the 15 available wash programs (e.g., Cotton, Delicate, Quick 15, Jeans). The selected program will be indicated on the LED display.

5.4 Function Options

Press the corresponding buttons on the control panel to activate additional functions:

- **Pre-Wash:** Press the 'Function' button until 'Pre-Wash' is selected for heavily soiled items.
- **Extra Rinse:** Press the 'Function' button until 'Extra Rinse' is selected for additional rinsing.
- **Delay:** Press the 'Delay' button repeatedly to set the desired delay time (up to 24 hours).
- **Child Lock:** Press and hold the 'Function' button for 3 seconds to activate or deactivate the child lock.
- **Speed:** Adjust the spin speed (up to 1200 rpm) if desired.

5.5 Starting the Cycle

- Once the program and options are selected, press the 'Start/Pause' button to begin the wash cycle.
- To pause a cycle, press the 'Start/Pause' button again. Press it once more to resume.

6. MAINTENANCE

Regular maintenance helps ensure the optimal performance and longevity of your washing machine.



Interior view of the washing machine drum, showing the textured surface designed for effective washing.

6.1 Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

6.2 Cleaning the Drum

- Run a maintenance wash cycle (e.g., Cotton 90°C without laundry) with a washing machine cleaner or a small amount of detergent to prevent odors and mold buildup.
- Wipe the drum interior and door seal with a damp cloth after each wash to remove moisture and lint.

6.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the machine.
- Place a shallow container underneath to catch any water.
- Unscrew the filter cover and remove any lint, coins, or foreign objects.
- Clean the filter under running water and reinsert it securely.

6.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common troubleshooting tips before contacting service:

- **Machine does not start:** Check if the power cord is securely plugged in, the door is fully closed, and the 'Start/Pause' button has been pressed. Ensure the child lock is not activated.
- **No water intake:** Check if the water tap is open and the water inlet hose is not kinked. Ensure water pressure is sufficient.
- **Water not draining:** Check if the drain hose is kinked or blocked. Clean the drain pump filter.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts have been removed. Distribute laundry evenly in the drum.
- **Error codes on display:** Refer to the specific error code in the full user manual (if available) or contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Esatto 8kg Front Load Washing Machine EFLW800:

Specification	Value
Brand	Esatto
Model Number	EFLW800
Capacity	8 kg
Dimensions (W x D x H)	59.5 x 660 x 875 cm (Product dimensions: 0.6D x 6.6W x 8.75H metres)
Item Weight	71 kg
Colour	White
Material	ABS
Installation Method	Freestanding

Specification	Value
Display Style	LED
Special Features	Delay Start
Included Components	Surge protection
Manufacturer	Residentia
Date First Available	15 February 2022

9. WARRANTY AND SUPPORT

Your Esatto 8kg Front Load Washing Machine EFLW800 comes with a comprehensive warranty to ensure peace of mind.



9.1 Warranty Information



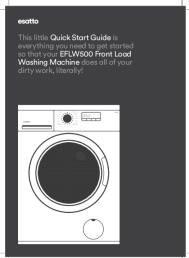

This product is covered by a **2-Year Warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims.

9.2 Manufacturer Information

The Esatto EFLW800 is manufactured by Residentia. For further assistance, technical support, or to inquire about service, please refer to the contact information provided with your purchase documentation or visit the official Esatto website.

Related Documents - EFLW800

	<p>Esatto EFLW800 8kg Front Load Washing Machine Quick Start Guide</p> <p>A concise quick start guide for the Esatto EFLW800 8kg front load washing machine, providing essential information on installation, initial setup, and available washing programs.</p>
	<p>Esatto 8kg Front Load Washing Machine EFLW800 Quick Start Guide</p> <p>Quick start guide for the Esatto 8kg Front Load Washing Machine (Model: EFLW800), covering installation, first use, and washing programs.</p>

	<p>Esatto EFLW500 & EFLW600 Front Load Washing Machine User Manual</p> <p>Comprehensive user manual for Esatto EFLW500 and EFLW600 front-load washing machines, covering installation, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Esatto EFLW10W 10kg Front Load Washing Machine User Manual</p> <p>Comprehensive user manual for the Esatto EFLW10W 10kg Front Load Washing Machine, covering installation, operation, cleaning, maintenance, troubleshooting, technical specifications, and warranty information.</p>
	<p>Esatto EFLW500 Front Load Washing Machine Quick Start Guide</p> <p>Get started quickly with your Esatto EFLW500 Front Load Washing Machine. This guide covers installation, first use, and washing programs for efficient laundry care.</p>
	<p>Esatto Washing Machine User Manual: EFLW500, EFLW600</p> <p>Comprehensive user manual for Esatto 5kg and 6kg front load washing machines (models EFLW500, EFLW600). Includes safety instructions, installation guide, operating procedures, maintenance tips, troubleshooting, technical specifications, and warranty information.</p>