

Manuals.plus /

› Vestel /

› Vestel Sade G910 Turkish Coffee Machine User Manual

Vestel G910

Vestel Sade G910 Turkish Coffee Machine User Manual

Model: G910

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Vestel Sade G910 Turkish Coffee Machine. Retain this manual for future reference.

- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with hot surfaces. Use handles or knobs.
- Always unplug the appliance from the power outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not use accessories not recommended by the manufacturer.
- This appliance is intended for household use only. Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

2. PRODUCT OVERVIEW

The Vestel Sade G910 is an automatic Turkish coffee machine designed for ease of use and consistent results. It features a compact design and intuitive controls for preparing authentic Turkish coffee.



This image shows the Vestel Sade G910 Turkish Coffee Machine from a front-side angle, highlighting its gold and black color scheme and the main coffee pot area.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Coffee Pot (Cezve):** Removable pot for brewing and serving coffee.
- **Water Tank:** Transparent reservoir for water.
- **Control Panel:** Buttons for selecting cup size and starting the brewing process.
- **Power Switch:** Located on the side of the unit.

3. SETUP

3.1 Unpacking

1. Carefully remove all packaging materials from the coffee machine.
2. Check for any damage during transit. If damaged, do not operate and contact customer support.
3. Ensure all components listed in the Product Overview section are present.

3.2 Initial Cleaning

Before first use, clean all removable parts that will come into contact with coffee or water.

- Wash the coffee pot with warm soapy water, then rinse thoroughly and dry.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.



This image displays the Vestel Sade G910 Turkish Coffee Machine with its removable coffee pot placed separately, illustrating the components for cleaning and setup.

3.3 Placement

- Place the coffee machine on a stable, flat, heat-resistant surface.
- Ensure there is adequate ventilation around the appliance.
- Keep away from water sources and direct heat.

3.4 Filling the Water Tank

- Open the lid of the water tank.
- Fill the water tank with fresh, cold drinking water up to the maximum fill line indicated. Do not overfill.
- Close the water tank lid securely.

4. OPERATING INSTRUCTIONS

Follow these steps to brew Turkish coffee with your Vestel Sade G910.



This image focuses on the control panel of the Vestel Sade G910, showing the various cup selection buttons and the power indicator light.

1. **Power On:** Ensure the machine is plugged into a suitable power outlet and turn on the main power switch located on the side of the unit. The power indicator light should illuminate.
2. **Add Coffee:** Place the coffee pot onto its base. Add the desired amount of finely ground Turkish coffee into the coffee pot. A general guideline is one full teaspoon per cup.
3. **Add Water:** Use a measuring cup to add the appropriate amount of cold water to the coffee pot based on the number of cups you wish to brew. The machine will draw water from the main tank, but adding it directly to the pot ensures correct measurement for Turkish coffee.
4. **Add Sugar (Optional):** If desired, add sugar to the coffee pot along with the coffee and water. Stir gently to combine.
5. **Select Cup Size:** On the control panel, press the button corresponding to the number of cups you are brewing (e.g., 1 cup, 2 cups, 3 cups, 4 cups).
6. **Start Brewing:** The machine will automatically begin the brewing process. The indicator light for the selected cup size may flash or change color.
7. **Monitor Brewing:** The machine will brew the coffee until it reaches the optimal temperature and foam level. Do not remove the coffee pot during brewing.
8. **Serving:** Once brewing is complete, the machine will emit an audible signal and/or the indicator light will change. Carefully remove the coffee pot by its handle and pour the coffee into small Turkish coffee cups.
9. **Power Off:** After use, turn off the main power switch and unplug the appliance.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee machine.

5.1 Daily Cleaning

- Always unplug the machine and allow it to cool completely before cleaning.
- Remove the coffee pot and wash it with warm soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Empty and rinse the water tank.

5.2 Descaling

Over time, mineral deposits (limescale) can build up in the machine, affecting performance. Descale your machine regularly, depending on water hardness and frequency of use.

- Use a commercial descaling solution suitable for coffee machines, following the manufacturer's instructions.
- Alternatively, you can use a mixture of white vinegar and water (e.g., 1 part vinegar to 2 parts water).
- Pour the descaling solution into the water tank.
- Run a brewing cycle without coffee.
- After the cycle, discard the solution and rinse the coffee pot thoroughly.
- Run 2-3 cycles with fresh water to remove any residual descaling solution.

6. TROUBLESHOOTING

If you encounter issues with your Vestel Sade G910, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Power switch off; No power at outlet.	Ensure plug is securely in outlet; Turn on power switch; Check household fuse/circuit breaker.
Coffee is not brewing.	Water tank empty; Coffee pot not correctly placed; Brewing cycle not initiated.	Fill water tank; Ensure coffee pot is securely on its base; Press the desired cup size button.
Coffee overflows.	Too much coffee/water in the pot; Machine needs descaling.	Reduce amount of coffee/water; Perform a descaling cycle.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio.	Adjust the amount of coffee or water to your preference.

7. SPECIFICATIONS

- **Brand:** Vestel
- **Model:** Sade G910

- **Product Type:** Automatic Turkish Coffee Machine
- **Key Feature:** Portable
- **Recommended Use:** Coffee Making
- **Quantity:** 1 unit
- **Color:** Gold (as per product description)
- **Power:** (Specific wattage not provided, refer to product label)
- **Capacity:** (Specific cup capacity not provided, refer to product label or cup selection buttons)

8. WARRANTY AND SUPPORT

Your Vestel Sade G910 Turkish Coffee Machine comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms and conditions, including the warranty period and coverage.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Vestel Customer Support. Contact details can typically be found on the Vestel official website or on your product's packaging.

When contacting support, please have your product model number (G910) and purchase date available.