

Soundmaster SCD7800SW

Instruction Manual

SCD7800SW BOOMBOX DAB+ CD MP3 CASSETTE RECORDER WITH USB ALARM CLOCK FUNCTION AUDIO BOOK FUNCTION

Model: SCD7800SW

1. INTRODUCTION

Thank you for purchasing the Soundmaster SCD7800SW Boombox. This versatile audio system combines modern digital radio (DAB+) with traditional FM radio, a CD player, MP3 playback via USB, and a classic cassette recorder. It also features an alarm clock and a convenient audio book function. Please read this manual carefully before operating the unit to ensure proper use and to maximize its performance.



Figure 1: Soundmaster SCD7800SW Boombox

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as vases, on the appliance.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Soundmaster SCD7800SW Boombox
 - Mains Adapter
 - Instruction Manual
-

4. PRODUCT FEATURES

- DAB+ and FM PLL radio with 30 presets each
 - CD, CD-R/RW, CD-MP3 playback
 - CD repeat function
 - CD shuffle function (random function)
 - Cassette recorder for playback and recording
 - USB port for MP3 playback and recording from radio/USB to cassette
 - Audio Book Function (RESUME) for CD playback
 - Dot matrix LCD display
 - Headphone jack
 - 2 adjustable alarm times with wake-up options (CD, radio, USB, signal tone)
 - Snooze function
 - Mains or battery operated (batteries not included)
-

5. CONTROLS AND CONNECTIONS

Front and Top Panel Overview



Figure 2: Front and Top Panel

- **SCAN/MODE Button:** Switches between DAB+, FM, CD, USB, and Cassette modes. Initiates station scan in radio mode.
- **POWER Button:** Turns the unit on/off.
- **PRE +/- Buttons:** Navigates through preset radio stations.
- **PLAY/PAUSE Button:** Controls playback for CD, USB, and Cassette.
- **STOP Button:** Stops playback.
- **SKIP/SEARCH Buttons:** Skips tracks/files or fast forwards/rewinds.
- **VOL +/- / AL1 / AL2 Buttons:** Adjusts volume. Press and hold to set Alarm 1 or Alarm 2.
- **INFO/SNOOZE Button:** Displays additional information in radio mode. Activates snooze during alarm.
- **CLOCK/ENT Button:** Sets clock and confirms selections.
- **MENU Button:** Accesses menu options.
- **LCD Display:** Shows current mode, track information, radio station, time, etc.
- **CD Compartment:** For inserting CDs.
- **Cassette Compartment:** For inserting audio cassettes.

Rear Panel Overview



Figure 3: Rear Panel

- **AC Power Input (AC: 230V~50Hz):** Connects the included mains adapter.
- **USB Port:** For connecting USB flash drives for MP3 playback or recording.
- **Headphone Jack:** For connecting headphones (3.5mm).
- **Telescopic Antenna:** Extend for optimal radio reception.

6. SETUP

Power Connection

The SCD7800SW can be powered by the included mains adapter or by batteries.

- **Mains Operation:** Connect the mains adapter to the AC power input on the rear of the unit and plug the other end into a standard wall outlet (AC 230V~50Hz).
- **Battery Operation:** Open the battery compartment on the bottom of the unit. Insert 6 x UM-2/C 1.5V batteries (not included), ensuring correct polarity. Close the compartment securely.

Antenna

For optimal radio reception, fully extend the telescopic antenna located on the rear of the unit. Adjust its position for the best signal quality.

7. OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Press the POWER button to turn the unit on or off.
- **Mode Selection:** Press the SCAN/MODE button repeatedly to cycle through DAB+, FM, CD, USB, and

Cassette modes.

- **Volume Adjustment:** Use the VOL +/- buttons to adjust the listening volume.

DAB+ Radio Operation

1. Switch to DAB+ mode using the SCAN/MODE button.
2. The unit will automatically scan for available DAB+ stations on first use. To initiate a manual scan, press and hold the SCAN/MODE button.
3. Use the SKIP/SEARCH buttons to navigate through the list of available stations.
4. To save a station as a preset, press and hold the PRE +/- button until the display shows a preset number. Use SKIP/SEARCH to select the desired preset number, then press CLOCK/ENT to confirm.
5. To recall a preset, briefly press the PRE +/- button.
6. Press INFO/SNOOZE to cycle through station information (e.g., program type, signal strength).

FM Radio Operation

1. Switch to FM mode using the SCAN/MODE button.
2. To auto-scan and save stations, press and hold the SCAN/MODE button. The unit will scan and save strong stations automatically.
3. To manually tune, briefly press the SKIP/SEARCH buttons to fine-tune the frequency. Press and hold SKIP/SEARCH to auto-scan to the next strong station.
4. Saving and recalling presets works the same as in DAB+ mode.

CD/MP3 Playback

1. Open the CD compartment and insert a CD with the label side facing up. Close the compartment.
2. Switch to CD mode using the SCAN/MODE button. The unit will read the disc.
3. Press PLAY/PAUSE to start or pause playback.
4. Press STOP to stop playback.
5. Use the SKIP/SEARCH buttons to skip to the next/previous track. Press and hold to fast forward/rewind within a track.
6. **Repeat Function:** Press the REPEAT button (if available, or cycle through menu options) to repeat the current track, all tracks, or a specific folder (for MP3 CDs).
7. **Shuffle Function:** Press the SHUFFLE button (if available, or cycle through menu options) to play tracks in a random order.

Cassette Recording/Playback

1. Open the cassette compartment and insert a cassette.
2. Switch to Cassette mode using the SCAN/MODE button.
3. **Playback:** Press the PLAY button on the cassette deck controls to start playback.
4. **Recording:** To record from radio or USB, first select the desired source (DAB+, FM, or USB). Insert a blank cassette. Press the RECORD button on the cassette deck. The unit will begin recording the audio from the selected source. Press STOP to end recording.

USB Playback

1. Insert a USB flash drive containing MP3 files into the USB port on the rear.
2. Switch to USB mode using the SCAN/MODE button. The unit will read the files.
3. Playback controls (PLAY/PAUSE, STOP, SKIP/SEARCH) function similarly to CD playback.

Alarm Clock Function

1. Ensure the clock is set correctly. Press and hold CLOCK/ENT to enter clock setting mode. Use SKIP/SEARCH to adjust time and CLOCK/ENT to confirm.
2. To set Alarm 1 or Alarm 2, press and hold VOL +/- / AL1 / AL2 until the alarm setting appears.
3. Use SKIP/SEARCH to set the alarm time and CLOCK/ENT to confirm.
4. Select the alarm source (CD, Radio, USB, or Signal Tone) using SKIP/SEARCH and confirm with CLOCK/ENT.
5. To activate/deactivate an alarm, briefly press the corresponding AL1 or AL2 button. An alarm icon will appear on the display when active.
6. When the alarm sounds, press INFO/SNOOZE to activate snooze (alarm will sound again after a few minutes) or press POWER to turn off the alarm.

Audio Book Function (RESUME)

The Audio Book Function (RESUME) allows the CD player to automatically resume playback from the last stopped position. This feature must be activated in the system settings or by a specific button if available. Consult the on-screen menu or specific button functions for activation. Once activated, the CD will always start from where it was last stopped, even after powering off the unit.

8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. For stubborn stains, a slightly damp cloth may be used, followed by a dry cloth. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** Do not touch the CD lens. If the lens is dirty, use a commercially available CD lens cleaner.
- **Cassette Head Cleaning:** Periodically clean the cassette heads and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol to ensure optimal sound quality and prevent tape damage.
- **Storage:** When not in use for extended periods, disconnect the power adapter and remove batteries. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Ensure power cord is securely plugged in. Replace batteries or check polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume. Disconnect headphones. Select correct source mode (CD, Radio, USB, Cassette).

Problem	Possible Cause	Solution
Poor radio reception	Antenna not extended or positioned correctly; Weak signal area.	Fully extend and adjust the telescopic antenna. Try moving the unit to a different location.
CD/USB not playing	Disc/USB inserted incorrectly; Disc/USB dirty or damaged; Incompatible file format.	Reinsert disc/USB correctly. Clean disc/USB. Ensure files are MP3 format. Try another disc/USB.
Cassette playback/recording issues	Cassette inserted incorrectly; Tape tangled or damaged; Dirty cassette heads.	Reinsert cassette correctly. Use a different cassette. Clean cassette heads.

10. SPECIFICATIONS

Feature	Specification
Product Dimensions (L x W x H)	14.96 x 4.33 x 3.94 inches (38 x 11 x 10 cm)
Item Weight	3.96 pounds (1.8 kg)
Power Source	AC 230V~50Hz or DC 9V (6 x UM-2/C 1.5V batteries)
Connectivity Technology	USB
Speaker Type	Stereo
Model Number	SCD7800SW

11. WARRANTY AND SUPPORT

Soundmaster products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and technical support, please refer to the warranty card included with your product or visit the official Soundmaster website. Keep your purchase receipt as proof of purchase for any warranty claims.



© 2023 Soundmaster. All rights reserved.

EU - Konformitätserklärung (DOC)

Der Unterzeichner

WÖRLEIN GMBH
GEWERBESTRASSE 12
D-90556 Cadolzburg

erklärt hiermit in alleiniger Verantwortung, dass das Produkt

Produkt: soundmaster SCD7800SW / SCD7800BL / SCD7800GR
DAB+ Boombox mit CD/MP3, USB und Kassettenspieler

in Übereinstimmung ist mit den Bestimmungen der nachstehenden EG-Richtlinien
(jeweils einschließlich aller zutreffenden Änderungen)

Referenz-Nr.	Titel
2014/53/EU	RED Richtlinie
2009/125/EC	Ökodesignrichtlinie
2011/65/EU & 2015/863/EU	RoHS Richtlinie

und dass folgende Normen und/oder technische Spezifikationen zur Anwendung gelangt sind:

Nr.	Artikel	Standard
1.	3.1(a)	EN 62368-1:2014+A11:2017 EN 62479:2010
2.	3.1(b)	EN 55032:2015+A11:2020 EN 55035:2017+A11:2020
3.	3.1(b)	EN 61000-3-2:2019 EN 61000-3-3:2013+A1:2019
4.	3.2	EN 303 345-1 V1.1.1
5.	ErP	Verordnung 1275/2008
6.	RoHS	EN 50581:2012

Das Prüflabor Dongguan NTEK Testing Service Co., Ltd. hat mit dem Zertifikat DCEP19421008R die EU - Konformität bestätigt

Cadolzburg, den 26.08.2021

WÖRLEIN GMBH
Gezeichnet: 12
D-90556 Cadolzburg
Tel 09103-7167-0
Fax 09103-7167-12
Ralf Wörlein - Geschäftsführer

[pdf]

Untitled Bekijk de CE marking Soundmaster SCD7800SW Boombox met DAB FM radio CD MP3 USB en cassettespeler zwart bol original media s RkAVOXW4QE5q |||

EU - Konformitätserklärung DOG Der Unterzeichner RLEIN GMBH

GEWERBESTRASSE 12 D-90556 Cadolzburg erklärt hiermit in alleiniger Verantwortung, dass das Produkt Produkt: soundmaster **SCD7800SW** / SCD7800BL / SCD7 GR DAB Boombox mit CD/MP3, USB und Kasse in bereinstimmung ist mit den Bestimmungen der ...

lang:de score:30 filesize: 57.68 K page_count: 1 document date: 2022-05-19

[pdf] Datasheet

SCD7800SW PR DE soundmaster de media woerlein Datasheets |||

SCD7800SW DAB Boombox mit CD/MP3, USB und Kassettenspieler

Technische Daten: DAB /UKW-RDS Radio CD, CD-R, CD-RW, CD-MP3 USB-Anschluss Kassettenspieler Hrbuchfunktion 60 Festsenderspeicher 30 DAB 30 UKW CD / USB Abspielfunktionen Multifunktions Dot Matrix LCD Display 2 Weckzeiten ...

lang:i-klingon score:27 filesize: 10.58 M page_count: 1 document date: 2022-02-23



[pdf] Datasheet

SCD7800SW PR EN soundmaster de media woerlein Datasheets |||

SCD7800SW DAB Boombox with CD/MP3, USB and Cassette Playback Technical

Features: DAB /FM-RDS Radio CD, CD-R, CD-RW, CD-MP3 USB Jack Cassette Playback Resume 60 Preset Stations 30 DAB 30 FM CD / USB Playback Functions Dot Matrix LCD Display Dual Alarm Wake-Up Function with CD, USB, Rad...

lang:i-klingon score:27 filesize: 10.58 M page_count: 1 document date: 2022-05-09





[pdf]

soundmaster SCD 5700 Datenblatt SCD7800SW V2 niwotron ch media shop document |||

SCD7800SW CD/MP3 Boombox mit DAB /UKW Radio, Kassettenspieler, USB

Technische Daten: DAB /UKW-RDS Radio CD, CD-R/RW, CD-MP3

Kassettenwiedergabe USB-MP3 Wiedergabe Hrbuchfunktion Je 30

Festsenderspeicher CD/USB Wiederhol-/Zufall-/Programmierungfunktion Dot Matrix LCD

Anzeige 2 Weckzeiten Wecke...

lang:de score:26 filesize: 140.97 K page_count: 1 document date: 2023-11-14



[pdf]

Microsoft Word Leaflet Soundmaster SCD7800BL Boombox met DAB CD MP3 USB en Cassettespeler

Willem Gizmo Retail 8 mag 2022 — Altijd overal uw favoriete muziek bij de hand deze portable boombox

van Dankzij radiofunctie kunt u altijd leaflet soundmaster scd7800bl dab cd mp3 usb cassettespeler

gizmo retail nl pub media product l e |||

SCD7800BL Boombox met DAB /FM-radio, CD, MP3, USB en cassettespeler, blauw

Altijd en overal uw favo ... ndmaster apparaat waar u vele mogelijkheden tot muziek

luisteren mee heeft. Ook leverbaar in zwart **SCD7800SW** en groen SCD7800GR .

Specificaties: DAB en FM-RDS radio 60 voorkeuzezenders 30 DAB, ...

lang:nl score:24 filesize: 154.4 K page_count: 1 document date: 2022-03-29

EU - Konformitätserklärung (DOC)

Der Unterzeichner

WÖRLEIN GMBH
GEWERBESTRASSE 12
D-90556 Cadolzburg

erklärt hiermit in alleiniger Verantwortung, dass das Produkt

Produkt: soundmaster SCD7800SW / SCD7800BL / SCD7800GR
DAB+ Boombox mit CD/MP3, USB und Kassettenspieler

In Übereinstimmung ist mit den Bestimmungen der nachstehenden EG-Richtlinie(n)
(einschließlich aller zutreffenden Änderungen)

Referenz-Nr.	Titel
2014/53/EU	RED Richtlinie
2006/125/EG	Chemikalienrichtlinie
2011/65/EU & 2015/863/EU	RoHS Richtlinie

und dass folgende Normen und/oder technische Spezifikationen zur Anwendung
gelangt sind:

Nr.	Artikel	Standard
1.	3.1(a)	EN 62368-1:2014+A11:2017 EN 62479:2010
2.	3.1(b)	EN 60332-2:2015+A11:2020 EN 55035:2017+A11:2020
3.	3.1(b)	EN 61000-3-2:2019 EN 61000-3-3:2015+A1:2019
4.	3.2	EN 303 345-1 V1.1.1
5.	ErP	Verordnung 1275/2008
6.	RoHS	EN 50581:2012

Das Prüflabor Dongguan NTEK Testing Service Co., Ltd. hat mit dem Zertifikat
DGE215427099R die EU - Konformität bestätigt:

Cadlzburg, den 26.08.2021

WÖRLEIN GMBH
Gewerbestrasse 12
D-90556 Cadolzburg
Tel 09103-7167-0
Fax 09103-7167-12
Rat Wörlin – Geschäftsführer

[pdf]

Konformitätserklärung 2464646 soundmaster SCD7800BL Kassettenspieler DAB UKW AUX CD Kassette

USB Weckfunktion Blau Conrad e B2B on line SLO Trgovina za podjetja! konformitaetserklaerung

scd7800bl kassettenspieler dab ukw aux cd kassette usb weckfunktion blau asset conrad media10 add

160267 c1 de 002464644CC00 |||

EU - Konformitätserklärung DOG Der Unterzeichner RLEIN GMBH

GEWERBESTRASSE 12 D-90556 Cadolzburg erklärt hiermit in alleiniger Verantwortung,

dass das Produkt Produkt: soundmaster **SCD7800SW** / SCD7800BL / SCD7 GR DAB

Boombox mit CD/MPS, USB und Kasse in bereinstimmung ist mit den Bestimmungen

der ...

lang:de score:22 filesize: 317.22 K page_count: 1 document date: 2021-08-27



[pdf]

LOCATION OF CONTROLS docId 60714B1769DDCDCAA051E0C0FDBE466F alina Upute za rukovanje 2464644 soundmaster SCD7800SW radio s kasetofonom DAB 1012 UKW 1014 AUX CD kaseta USB funkcija alarma crna AC group webshop upute scd7800sw dab ukw aux cd usb pd asset conrad media10 add 160267 c1 sl 002464644ML01 |||

Slovenska navodila za uporabo soundmaster **SCD7800SW** Proizvajalec Wrlein GmbH Gewerbestrasse 12 D 90556 Cadolzburg NEMCIJA Telefon: 49 9103/71670 Faks: 49 9103/716712 E-naslov. info soundmaster.de Splet: www.soundmaster.de SCD7800 OPOMBA O VARSTVU OKOLJA Po koncu zivljenjske dobe tega izdelka ... lang:hr score:22 filesize: 336.43 K page_count: 14 document date: 2024-07-15



[pdf]

LOCATION OF CONTROLS alina Bedienungsanleitung BDA SCD7800SW 21449 DAB Boombox mit CD MP3 USB und Kassettenwiedergabe soundmaster® soundmaster de media woerlein Manuals ||| DEUTSCH ENGLISH FRANCAIS NEDERLANDS ITALIANO CESTINA SLOVENSK Hersteller Wrlein GmbH Gewerbestrasse 12 D 90556 Cadolzburg GERMANY Tel.: 49 9103/71670 Fax.: 49 9103/716712 Email. info soundmaster.de Web: www.soundmaster.de SCD7800 Sicherheits- / Umwelt- / Aufstellhinweise HINWEIS ZUM UMWELTSC...

lang:de score:20 filesize: 2.81 M page_count: 82 document date: 2021-08-16

EU - Konformitäts- erklärung	CE	EU - Declaration of Conformity
Der Unterzeichner WÖRLEIN GMBH GEWERBESTRASSE 12 D-90556 Cadolzburg		The manufacturer declares under the sole responsibility that the product:
erklärt hiermit in alleiniger Verantwortung, dass das Produkt soundmaster - SCD7800SW; SCD7800BL; SCD7800DR DAB Boombox mit CD/MP3 DAB Boombox with CD/MP3		is in conformity with relevant statutory EU requirements below.
in Übereinstimmung mit den Bestimmungen der nachstehenden EU- Richtlinien (entsprechlich aller zuerstenden Änderungen) ist.		RED Richtlinie / RED Directive 2009/125/EC 2011/65/EU & 2015/863/EU RoHS Richtlinie / RoHS Directive
und dass folgende Normen und/oder technische Spezifikationen zur Anwendung gelangt sind.		References to the relevant designated standards or references to the technical specifications in relation to which conformity is declared.
3.1(a) EN 62368-1:2014 +A11:2017		EN 62368-1:2017
3.1(b) EN 55032:2015 +A11:2020		EN 55032:2017 +A11:2020
3.1(b) EN 55035:2012 +A1:2019		EN 55035:2012 +A1:2019
3.2 EN 300 345-1 V1.1.1		EN 300 345-1 V1.1.1
3.2 EN 300 345-4 V1.1.0		EN 300 345-4 V1.1.0
EMV EN 55014:2015		EN 55014:2015
Das Prüflabor		The testing company
Georgsmühlener Prüf- und Messservice GmbH, 146		Georgsmühlener Prüf- und Messservice GmbH, 146
hat das ZERTIFIKAT OF RED COMPLIANCE mit der Referenznummer 000210421000R am 11. Mai 2021 ausgestellt.		has issued the CERTIFICATE OF RED COMPLIANCE with the certificate 000210421000R on May 11, 2021.

[pdf] Specifications Declaration of Conformity

CE SCD7800SW 21448 Prohlášení o shodě 529 58 KB Radiomagnetofon s DAB CD Soundmaster černý KASA cz doc 5520386 kasa document 6 8 3 |||

EU - Konformitätserklärung EU - Declaration of Conformity Der Unterzeichner The manufacturer wRLEIN GMBH GEWERBESTRASSE 12 D-90556 cadolzburg erklärt hiermit in alleiniger Verantwortung, dass das Produkt: declare under the sole responsibility that the product: soundmaster - SCD78 SW; SCD7800BL; ...

lang:en score:18 filesize: 529.58 K page_count: 1 document date: 2022-12-12

Cadolog, den 20.08.2021
WÖRLEIN GMBH
Gewerbestrasse 12
D-90556 Cadolzburg
Tel: 09103-7167-0
Fax: 09103-7167-10
Ralf Wörlein - Geschäftsführer



[\[pdf\]](#) Declaration of Conformity

soundmaster 2024 niwotron ch index cfm action act getfile doc id 102184 |||

electronic 2024/25 Nachhaltigkeit sustainability Nachhaltig und verantwortungsvoll zu arbeiten, ... RMS Mains operation AC 230 V - 50 Hz Battery operation DC 9 V, 6 x LR14/C batteries not incl. **SCD7800SW** SCD7800RO SCD7800WE Tel. 49 0 91 03 - 71 67-0 31 Tragbare Audio- / Videogeräte Port...

lang:en score:18 filesize: 16.97 M page_count: 68 document date: 2024-09-12



[\[pdf\]](#) Declaration of Conformity

soundmaster 2023 niwotron ch index cfm action act getfile doc id 102006 |||

electronic 2023/24 Nachhaltigkeit sustainability Nachhaltig und verantwortungsvoll zu arbeiten, ... RMS Mains operation AC 230 V - 50 Hz Battery operation DC 9 V, 6 x LR14/C batteries not incl. **SCD7800SW** SCD7800BL SCD7800GR SCD7800 CD/MP3 Boombox mit DAB /UKW Radio, Kassettenspieler, USB C...

lang:en score:18 filesize: 13.99 M page_count: 64 document date: 2023-02-10



[\[pdf\]](#) Declaration of Conformity

soundmaster 2021 niwotron ch index cfm action act getfile doc id 101817 |||

electronic 2021/22 Nachhaltigkeit sustainability Nachhaltig und verantwortungsvoll zu arbeiten, ... ne Jack Aux In Jack Output Power 2 x 2W RMS AC230V-50Hz DC9V, 6 x UM-2 / C 1.5V not included **SCD7800SW** DAB Boombox mit CD/MP3, USB und Kassettenspieler DAB Boombox with CD/MP3, USB und Ca...

lang:en score:17 filesize: 15.12 M page_count: 60 document date: 2021-04-12



[pdf] Borchure Catalog

hier Merken Gizmo Retail Soundmaster catalogus 2021 2022 gizmo retail nl media wysiwyg Brochures ||| electronic 2021/22 Nachhaltigkeit sustainability Nachhaltig und verantwortungsvoll zu arbeiten, ... ne Jack Aux In Jack Output Power 2 x 2W RMS AC230V-50Hz DC9V, 6 x UM-2 / C 1.5V not included **SCD7800SW** DAB Boombox mit CD/MP3, USB und Kassettenwiedergabe DAB Boombox with CD/MP3, USB und Ca...
lang:en score:17 filesize: 11.48 M page_count: 60 document date: 2021-06-28



[pdf] Catalog

Unser Neuheiten Katalog 2023 24 als Download Blogbereich links Blog soundmaster® Kat2023 HQ woerlein org Catalogues ||| electronic 2023/24 Nachhaltigkeit sustainability Nachhaltig und verantwortungsvoll zu arbeiten, ... RMS Mains operation AC 230 V - 50 Hz Battery operation DC 9 V, 6 x LR14/C batteries not incl. **SCD7800SW** SCD7800BL SCD7800GR SCD7800 CD/MP3 Boombox mit DAB /UKW Radio, Kassettenspieler, USB C...
lang:en score:17 filesize: 61.1 M page_count: 64 document date: 2023-02-09



[pdf]

Produktdatenblatt Soundmaster SCD7800 DAB Boombox mit CD MP3 USB und Kassettenwiedergabe Fritz Berger Campingbedarf 638527 500 360860 fbr etailercdn de media org orgb W orgid 800 ||| **SCD7800SW** DAB Boombox mit CD/MP3, USB und Kassettenwiedergabe Technische Daten: DAB /UKW-RDS Radio CD, CD-R, CD-RW, CD-MP3 USB-Anschluss Kassettenwiedergabe Hrbuchfunktion 60 Festsenderspeicher 30 DAB 30 UKW CD / USB Abspielfunktionen Multifunktions Dot Matrix LCD Display 2 Weckzeiten ...
lang:i-klngon score:16 filesize: 10.58 M page_count: 1 document date: 2022-05-09

