

[manuals.plus](#) /

› [HOTT](#) /

› [HOTT CD711 Portable CD Player User Manual](#)

## HOTT CD711

# HOTT CD711 Portable CD Player User Manual

Model: CD711

## 1. PRODUCT OVERVIEW

The HOTT CD711 is a versatile portable CD player designed for high-quality audio playback on the go, at home, or in your car. It features a rechargeable battery, robust anti-shock protection, and broad compatibility with various disc formats.

### Key Features:

- Rechargeable Battery:** Built-in 1000mAh Li-ion battery provides up to 7 hours of playback on a 3-hour charge.
- In-Car Connectivity:** AUX-output allows easy connection to car audio systems.
- Anti-Shock Protection (ASP):** Ensures stable audio playback with up to 45 seconds for CD and 120 seconds for MP3 discs.
- Broad Compatibility:** Supports CD, MP3, CD-RW, CD-R, and WMA formats.
- Sound Effects:** Includes BBS, Pop, Jazz, Rock, and Classic sound modes.
- Resume Function:** Memorizes the last playback track.



Image: The HOTT CD711 Portable CD Player, shown with included headphones, a 3.5mm AUX cable, and a USB charging cable. The player is black with a bronze-colored edge and features a central control panel with an LCD display.

## 2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- HOTT CD711 Portable CD Player x 1
- USB Charging Cable x 1
- Earphones x 1
- 3.5mm AUX Cable x 1
- User Manual x 1



CD Player x1 •

Charging Cable x1 •

Earphone x1 •

3.5mm AUX Cable x1 •

User Manual x1 •

## Accessories

Image: Contents of the HOTT CD711 package, including the CD player, an orange box, a user manual, earphones, a USB charging cable, and a 3.5mm AUX cable.

### 3. DEVICE LAYOUT AND CONTROLS



Support 3.5mm AUX cable connect to speaker

## Stable Connectivity

Image: Detailed view of the HOTT CD711 Portable CD Player's front panel and side controls. Key features are numbered and described.

1. **LCD Display:** Shows track number, time, and playback mode.
2. **DIR Button:** Selects the next album (for MP3 format only).
3. **ASP Button:** Toggles the Anti-Shock Protection system on/off.
4. **Previous/Rewind Button:** Short press twice to select the previous track. Long press to fast backward.
5. **Next/Fast Forward Button:** Short press to select the next track. Long press to fast forward.
6. **Power On/Play/Pause Button:** Powers the device on, plays, or pauses playback.
7. **Stop/Shut Down Button:** Stops playback and powers the device off.
8. **Sound Effect Button:** Selects different sound effects (BBS, Pop, Jazz, Rock, Classic).
9. **Play Mode Button:** Selects playback modes (Sequential, Shuffle, Single Track Repeat, Repeat All, Scan).
10. **HOLD/UNHOLD Switch:** Locks all buttons to prevent accidental presses. Set to UNHOLD to unlock.
11. **VOL Adjust:** Adjusts the volume.
12. **PHONES Earphone Jack:** 3.5mm output for headphones.
13. **DC IN 4.5V-5V Power Supply Input:** USB-C port for charging and power.

## 4. SETUP AND CHARGING

### 4.1 Charging the Battery

The HOTT CD711 comes with a built-in 1000mAh rechargeable Li-ion battery. Before first use, fully charge the device.

- Connect the provided USB charging cable to the DC IN 4.5V-5V port on the CD player.
- Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer USB port.
- A full charge takes approximately 3 hours and provides up to 7 hours of playback at medium volume.



Image: Diagram illustrating the rechargeable battery features of the HOTT CD711, including 3-3.5 hours charging time, 10 hours playing time, USB charging, and 1000mAh battery capacity.

### 4.2 Connecting to Car Audio

To use the CD player in your car, connect it via the 3.5mm AUX output:

- Locate the 3.5mm AUX jack on your car's audio system.
- Connect one end of the provided 3.5mm AUX cable to the PHONES earphone jack on the CD player.

- Connect the other end of the AUX cable to your car's AUX input.
- Select the AUX input source on your car's audio system.

## How to Connect the Car

Support 3.5mm AUX cable connect to car.



Image: Visual guide on how to connect the HOTT CD711 to a car's audio system using a 3.5mm AUX cable, highlighting the CD player interface and the car's AUX jack.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Playback

1. Ensure the HOLD/UNHOLD switch is set to UNHOLD.
2. Open the CD compartment by gently pressing the 'OPEN' button or sliding the lid.
3. Insert a CD with the label side facing up.
4. Close the CD compartment firmly until it clicks.
5. Press the **Power On/Play/Pause** button to start playback.
6. Adjust the volume using the **VOL Adjust** knob.
7. To pause, press the **Power On/Play/Pause** button again. Press again to resume.

8. To stop playback, press the **Stop/Shut Down** button.

## 5.2 Navigation and Modes

- **Skip Tracks:** Use the **Previous/Rewind** or **Next/Fast Forward** buttons to skip tracks.
- **Fast Forward/Rewind:** Long press the **Previous/Rewind** or **Next/Fast Forward** buttons.
- **DIR (Directory):** For MP3 discs, press the **DIR** button to navigate between folders/albums.
- **ASP (Anti-Shock Protection):** Press the **ASP** button to activate or deactivate anti-shock protection. This feature helps prevent skips during movement.
- **Sound Effects:** Press the **Sound Effect** button repeatedly to cycle through available sound modes: BBS, Pop, Jazz, Rock, Classic.
- **Play Mode:** Press the **Play Mode** button to select different playback sequences: Sequential, Shuffle, Single Track Repeat, Repeat All, Scan (plays first 10 seconds of each track).



Image: Visual representation of the five play modes available on the HOTT CD711: Sequential, Shuffle, Single Track Repeat, Repeat All, and Scan. Also shows compatibility with MP3, CD-RW, CD-R, and HD-CD discs.

## 5.3 Resume Function

The CD player features a resume function that automatically memorizes the last played track and position.

When you power on the device again, it will resume playback from where it left off.



Image: A young girl using the HOTT CD711 while studying at a desk, illustrating the convenience of the resume function which remembers the last playback track.

## 6. MAINTENANCE AND CARE

- Keep the CD player clean by wiping it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Handle CDs by the edges to prevent fingerprints and scratches, which can affect playback quality.
- Store the CD player in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is depleted. HOLD switch is engaged.	Charge the battery. Set the HOLD switch to UNHOLD.

Problem	Possible Cause	Solution
No sound.	Volume is too low. Headphones not properly connected. AUX cable not properly connected (in car).	Increase volume. Ensure headphones are fully plugged into the PHONES jack. Check AUX cable connection and car's input source.
Disc skips or playback is unstable.	Disc is dirty or scratched. ASP is off or insufficient. Excessive vibration.	Clean the disc or try another disc. Ensure ASP is enabled. Reduce movement or place on a stable surface.
Cannot read disc.	Disc inserted incorrectly. Disc format not supported. Disc is severely damaged.	Reinsert disc with label side up. Ensure disc is CD, MP3, CD-RW, CD-R, or WMA. Try a different disc.

## 8. SPECIFICATIONS

- **Model:** CD711
- **Brand:** HOTT
- **Supported Disc Formats:** CD, MP3, CD-RW, CD-R, WMA
- **Battery:** 1000mAh Li-ion rechargeable battery
- **Charging Time:** Approximately 3 hours
- **Playback Time:** Up to 7 hours (at medium volume)
- **Anti-Shock Protection:** 45 seconds for CD, 120 seconds for MP3
- **Connectivity:** 3.5mm AUX output, USB for charging
- **Dimensions:** 6.81 x 6.77 x 1.77 inches (Package Dimensions)
- **Weight:** 15.2 ounces

## 9. WARRANTY AND SUPPORT

HOTT provides comprehensive customer support for the CD711 Portable CD Player:

- **Return Policy:** 30-days return policy.
- **Warranty:** 1-year warranty. Register through the official website to extend the warranty period to 18 months.
- **Support:** Lifetime support and Toll-free call center.

For assistance, please refer to the contact information provided in your product packaging or visit the official



**HOTT®**

 Since 1999

**1999** Established

**2003** ISO9001:2000 approved

**2008** Approved by Walmart

**2013** HOTT Corp was established in USA

**2019** Become the excellent CD player seller brand in Amazon US

 US customer service team offer toll-free complimentary phone service

 Free replacement for one year



Image: Information about HOTT company history and customer support, including establishment in 1999, ISO9001:2000 approval, Walmart approval, USA establishment in 2013, becoming a top Amazon CD player seller in 2019, and details on US customer service, toll-free support, and free replacement for one year.