

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SoBuy](#) /

› [SoBuy FKW111-PF Multifunctional Kitchen Cart User Manual](#)

## SoBuy FKW111-PF

# SoBuy FKW111-PF Multifunctional Kitchen Cart User Manual

Model: FKW111-PF

## 1. INTRODUCTION

Thank you for choosing the SoBuy FKW111-PF Multifunctional Kitchen Cart. This cart is designed to provide versatile storage and an industrial aesthetic to your kitchen or dining area. It features two spacious drawers and three open shelves, all supported by a sturdy metal frame and equipped with smooth-rolling wheels for easy mobility.

This manual provides essential information for the safe assembly, operation, and maintenance of your new kitchen cart. Please read it thoroughly before assembly and retain it for future reference.

## 2. SAFETY INFORMATION

- Always ensure the cart is placed on a level, stable surface to prevent tipping.
- Engage the wheel brakes when the cart is stationary to prevent unintended movement.
- Do not exceed the maximum weight capacity of 60 kg (132 lbs). Distribute weight evenly.
- Keep small parts and packaging materials away from children during assembly.
- Regularly check all screws and fasteners to ensure they are tight. Retighten if necessary.
- Avoid standing or climbing on the cart.

## 3. SETUP AND ASSEMBLY

Assembly of the SoBuy FKW111-PF kitchen cart is required. Please follow these general steps. A detailed assembly diagram and hardware package are typically included with your purchase.

### 3.1. Unpacking and Component Check

- Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
- Verify that all parts listed in the assembly instructions are present. Contact customer support if any parts are

missing or damaged.

### **3.2. Assembly Steps**

1. Attach the metal frame components together using the provided screws and tools. Ensure all connections are secure but do not overtighten initially.
2. Install the shelves into the designated slots on the metal frame.
3. Assemble the drawers according to the instructions, then slide them into their respective compartments.
4. Attach the four plastic wheels to the bottom of the cart frame. Ensure the two wheels with brakes are positioned on the same side for easier access.
5. Once all components are assembled, tighten all screws firmly.

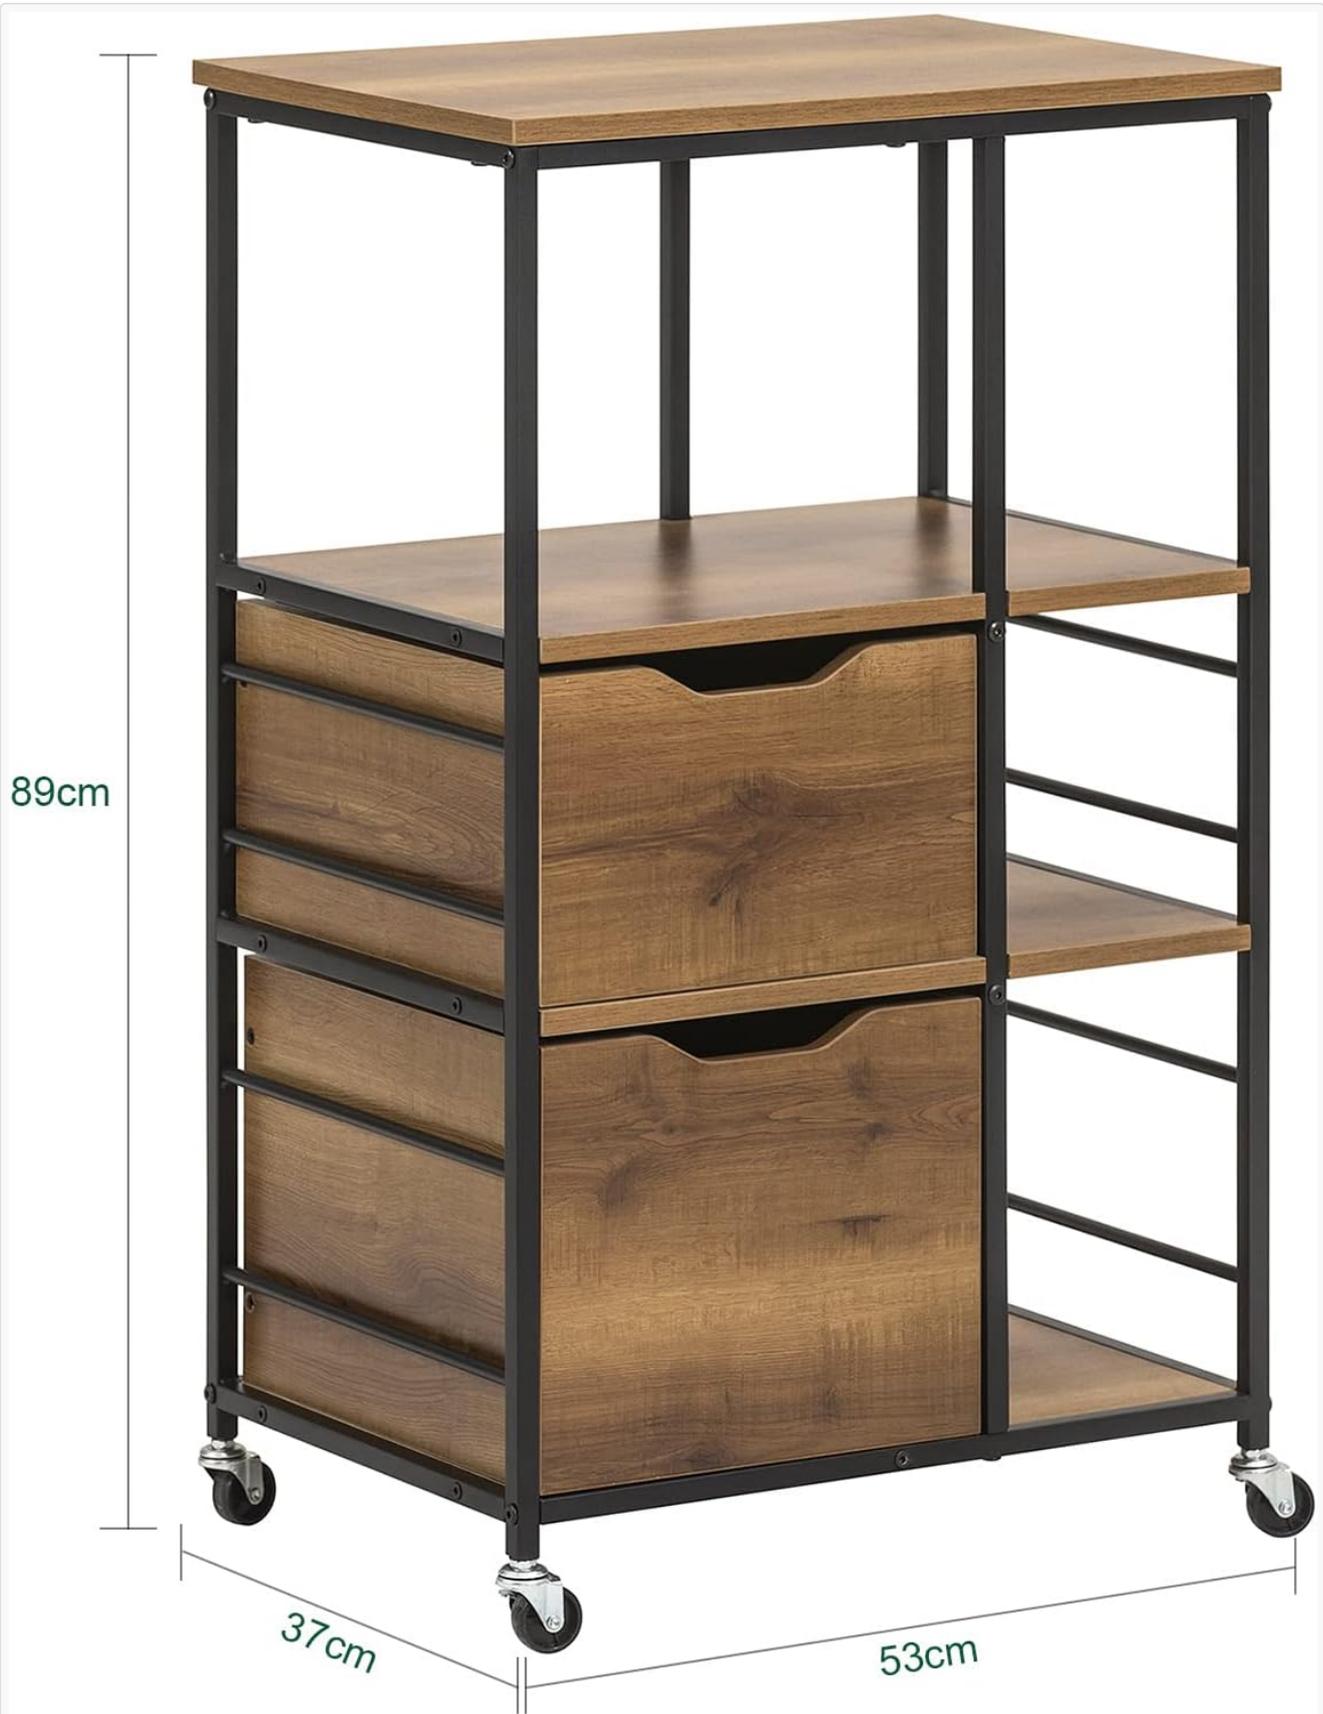


Figure 1: Dimensions of the SoBuy FKW111-PF Kitchen Cart. The cart measures 89 cm in height, 53 cm in width, and 37 cm in depth.

## 4. OPERATING INSTRUCTIONS

### 4.1. Moving the Cart

- To move the cart, ensure the brakes on the wheels are disengaged.

- Gently push the cart to its desired location. Avoid sudden movements or pushing over uneven surfaces.

## 4.2. Securing the Cart

- Once the cart is in its desired position, engage the brakes on the two lockable wheels by pressing down on the lever.
- Verify that the cart is stable and does not move before placing items on it.



Figure 2: Detail of a wheel with an engaged brake, ensuring the cart remains stationary.

## 4.3. Using Drawers and Shelves

- The two large drawers are suitable for storing tableware, kitchen utensils, or other small items.
- The three open shelves provide quick access storage for kitchen tools, spices, or decorative items.
- Distribute items evenly across shelves and drawers to maintain stability.



Figure 3: An open drawer demonstrating storage capacity for kitchen essentials.

## 5. MAINTENANCE

### 5.1. Cleaning

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- Dry immediately with a clean cloth to prevent water spots.

### 5.2. Fastener Check

- Periodically check all screws and bolts to ensure they remain tight. Retighten as needed to maintain stability and safety.

### 5.3. Wheel Maintenance

- Keep wheels free of hair, dust, and debris to ensure smooth movement.
- If wheels become stiff, a small amount of silicone lubricant can be applied to the axle.

## 6. TROUBLESHOOTING

---

### 6.1. Cart is unstable or wobbly

- **Solution:** Check all assembly screws and bolts. Tighten any loose fasteners. Ensure the cart is on a level surface. Redistribute items if weight is unevenly distributed.

### 6.2. Wheels do not roll smoothly

- **Solution:** Inspect wheels for debris (hair, lint, dirt) and remove any obstructions. Ensure brakes are fully disengaged. Apply a small amount of lubricant if necessary.

### 6.3. Drawers are difficult to open or close

- **Solution:** Check for any items obstructing the drawer's path. Ensure drawers are correctly aligned within their runners.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Number	FKW111-PF
Brand	SoBuy
Dimensions (L x W x H)	53 cm x 37 cm x 89 cm
Shelf Type	Tiered Shelf
Materials	Manufactured Wood (E1 grade), Metal Frame
Color	Multicolor (Wood and Black)
Furniture Finish	Black (Frame)
Style	Industrial
Maximum Weight Recommendation	60 kg (132 lbs)
Item Weight	16 kg (35.3 lbs)

## 8. WARRANTY AND SUPPORT

---

Warranty information for the SoBuy FKW111-PF Kitchen Cart is typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer where you purchased the product for specific details regarding coverage and duration.

For technical support, missing parts, or any inquiries not covered in this manual, please contact SoBuy customer service or your authorized dealer. Contact information can usually be found on the product packaging or the official SoBuy website.

© 2023 SoBuy. All rights reserved.