

Favourlite 3000LM

Favourlite Camping Lantern 3000LM Instruction Manual

Model: 3000LM | Brand: Favourlite

INTRODUCTION

The Favourlite Camping Lantern 3000LM is a versatile and durable lighting solution designed for various outdoor activities, emergency situations, and home use. Featuring ultra-bright 3000LM illumination, multiple lighting modes, and a built-in power bank, this rechargeable lantern ensures reliable light and power when you need it most. Its robust, impact-resistant, and waterproof design makes it suitable for challenging environments.



Image: The Favourlite Camping Lantern highlighting its 3000 lumens and 360-degree illumination capabilities.

SAFETY INFORMATION

- Do not look directly into the LED light when it is on, as it may cause temporary vision impairment.
- Keep the lantern away from children.
- Do not attempt to disassemble or modify the lantern, as this may void the warranty and pose a

safety risk.

- Ensure the USB port cover is securely closed when not in use to maintain water resistance.
- Use only the provided USB cable or a certified equivalent for charging.

WHAT'S IN THE BOX

- 1 x Favourlite Camping Lantern
- 1 x USB Cable

PRODUCT FEATURES

- **3000LM Ultra Bright & 360° Lighting Coverage:** Equipped with an upgraded COB panel and 92 high-brightness LED chips, providing up to 3000 lumens (6500K) for comprehensive illumination without harsh shadows.
- **5 Lighting Modes:** Offers High, Medium, Low, Red On, and Red Strobe modes to adapt to various situations. The Red On mode is ideal for preserving night vision, while Red Strobe serves as an attention-grabbing signal in emergencies.
- **4400mAh Rechargeable & Long Lasting:** Features a powerful 4400mAh battery, fully rechargeable in 3 hours via USB-C, providing 4-10 hours of continuous runtime.
- **Portable Phone Charger:** Can be used as a power bank to charge smartphones and other devices via its USB-A output port.
- **Impact Resistant and IPX4 Water Resistant:** Designed with anti-slip rubber construction and thickened shockproof materials, ensuring impact resistance up to 1 meter and protection against splashing water from any direction.
- **Collapsible Hooks & Portable Design:** Weighs just 1.21lb and measures 7.09 x 4.13 x 4.13 inches. Includes two hidden hooks for easy hanging on backpacks, tents, or branches.



Image: The Favourlite Camping Lantern showcasing its five distinct lighting modes, including red light options for various scenarios.

SETUP

Charging the Lantern

1. Locate the USB-C input port on the side of the lantern, usually protected by a rubber cover.
2. Open the rubber cover.
3. Connect the provided USB-C cable to the input port and the other end to a compatible USB power source (e.g., wall adapter, computer, power bank).
4. The battery indicator lights will illuminate to show the charging progress. A full charge typically takes 3 hours.
5. Once fully charged, disconnect the cable and securely close the rubber cover to maintain water resistance.

Using as a Power Bank

1. Ensure the lantern is sufficiently charged.
2. Locate the USB-A output port, usually next to the USB-C input, and open its rubber cover.
3. Connect your device's charging cable (USB-A end) to the lantern's USB-A output port.
4. Connect the other end of your device's charging cable to your smartphone or other electronic device.
5. The lantern will begin charging your device.
6. After charging, disconnect the cable and securely close the rubber cover.



Image: The Favourlite Camping Lantern demonstrating its 4400mAh rechargeable battery and its capability to act as a portable charger for other devices.

OPERATING INSTRUCTIONS

Turning On/Off and Changing Light Modes

1. To turn on the lantern, press the power button located on the front of the unit. It will typically start in High brightness mode.
2. Press the power button repeatedly to cycle through the 5 lighting modes: High → Medium → Low → Red On → Red Strobe.
3. To turn off the lantern directly from any mode, press and hold the power button for approximately 2 seconds. Alternatively, if the lantern has been in a single mode for more than 8 seconds, a single press of the power button will turn it off.

Using Collapsible Hooks

1. The lantern features two hidden hooks integrated into the top and bottom sections.
2. Gently pull out the desired hook from its recessed position.
3. Use the hook to hang the lantern from a tent loop, backpack, tree branch, or any suitable fixture for overhead lighting.
4. When not in use, push the hooks back into their recessed positions for a compact and streamlined design.



Image: The Favourlite Camping Lantern demonstrating its collapsible hooks for convenient hanging in various outdoor settings.

Your browser does not support the video tag.

Video: A demonstration of the Favourlite Camping Lantern's features, including its various light modes and rechargeable function.

MAINTENANCE

- Clean the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the lantern in a cool, dry place when not in use.
- For optimal battery life, fully charge the lantern every 3-6 months, even if not in regular use.
- Ensure the USB port cover is always sealed when not actively charging or being used as a power bank to prevent dust and water ingress.

TROUBLESHOOTING

- **Lantern not turning on:** Ensure the battery is charged. Connect to a power source and check the battery indicator lights.
- **Device not charging from lantern:** Verify the lantern has sufficient charge. Ensure the charging cable is securely connected to both the lantern's USB-A output and your device.
- **Light modes not changing:** Press the power button firmly and quickly to cycle through modes. If stuck, try turning off and on again.

SPECIFICATIONS

Feature	Detail
Brightness	3000 Lumens
Light Source Type	Light Emitting Diode (LED)
Battery Capacity	4400mAh Lithium Polymer
Charging Time	3 Hours (via USB-C)
Runtime	4-10 Hours
Water Resistance Level	IPX4 (Waterproof)
Impact Resistance	40 inches (1 meter)
Item Weight	1.21 Pounds
Product Dimensions	4.33"L x 4.33"W x 7.28"H
Material	Plastic, Rubber

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to your purchase documentation or visit the official Favourolite store on Amazon:

[Visit the Favourolite Store](#)

Extended protection plans may also be available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan)