

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OLEVS](#) /

› [OLEVS Model 2871 \(YKS-S-G2878\) Men's Quartz Chronograph Watch Instruction Manual](#)

OLEVS YKS-S-G2878

OLEVS Model 2871 (YKS-S-G2878) Men's Quartz Chronograph Watch Instruction Manual

Your guide to setting up, operating, and maintaining your OLEVS timepiece.

1. INTRODUCTION

Thank you for choosing the OLEVS Model 2871 (YKS-S-G2878) Men's Quartz Chronograph Watch. This manual provides detailed instructions to help you understand and utilize all the features of your new watch. Please read this manual carefully to ensure proper use and care, which will help maintain its performance and longevity.



A front view of the OLEVS men's watch, featuring a brown face with Roman numerals, three sub-dials, a date window, and a brown leather strap.

2. PRODUCT OVERVIEW

Key Features:

- **Multifunctional Chronograph:** Features three sub-dials for precise second, minute, and hour tracking.
- **Practical Date Display:** A calendar window is positioned between 4 and 5 o'clock.
- **Comfortable Leather Strap:** Crafted from soft and breathable leather with an adjustable pin buckle.
- **Luminous Hands:** Luminescent-filled hands offer clear visibility in low-light environments.
- **Durable Construction:** Equipped with a high hardness coated glass mirror.
- **3ATM Water-Resistant:** Suitable for daily activities and brief water exposure.

Watch Components:



A detailed diagram of the OLEVS watch face, highlighting the second hand timing, calendar adjustment, stopwatch reset button, chronograph second hand, chronograph minute hand, and 24-hour moon phase display.

3. SETUP INSTRUCTIONS

Setting the Time:

1. Pull the crown (knob) out to the **second position**.
2. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into the normal position.

Setting the Date:

1. Pull the crown out to the **first position**.
2. Turn the crown counter-clockwise to adjust the date in the calendar window.
3. Once the date is set, push the crown back into the normal position.

Chronograph Reset:

If the chronograph hands are not aligned to zero, press the reset stopwatch button (bottom button) to return them to their home position.



A graphic illustrating the watch's functions, including the moon phase dial, minute and second chronograph sub-dials, and the calendar window, along with instructions for setting time and date.

4. OPERATING INSTRUCTIONS

Using the Chronograph (Stopwatch):

1. To **start** the chronograph, press the top button. The chronograph second hand will begin to move.
2. To **stop** the chronograph, press the top button again. The elapsed time will be displayed on the sub-dials.
3. To **reset** the chronograph, press the bottom button. All chronograph hands will return to their zero positions.

Luminous Display:

The watch hands and hour markers are coated with a luminescent material. After exposure to light, they will glow in the dark, providing visibility in low-light conditions. The intensity and duration of the glow depend on the exposure time and intensity of light.



A close-up image of the OLEVS watch face in low light, showcasing its luminous hands and hour markers for enhanced visibility.

Moon Phase Display:

The watch features a 24-hour moon phase sub-dial, which visually indicates whether it is daytime (sun icon) or nighttime (moon and stars icon). This sub-dial operates in conjunction with the main time display.



A visual explanation of the moon phase feature, showing how it transitions between daytime (sun) and nighttime (moon and stars) displays.

5. WATER RESISTANCE GUIDELINES

Your OLEVS watch is rated **3ATM (30 meters / 100 feet) water-resistant**. This means it is suitable for:

- Daily use
- Splashes
- Rain exposure

It is **NOT recommended** for:

- Swimming
- Bathing or showering (especially with hot water, which can cause fogging)
- Diving or snorkeling
- Operating buttons underwater

Always ensure the crown is fully pushed in to maintain water resistance. Exposure to hot water or steam can compromise the watch's seals.

30m waterproof

Precision waterproof performance, innovation and enhancement of anti-fog, strong pressure waterproof



The OLEVS watch partially submerged in water, demonstrating its 30-meter water resistance capability.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For leather

straps, avoid excessive moisture.

- **Avoid Chemicals:** Do not expose the watch to solvents, detergents, perfumes, or cosmetics, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect the movement and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) to prevent interference with the quartz movement.
- **Impact:** Protect the watch from strong impacts or drops.
- **Battery Replacement:** When the watch stops or the second hand moves erratically, it indicates a low battery. Have the battery replaced by a qualified watch technician to ensure proper sealing and function.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery; exposure to strong magnetic fields; internal malfunction.	Replace battery; move away from magnetic sources; consult a watch technician.
Date does not change at midnight	Time is set for AM/PM incorrectly; date mechanism issue.	Adjust time by 12 hours; manually set date; consult a watch technician.
Fogging under the glass	Exposure to extreme temperature changes; compromised water resistance.	Avoid temperature extremes; have seals checked by a technician.
Chronograph hands not resetting to zero	Needs manual reset.	Press the bottom button to reset. If persistent, consult a technician.

8. SPECIFICATIONS

Feature	Detail
Model Number	YKS-S-G2878 (Also referred to as Model 2871)
Movement	Quartz
Case Diameter	40 mm
Case Thickness	11.5 mm
Strap Material	Leather
Strap Width	20 mm
Strap Length	240 mm (including watch head)
Watch Weight	56g

Feature	Detail
Mirror Material	High hardness coated glass
Water Resistance	3ATM (30 meters / 100 feet)
Functions	Chronograph (seconds, minutes, hours), Date Display, Luminous Hands, Moon Phase (24-hour indicator)



PRODUCT SIZE

40

11.5

Case diameter(MM) Case thickness(MM)
Without table mirror

20

24

Chain width(MM) Chain length(CM)

Brand model number:

OLEVS/2871

Color:

Leather coffee noodles

Mirror:

High hardness coated glass mirror

Strap:

Leather strap

Movement:

Quartz movement

Waterproof:

30 meters high pressure waterproof

Watch weight:

56g

An illustration detailing the watch's dimensions: 40mm case diameter, 11.5mm case thickness, 20mm chain width, and 24cm chain length.

9. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video showcases the OLEVS Classic Leather Men's Watch, highlighting its design, chronograph functions, and how it looks when worn. It demonstrates the watch's aesthetic appeal and some of its key features.

10. WARRANTY AND SUPPORT

OLEVS watches are manufactured with attention to quality and detail. For specific warranty information, please refer to the warranty card included with your purchase or contact the retailer where the watch was purchased. If you encounter any issues not covered in this manual, or require professional service, please reach out to the official OLEVS customer support or an authorized service center.

For further assistance, you may visit the official OLEVS store online: [OLEVS Store](#)