

SUNPIN 17.9" Portable DVD Player

SUNPIN 17.9" Portable DVD Player User Manual

Model: 17.9" Portable DVD Player

Brand: SUNPIN

1. PRODUCT OVERVIEW

The SUNPIN 17.9-inch Portable DVD Player features a 15.6-inch HD swivel screen, offering versatile viewing angles with 270° rotation and 180° flip capabilities. It supports various disc formats, USB playback, HDMI input for external devices, and wireless screen mirroring from your mobile phone. Enjoy enhanced audio with upgraded dual speakers and Dolby Digital sound. The built-in 5000mAh rechargeable battery provides up to 6 hours of playback, making it ideal for travel or home use. Additional features include break-point memory and anti-shock functionality for a seamless entertainment experience.

What's in the Box:

- 1 x Sunpin 15.6" Portable DVD Player
- 1 x IR Remote Controller
- 1 x Car Charger
- 1 x AC Power Adapter
- 1 x AV-RCA Cable
- 1 x User Manual



The SUNPIN 17.9-inch Portable DVD Player, showcasing its large screen and screen mirroring capability with a smartphone.

Official product video demonstrating the features and functionality of the SUNPIN Portable DVD Player, including its 17.9-inch screen and support for 1080P content.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. SETUP GUIDE

3.1 Charging the Battery

Before first use, fully charge the portable DVD player. The built-in 5000mAh lithium polymer rechargeable battery provides up to 6 hours of uninterrupted playback. Use the included AC power adapter for home

charging or the car charger for on-the-go power.

1. Connect the AC power adapter to the DC IN port on the DVD player and plug it into a wall outlet.
2. For car charging, connect the car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.
3. The charging indicator light will illuminate during charging and turn off when fully charged.



The portable DVD player demonstrating its long-lasting battery life, capable of up to 6 hours of playback.

3.2 Initial Power On

To power on the device, press and hold the Power button located on the unit. The screen will light up, and the main menu will appear.

4. OPERATING INSTRUCTIONS

4.1 Disc Playback

This player supports region-free playback of CD, DVD, DVD+R(-R), DVD+RW(-RW), VCD, SVCD-R(RW), and CD-R(RW) discs (Blu-ray discs are not supported).

1. Open the disc cover gently.
2. Place a compatible disc onto the spindle with the label side facing up.
3. Close the disc cover. The player will automatically detect and begin playing the disc.
4. Use the control buttons on the player or the remote control to navigate menus, play, pause, stop, and skip tracks/chapters.

The player supports multiple disc formats and is region-free, allowing playback of discs from all countries.

4.2 USB Playback

The player supports USB flash drives (Max FAT 32GB) for playing media files such as VOB, AVI, MPEG1, MPEG2, MP3, MP4, WMA, and JPEG.

1. Insert your USB flash drive into the USB port on the side of the player.
2. Select the USB input source from the main menu.
3. Browse your files and select the desired media to play.

4.3 HDMI Input

Connect external devices like mobile phones, Kindle Fire, computers, Xbox, Firestick, Raspberry Pi, or PlayStation via HDMI (HDMI cable not included).

1. Connect one end of an HDMI cable (not included) to the HDMI IN port on the DVD player.
2. Connect the other end to the HDMI output of your external device.
3. Select the HDMI input source on the DVD player.



The HDMI input allows syncing content from various devices to the player's large screen.

4.4 Wireless Screen Mirroring

Mirror your mobile phone's screen wirelessly to the DVD player's large display.

1. Ensure both the DVD player and your mobile phone are connected to the same Wi-Fi network.
2. On the DVD player, select the Screen Mirroring function from the menu.

3. On your mobile phone, activate the screen mirroring/cast feature (e.g., Smart View, Screen Cast, AirPlay) and select the DVD player from the list of available devices.



Wireless screen mirroring allows videos and photos from your mobile phone to be projected onto the player's large screen.

4.5 Connecting to TV/Projector

Sync movies to a larger screen like your TV or projector using the included AV cable.

1. Connect the AV-RCA cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV-RCA cable to the corresponding AV IN ports on your TV or projector (Yellow for video, Red/White for audio).
3. Select the correct AV input source on your TV or projector.

Enjoy Leisure Time with Your Family Through the Provided AV-RCA Cable.



Enjoy leisure time with your family by connecting the player to a TV or projector using the provided AV-RCA cable.

4.6 Using the Remote Control

The included IR remote controller provides convenient access to all player functions.

- **Power:** Turn the player on/off.
- **Menu/Setup:** Access system settings and disc menus.
- **Navigation (Up/Down/Left/Right/OK):** Navigate menus and confirm selections.
- **Play/Pause, Stop, Skip:** Control media playback.
- **Volume +/-:** Adjust audio volume.
- **Subtitle:** Toggle subtitles.
- **Display:** Show playback information.

Upgraded Remote



The upgraded remote control offers full functionality for convenient operation.

4.7 Screen Adjustment

The 15.6-inch screen can be rotated 270° and flipped 180° for optimal viewing from any angle.

1. Gently swivel the screen clockwise or counter-clockwise to your desired angle.
2. Flip the screen over to convert the player into a tablet-like display.

LARGER SCREEN IMPRESSIVE VISION

15.6" HD Screen 1280x800 Rotatable Large Screen Display
Vivid, Immersive, Wide View



The 15.6-inch HD screen provides an impressive and immersive viewing experience with its rotatable display.

4.8 Special Features

- **Break-point Memory:** The player remembers where you left off, allowing you to continue watching from the last played position.
- **Anti-Shock Function:** Reduces video interruption caused by shaking, ensuring smooth playback during movement.
- **Dolby Digital Sound:** Enhanced audio experience with rich, clear sound from the dual speakers.
- **Slow-motion Playback, Repeat, Rotate, Zoom:** Additional functions accessible via the remote control for customized viewing.

HUMANIZED DESIGN FOR ELDERS/KIDS

Supports Discs of Dolby Digital Sound, Double Speakers
Provide Higher Volume.



Humanized design with dual speakers provides higher volume and clear sound quality.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to clean the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics. Do not use abrasive cleaners or solvents.
- Keep the disc tray and lens free from dust and debris. Use a specialized disc cleaner if necessary.

5.2 Storage

When not in use, store the DVD player in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the disc tray is empty before storage.

5.3 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge the battery to about 50% before storage and recharge it every few months.

6. TROUBLESHOOTING

If you encounter issues with your SUNPIN Portable DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected.
Disc does not play.	Disc is dirty, scratched, or incompatible format; Disc inserted incorrectly.	Clean the disc; Check for scratches; Ensure disc is compatible (not Blu-ray); Reinsert disc correctly.
No sound.	Volume is too low or muted; Audio cable not connected properly (if to TV).	Increase volume; Check mute setting; Ensure AV cable is securely connected.
No picture when connected to TV.	Incorrect TV input selected; AV cable not connected properly.	Select correct AV input on TV; Ensure AV cable is securely connected to both devices.
Screen mirroring not working.	Not on same Wi-Fi network; Phone's mirroring function not activated.	Connect both devices to the same Wi-Fi; Activate screen mirroring on your phone and select the player.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	14.96 x 10.82 x 1.96 inches
Item Weight	5.61 pounds
Screen Size	15.6 Inches (17.9" overall diagonal)
Display Type	LCD
Resolution	1280x800
Battery	5000mAh Lithium Polymer (up to 6 hours playback)
Supported Disc Formats	CD, DVD, DVD+R(-R), DVD+RW(-RW), VCD, SVCD-R(RW), CD-R(RW) (Excludes Blu-ray)
Supported USB Formats	VOB, AVI, MPEG1, MPEG2, MP3, MP4, WMA, JPEG (Max FAT 32GB USB)
Connectivity	HDMI Input, AV Output, USB Port, Wireless Screen Mirroring
Color	Black

8. WARRANTY AND SUPPORT

SUNPIN products are designed for reliability and performance. This product comes with a 12-month warranty from the date of purchase, covering manufacturing defects.

Customer Support:

For technical assistance, warranty claims, or any questions regarding your product, please refer to the contact information provided in the physical user manual included with your purchase or visit the official SUNPIN website for support details.

Please retain your proof of purchase for warranty service.