

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Sony](#) /

> Sony PlayStation Shapes Backpack and Lunch Box User Manual (Model 50060023)

## Sony 50060023

# Sony PlayStation Shapes Backpack and Lunch Box User Manual

Brand: Sony | Model: 50060023

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Sony PlayStation Shapes Backpack and accompanying Lunch Box, model 50060023. Please read this manual thoroughly before first use and retain it for future reference. This product is designed for carrying personal items and food, featuring a durable construction suitable for daily use.

**Note:** No specific product images or videos were provided for this model in the input data. The content describes the Sony PlayStation Shapes Backpack and Lunch Box.

## 2. SETUP AND FIRST USE

- Unpacking:** Carefully remove the backpack and lunch box from their packaging. Inspect both items for any signs of damage.
- Initial Cleaning:** Before first use, it is recommended to wipe down the interior and exterior surfaces of both the backpack and lunch box with a damp cloth and mild soap. Allow them to air dry completely.
- Strap Adjustment (Backpack):** Adjust the shoulder straps to a comfortable length. The backpack should sit snugly against your back, with the bottom resting around your waistline.

## 3. OPERATING INSTRUCTIONS

### 3.1. Using the Backpack

- Loading:** Distribute weight evenly within the backpack. Place heavier items closer to your back to maintain balance.
- Zippers:** Ensure all zippers are fully closed to secure contents and prevent items from falling out.
- Carrying:** Always use both shoulder straps to distribute weight evenly across your shoulders and back. Avoid carrying the backpack by only one strap.

### 3.2. Using the Lunch Box

- Food Storage:** Place food items inside the lunch box. For best results, use sealed containers for liquids

or messy foods to prevent leaks.

- **Insulation:** The lunch box is designed to help maintain food temperature. For extended cooling, consider adding an ice pack (not included).
- **Sealing:** Ensure the lunch box is properly closed to maintain insulation and prevent spills.

## 4. MAINTENANCE AND CARE

### 4.1. Cleaning

- **Spot Cleaning:** For minor dirt or stains, use a soft cloth dampened with mild soap and water. Gently rub the affected area.
- **Deep Cleaning (Backpack):** Hand wash with cold water and mild detergent. Do not machine wash, bleach, or iron. Rinse thoroughly and air dry away from direct sunlight.
- **Deep Cleaning (Lunch Box):** Hand wash the interior and exterior with warm, soapy water. Rinse thoroughly and allow to air dry completely before storing.

### 4.2. Storage

Store the backpack and lunch box in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Ensure both items are completely dry before storage to prevent mold or mildew.

## 5. TROUBLESHOOTING

- **Stuck Zipper:** If a zipper becomes difficult to move, try rubbing a small amount of graphite (from a pencil) or a zipper lubricant along the teeth.
- **Unpleasant Odor (Lunch Box):** If odors develop, wash the lunch box thoroughly with warm, soapy water and a small amount of baking soda. Rinse well and air dry.
- **Stains:** For stubborn stains, a gentle fabric cleaner designed for the material type may be used, following the product's instructions. Test on an inconspicuous area first.

## 6. SPECIFICATIONS

<b>Product Name</b>	Sony PlayStation Shapes Backpack and Lunch Box
<b>Model Number</b>	50060023
<b>Brand</b>	Sony
<b>Product Dimensions</b>	45 x 24 x 36 cm
<b>Product Weight</b>	800 g
<b>Manufacturer</b>	Sony
<b>Country of Origin</b>	Germany
<b>ASIN</b>	B09SLVLSRD

## 7. WARRANTY AND SUPPORT

This Sony product is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Sony website. For

technical support or inquiries, please contact Sony customer service through their official channels.

**Online Support:** Visit the official Sony support website for FAQs and contact options.