

AEG DPE5660M

AEG DPE5660M Range Hood User Manual

Model: DPE5660M

1. INTRODUCTION

Thank you for choosing the AEG DPE5660M Range Hood. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before using the range hood and retain them for future reference.

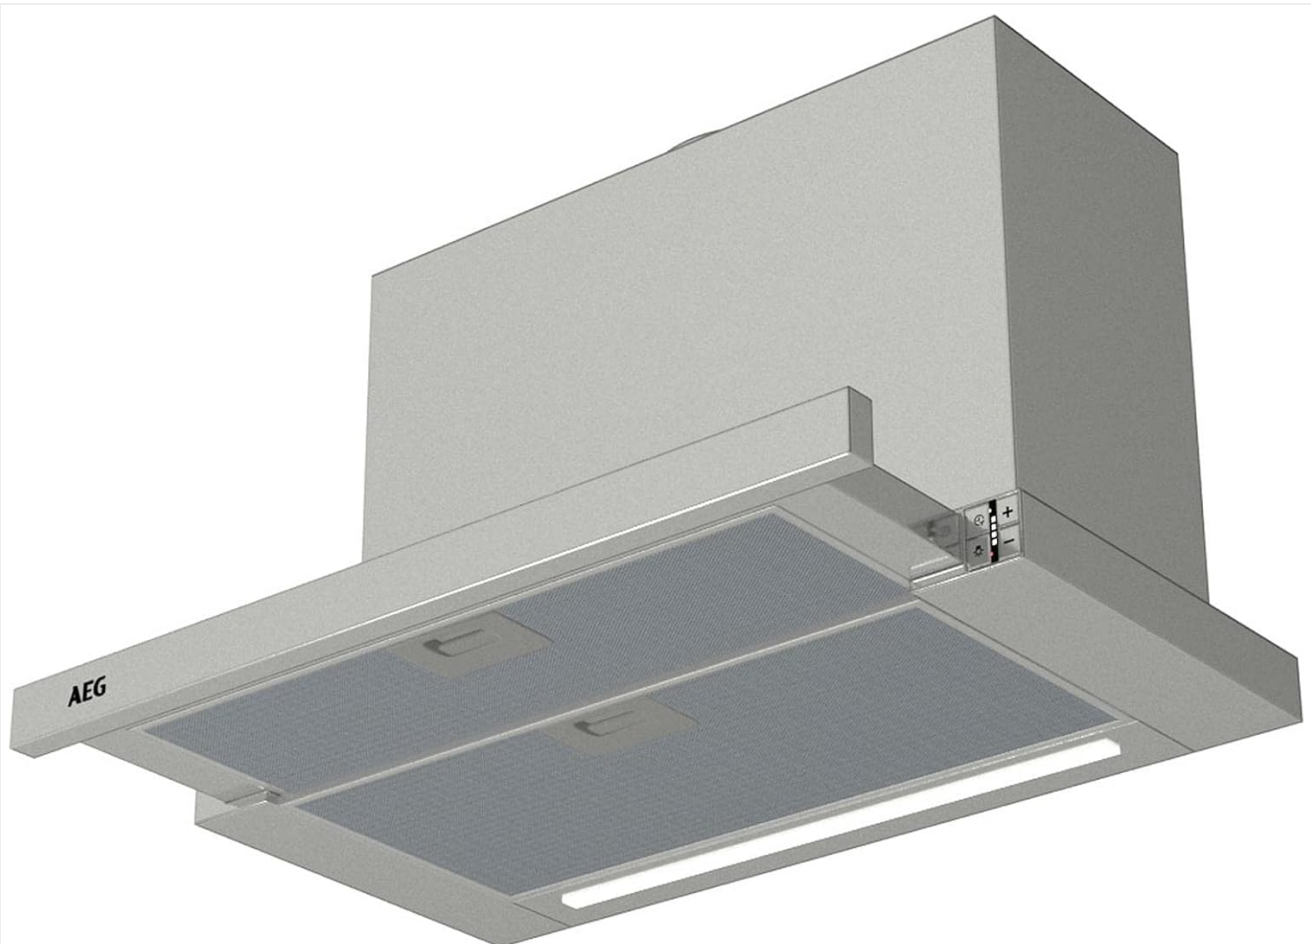


Image 1.1: The AEG DPE5660M Range Hood. This image displays the full view of the range hood, showcasing its grey finish and

2. SAFETY INFORMATION

For your safety and to ensure correct operation, please read this manual carefully before installation and use. Keep these instructions with the appliance for future reference. The manufacturer is not responsible for any damages resulting from incorrect installation or use.

- This appliance is intended for domestic use only.
- Ensure the electrical supply matches the rating plate on the appliance.
- Do not operate the appliance with wet hands or bare feet.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Adequate ventilation must be provided when the range hood is used at the same time as appliances burning gas or other fuels.
- The minimum distance between the hob and the lower part of the hood must be at least 65 cm (25.6 inches) for electric hobs and 75 cm (29.5 inches) for gas hobs, unless specified otherwise by the hob manufacturer.

3. SETUP AND INSTALLATION

The AEG DPE5660M range hood is designed for wall-mounted installation and supports both exhaust (ducting outside) and recirculation (filtering and returning air) modes. Proper installation is crucial for optimal performance and safety.

3.1 Unpacking

Carefully unpack the range hood and check for any damage. Report any damage to your retailer immediately. Ensure all components listed in the 'What's in the Box' section are present.

3.2 Mounting

The range hood is a wall-mounted canopy hood. Refer to the technical drawing for precise dimensions and minimum clearance requirements from the cooking surface.

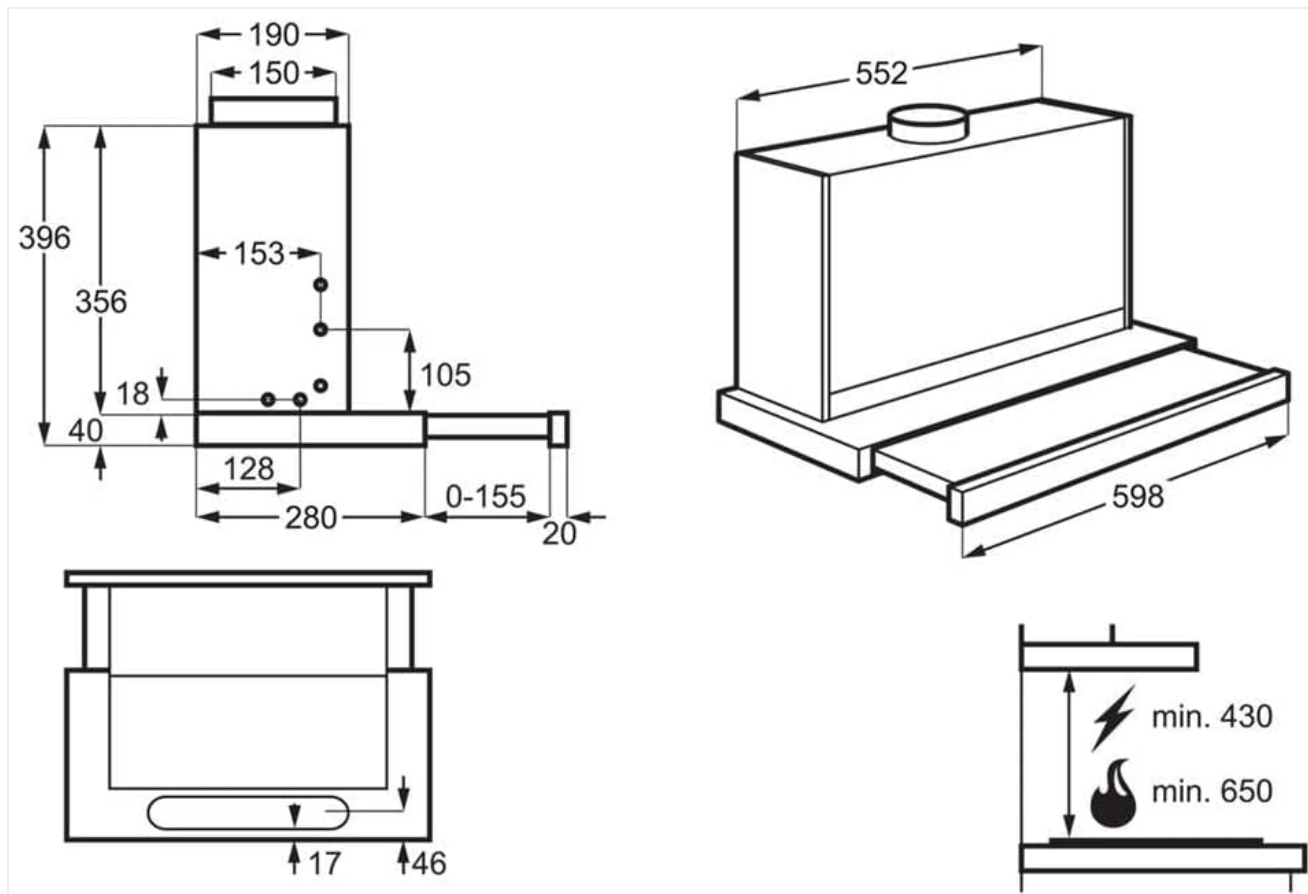


Image 3.1: Technical drawing with dimensions and installation clearances. This diagram illustrates the precise measurements for the range hood and the recommended minimum distances from the hob for safe and effective installation.

3.3 Ventilation Mode Selection

This appliance supports both exhaust and recirculation. For exhaust mode, ducting must be connected to an external vent. For recirculation mode, charcoal filters (sold separately) must be installed to purify the air before returning it to the kitchen.

4. OPERATING INSTRUCTIONS

The AEG DPE5660M features intuitive SoftTouch push buttons for controlling its functions.



Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Image 4.1: Close-up of the SoftTouch control panel. This image highlights the push buttons for power, fan speed adjustment, and lighting control.

4.1 Power On/Off

Press the power button (often indicated by a circle with a vertical line) to turn the hood on or off.

4.2 Fan Speed Adjustment

The range hood offers 4 fan speeds. Use the '+' and '-' buttons to increase or decrease the extraction power. Higher speeds are recommended for intense cooking, while lower speeds are suitable for simmering or general ventilation.



Image 4.2: Detailed view of the fan speed indicators and controls. This image shows the illuminated indicators for the selected fan speed and the '+' and '-' buttons for adjustment.

4.3 Lighting Control

Press the light button (often indicated by a light bulb icon) to turn the halogen lights on or off. The lighting provides illumination for your cooking area.



Image 4.3: Close-up of the integrated halogen light. This image focuses on the bright halogen light strip, which illuminates the cooking surface effectively.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your AEG DPE5660M range hood.

5.1 Cleaning the Grease Filters

The range hood is equipped with baffle filters designed to trap grease particles. These filters should be cleaned regularly, typically every 2-4 weeks depending on usage.

- **Removal:** Locate the release latches on the filters. Push or pull the latch to release the filter and carefully lower it.
- **Cleaning:** Wash the filters by hand in hot soapy water or in a dishwasher. Ensure they are completely dry before re-installing.
- **Re-installation:** Insert the filters back into their slots and secure the latches.



Image 5.1: View of the removable baffle filters. This image shows the metallic mesh filters designed to capture grease, along with the handle for easy removal.

5.2 Cleaning the Exterior

Clean the exterior surfaces of the range hood with a soft cloth and a mild, non-abrasive detergent. Avoid using harsh chemicals or abrasive cleaning pads, as these can damage the grey finish.

5.3 Replacing Charcoal Filters (Recirculation Mode Only)

If using the recirculation mode, charcoal filters need to be replaced periodically (typically every 3-6 months, depending on usage). Refer to the specific instructions provided with the charcoal filters for replacement procedures.

6. TROUBLESHOOTING

If you encounter issues with your range hood, refer to the following common troubleshooting steps:

- **Hood does not turn on:** Check if the appliance is properly plugged into a power outlet. Verify the circuit breaker or fuse.
- **Low suction power:** Ensure the grease filters are clean and not clogged. If in recirculation mode, check if the charcoal filters need replacement. Verify that the ducting (if applicable) is not obstructed.
- **Excessive noise:** Check for loose components or improper installation. Ensure the fan blades are clear of obstructions.
- **Lights not working:** Check if the halogen bulbs are securely in place. Replace faulty bulbs if necessary.

If the problem persists after performing these checks, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model	DPE5660M
Brand	AEG
Mounting Type	Wall Mount
Ventilation Type	Exhaust or Recirculation
Air Flow Capacity	415 Cubic Meters Per Hour
Number of Speeds	4
Noise Level	60 dB
Controls Type	SoftTouch Push Button
Light Source Type	Halogen
Filter Type	Baffle
Material	Metal
Color	Grey
Voltage	220 Volts
Wattage	50 watts
Efficiency Class	A
Product Dimensions (D x W x H)	11.81" x 23.54" x 15.55"
Item Weight	11.4 Kilograms (25.1 pounds)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

AEG products are manufactured to the highest quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official AEG website. Keep your proof of purchase for any warranty claims.

8.2 Customer Support

If you require further assistance, have questions about your product, or need to report a fault, please contact AEG customer support. Contact details can typically be found on the official AEG website or in the documentation provided with your appliance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question