

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Scosche](#) /

› [Scosche DDVRS0916G-SP 1080P Full HD Dash Cam User Manual](#)

Scosche DDVRS0916G-SP

Scosche DDVRS0916G-SP 1080P Full HD Dash Cam User Manual

Model: DDVRS0916G-SP | Brand: Scosche

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Scosche DDVRS0916G-SP 1080P Full HD Dash Cam. Please read this manual thoroughly before using the device to ensure proper functionality and safety.

The Scosche DDVRS0916G-SP is designed to capture high-definition video footage of your journeys, offering enhanced security and peace of mind. Its features include a 2.2-inch color display, 100-degree wide-angle lens, motion detection, and night vision capabilities.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Dash Camera
- 12V Power Cable
- Micro SD Card (16GB included)
- Instruction Manual (this document)
- USB Sync Cable
- Suction Cup Mount



Image: Contents of the Scosche DDVRS0916G-SP package, showing the dash camera, 12V power cable, and USB sync cable.

SETUP AND INSTALLATION

Follow these steps to properly set up and install your dash cam:

1. **Insert Micro SD Card:** Locate the Micro SD card slot on the dash cam. Gently insert the included 16GB Micro SD card until it clicks into place. Ensure the card is inserted correctly to avoid damage. The device supports up to 32GB Micro SD cards.
2. **Attach Suction Cup Mount:** Securely attach the suction cup mount to the top of the dash camera. The mount allows for easy adjustment of the camera's angle.
3. **Mounting Location:** Choose a location on your vehicle's windshield that does not obstruct your view of the road. A common placement is behind the rearview mirror. Clean the windshield surface thoroughly before mounting.
4. **Secure the Mount:** Press the suction cup firmly against the chosen windshield area and engage the lever on the mount to create a strong vacuum seal.
5. **Connect Power:** Plug the small end of the 12V power cable into the dash cam's power input port. Plug the larger end into your vehicle's 12V accessory outlet (cigarette lighter socket).

6. **Adjust Camera Angle:** Once powered on, adjust the camera's angle to ensure a clear, unobstructed view of the road ahead. The 100-degree wide-angle lens provides broad coverage.



Motion Detection and G-Sensor
Automatically store crucial footage

Image: The Scosche DDVRS0916G-SP dash cam installed on a car windshield using the suction cup mount, showing its compact size and placement.



Image: Front view of the Scosche DDVRS0916G-SP dash cam, highlighting the lens and suction cup mount.

OPERATING INSTRUCTIONS

Your Scosche dash cam is designed for ease of use. Here's how to operate its key functions:

Power On/Off

- The dash cam will automatically power on and begin recording when your vehicle's ignition is turned on (if

connected to a switched 12V outlet).

- To manually power on/off, press and hold the Power button located on the side of the device.

Recording Modes

- **Continuous Loop Recording:** The camera continuously records video in short segments (e.g., 1, 3, or 5 minutes). When the Micro SD card is full, the oldest unlocked footage will be overwritten by new recordings.
- **Motion Detection:** When enabled, the camera will automatically begin recording if motion is detected in front of the lens while the vehicle is parked. This feature provides 24/7 security surveillance.
- **G-Sensor (Collision Detection):** The built-in G-Sensor detects sudden impacts or rapid acceleration/deceleration. In the event of a collision, the current video segment will be automatically locked and protected from being overwritten.



HD Wide Angle Lens

Allows for multi-lane coverage in HD

Image: Diagram illustrating the 100-degree wide-angle coverage of the dash cam's lens, designed for multi-lane recording.



Camera Mode

Instantly snap photos of damage



NOW
INCLUDES
16GB
SD CARD!

Image: The dash cam's 2.2-inch screen showing a still image, indicating its camera mode for instantly snapping photos of incidents or damage.



Image: Close-up of the dash cam's 2.2-inch screen, highlighting its compact display for viewing footage.

Menu Navigation

Use the buttons below the screen to navigate the menu and adjust settings:

- **Menu Button (M):** Access the settings menu.
- **Up/Down Arrows:** Navigate through menu options.
- **OK Button:** Confirm selections or start/stop recording.

Adjustable resolution settings include 1080P, 720P, or VGA for optimal video quality in various lighting conditions, including enhanced night vision.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your dash cam:

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and screen. Avoid abrasive cleaners or solvents.
- **SD Card Management:** Regularly format the Micro SD card (at least once a month) to prevent data corruption and ensure smooth recording. Back up any important footage before formatting.
- **Temperature:** Avoid exposing the dash cam to extreme temperatures for prolonged periods.

- **Firmware Updates:** Check the official Scosche website periodically for any available firmware updates to improve performance and add new features.

TROUBLESHOOTING

If you encounter issues with your dash cam, refer to the following common solutions:

Problem	Possible Cause / Solution
Camera does not power on.	<p>Ensure the 12V power cable is securely connected to both the dash cam and the vehicle's power outlet.</p> <p>Check if the vehicle's 12V outlet is functioning.</p> <p>Try a different 12V power source if available.</p>
Recording stops unexpectedly.	<p>The Micro SD card may be full. Format the card (after backing up important files).</p> <p>The Micro SD card may be corrupted or too slow. Try a different, high-speed Micro SD card (Class 10 or higher).</p> <p>Check power connection stability.</p>
Video footage is blurry or unclear.	<p>Clean the camera lens with a soft cloth.</p> <p>Ensure the protective film has been removed from the lens.</p> <p>Adjust the camera's position to avoid glare or reflections from the windshield.</p> <p>Check resolution settings; ensure it's set to 1080P for best quality.</p>
Motion detection is not working.	<p>Ensure motion detection is enabled in the camera's settings menu.</p> <p>Verify the camera has continuous power supply (e.g., via a hardwire kit for 24/7 parking mode).</p>

SPECIFICATIONS

Feature	Detail
Model Name	DDVRS0916G-SP
Video Capture Resolution	1080p (Full HD), 720p, VGA
Screen Size	2.2 inches
Lens Angle	100-degree Wide Angle
Storage	Supports Micro SD cards up to 32GB (16GB included)

Feature	Detail
Special Features	Motion Detection, G-Sensor (Collision Detection), Enhanced Night Vision, Loop Recording
Connectivity	USB
Mounting Type	Windshield Suction Cup Mount
Product Dimensions	2.17 x 3.98 x 7.86 inches
Item Weight	8.8 ounces

WARRANTY AND SUPPORT

The Scosche DDVRS0916G-SP Dash Cam is backed by Scosche's Limited Lifetime Warranty, ensuring quality and reliability. For technical assistance or warranty claims, please contact Scosche customer support.

Lifetime Tech Support: Scosche provides lifetime technical support for this product. For assistance, visit the official Scosche website or contact their support team directly.

Additional Resources: An installation manual in PDF format is available for download: [Installation Manual \(PDF\)](#).