

Electactic C230

Electactic 68 Inch Electric Fireplace Insert User Manual

Model: C230

INTRODUCTION

This manual provides detailed instructions for the safe operation, installation, and maintenance of your Electactic 68 Inch Electric Fireplace Insert. Please read this manual thoroughly before installation and use, and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Observe the following safety precautions to reduce the risk of fire, electric shock, or injury.

- Do not operate the fireplace if the power cord is damaged. Contact qualified service personnel for repair.
- Ensure the fireplace is connected to a properly grounded outlet.
- Keep combustible materials such as furniture, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the fireplace.
- Do not insert foreign objects into any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- Unplug the fireplace from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

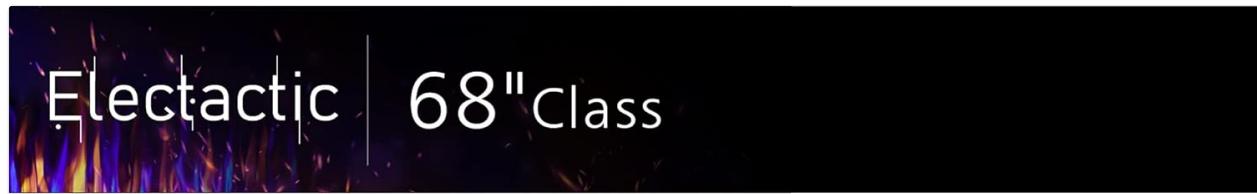


Image: Diagram illustrating the fireplace dimensions, remote control, and a list of included items.

- Electric Fireplace Unit
- Remote Control
- Crystal Ember Bed Package
- Metal Mounting Bracket
- Screw Kit

INSTALLATION INSTRUCTIONS

The Electactic 68 Inch Electric Fireplace can be installed as a fully recessed unit or wall-mounted. Choose the method suitable for your space.



Installation steps

Display viewing size: 58.15" X 8.66"

1 Removing the Glass Frame	5 Placing the Pads and Fixing the Fireplace
2 Removing the Mounting Bracket	6 Placing the Decorations
3 Settling the Holes of Screw	7 Hanging the Glass Frame
4 Drilling & Installing the Wall Anchors	8 Refasten the Glass Frame

Electactic

Image: Installation diagram detailing dimensions for recessed and wall-mounted setups, along with a step-by-step list.

General Installation Steps:

- Remove the Glass Frame:** Carefully detach the front glass panel from the main unit.
- Remove the Mounting Bracket:** Locate and remove the mounting bracket from the back of the fireplace unit.
- Mark Screw Holes:** Based on your chosen installation method (recessed or wall-mounted), mark the appropriate screw hole locations on the wall. Refer to the diagram for precise measurements.
- Drill Holes & Install Wall Anchors:** Drill pilot holes and insert wall anchors as required for secure mounting.
- Mount the Fireplace:** Securely attach the fireplace unit to the wall using the provided screws and mounting bracket. Ensure it is level and stable.
- Place Decorations:** Distribute the crystal ember bed package evenly within the designated area inside the fireplace.
- Hang the Glass Frame:** Reattach the glass frame to the front of the fireplace unit.
- Refasten the Glass Frame:** Secure the glass frame using the appropriate fasteners.

Ensure the power outlet is within reach of the power cord and that there is adequate clearance around the unit

as specified in the safety guidelines.

OPERATING INSTRUCTIONS

Your fireplace can be operated using the touch screen panel located on the unit or the included remote control.

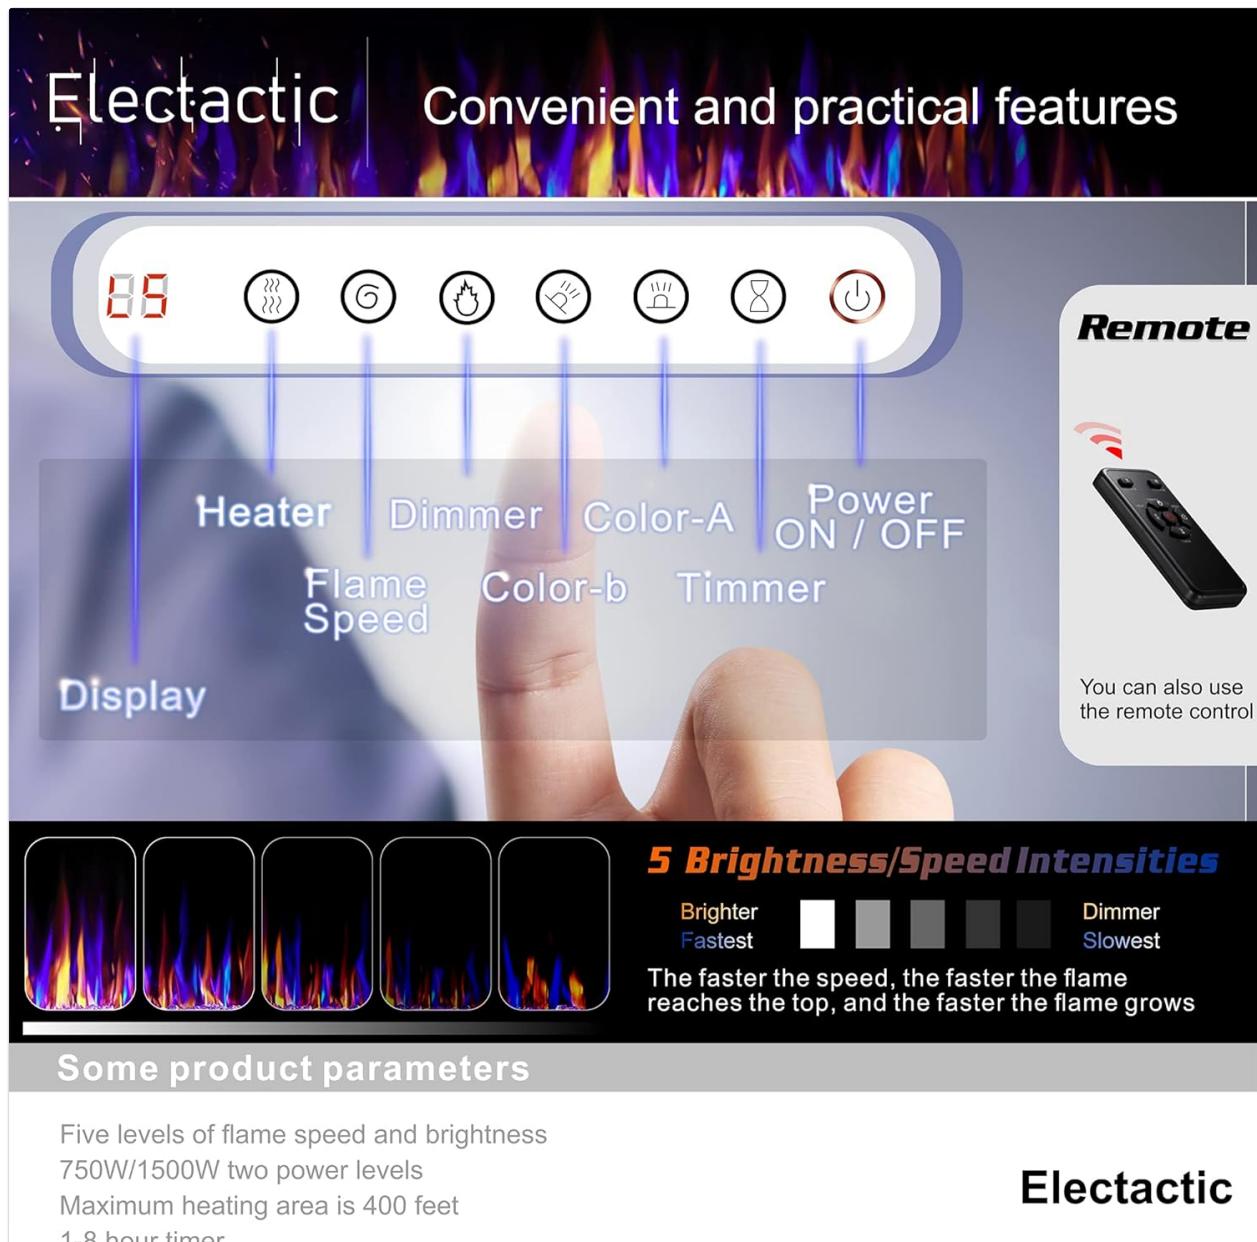


Image: Control panel and remote control layout, indicating functions for heater, dimmer, flame speed, color, and timer.

Touch Screen Controls and Remote Control Functions:

- **Power ON/OFF:** Activates or deactivates the fireplace unit.
- **Heater:** Toggles between 750W (energy-saving) and 1500W (high-efficiency) heating modes.
- **Flame Speed:** Adjusts the speed of the flame effect through 5 distinct levels.
- **Dimmer:** Adjusts the brightness of the flame effect through 5 distinct levels.
- **Color-A (Flame Color):** Cycles through 12 different flame color options.
- **Color-B (Ember Bed Color):** Cycles through 12 different ember bed color options.
- **Timer:** Sets the automatic shut-off timer for durations ranging from 1 to 8 hours.

Flame and Ember Bed Customization:

The fireplace offers extensive customization with 12 flame colors and 12 ember bed colors, allowing for 144 unique visual combinations. Both flame brightness and speed are independently adjustable to suit your preference.

Heating Function:

Select between two heating modes: 750W for energy efficiency or 1500W for rapid heating of spaces up to 400 sq. ft. The integrated thermostat allows you to set a desired room temperature between 62°F and 82°F. The heating function can be operated independently of the flame effect.

Timer Function:

Utilize the timer function to automatically shut off the fireplace after a set period, from 1 to 8 hours, enhancing safety and energy conservation.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your electric fireplace.

- Cleaning:** Always disconnect the power supply before cleaning. Use a soft, damp cloth to clean the exterior surfaces. Avoid using abrasive cleaners or solvents that could damage the finish.
- Glass Panel:** Clean the glass panel with a soft, lint-free cloth and a non-abrasive glass cleaner. Do not scratch the surface.
- Air Vents:** Periodically check and clear the air inlet and outlet vents of any dust, lint, or debris. Blocked vents can impede heating efficiency and trigger the overheat protection system.

TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Issue	Possible Cause	Solution
Fireplace does not turn on	No power supply, main power switch off, remote control batteries depleted.	Check power connection, ensure main power switch is ON, replace remote control batteries.
No heat output	Heater function is off, thermostat set too low, air vents blocked.	Activate heater function, increase thermostat setting, clear any obstructions from air vents.
Flame effect not working	Flame function is off.	Activate the flame effect using the control panel or remote.
Remote control unresponsive	Depleted batteries, obstruction between remote and unit, remote sensor blocked.	Replace remote batteries, ensure a clear line of sight to the fireplace's sensor.
Unit shuts off unexpectedly	Overheat protection activated, timer function expired.	Unplug the unit, allow it to cool for 10-15 minutes, check for and remove any obstructions from air vents. Reset timer if applicable.

SPECIFICATIONS


Feature	Detail
Brand	Electactic
Model Name	C230
Power Source	Corded Electric
Product Dimensions (DxWxH)	3.86"D x 68"W x 18.11"H
Material	Metal
Finish Type	Polished
Installation Type	Wall Mount, Recessed
Heat Output	5100 BTU
Special Features	Adjustable Flame, Dimmer, Flame Effect, Infrared, LED Flame, Multicolor Flame, Safety Shut Off, Timer
Color	Black
Room Type	Bedroom, Living Room
Ventilation Type	Vent Free
Heating Coverage	400 square feet
Included Components	Log, Remote Control
Specific Uses For Product	Indoor
Item Weight	58 Pounds
UPC	757837926873
Manufacturer	Electactic

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Electactic website or contact your authorized retailer. It is recommended to retain your purchase receipt for any warranty claims.

For additional assistance and product information, you may visit the [Electactic Store on Amazon](#).

Related Documents - C230

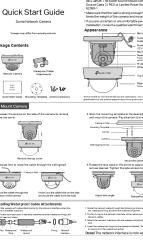	<p>Eldom Sunny C230 Cordless Kettle: User Manual and Safety Information</p> <p>Comprehensive guide to the Eldom Sunny C230 cordless kettle, covering its features, technical specifications, operating instructions, safety precautions, cleaning and maintenance procedures, filter information, environmental protection, and warranty details. This manual is available in multiple languages including English, Polish, German, Russian, Spanish, French, and Italian.</p>
	<p>TP-Link VIGI C230 Network Camera Datasheet</p> <p>Datasheet for the TP-Link VIGI C230 Full-Color Dome Network Camera, detailing features like Human & Vehicle Classification, Smart Detection, IK10 Vandal Proof, IP67 Waterproof, and technical specifications.</p>
	<p>Panasonic Network Camera Setup Guide for BL-C210 and BL-C230</p> <p>Comprehensive setup guide for Panasonic BL-C210 (wired) and BL-C230 (wireless/wired) network cameras. Learn how to install, configure, and connect your camera using the provided CD-ROM and software.</p>
	<p>TP-Link VIGI Dome Network Camera Quick Start Guide</p> <p>Comprehensive guide to installing and setting up your TP-Link VIGI Dome Network Camera, including mounting, NVR connection, and management methods.</p>
	<p>MEKEDE Car Stereo Operating Instructions for Mercedes-Benz</p> <p>Comprehensive operating instructions for the MEKEDE Android Car Stereo system designed for Mercedes-Benz W203/W209 models (2005-2009), covering main interface, radio, music, video, Bluetooth, and system settings.</p>



[Panasonic Network Camera Setup Guide: BL-C210 & BL-C230 Installation and Configuration](#)

Comprehensive setup guide for Panasonic network cameras, models BL-C210 and BL-C230. Learn how to install, configure network settings, access remotely, and use viewer software.