

KARACA 153.03.06.2270

KARACA Coffee Art Aroma Filter Coffee Machine - Model 153.03.06.2270 User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your KARACA Coffee Art Aroma Filter Coffee Machine. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your KARACA Coffee Art Aroma Filter Coffee Machine:



Image: An exploded view showing the main components of the coffee machine, including the digital display, removable water tank (1.35 L), nylon filter, coffee basket, and stainless steel thermos (1.2 L).

Digital Display: Shows time and brewing status.

Control Panel: Buttons for ON/OFF, START, PROGRAM, AUTO, AROMA FUNCTION, HOUR, MIN.

Removable Water Tank (1.35 L): For easy filling and cleaning.

Nylon Filter: Reusable filter for ground coffee.

Coffee Basket: Holds the nylon filter and ground coffee.

Stainless Steel Thermos (1.2 L): Keeps coffee hot for extended periods.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee machine for any damage.
2. **Initial Cleaning:** Before first use, wash the removable water tank, nylon filter, coffee basket, and thermos with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Positioning:** Place the coffee machine on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure adequate ventilation around the appliance.
4. **First Brew Cycle (Cleaning):** Fill the water tank with clean water up to the maximum level. Do not add coffee. Run a full brewing cycle to clean the internal components. Discard the water.

Basic Coffee Brewing



Wasser in den Behälter einfüllen



Drücken Sie die Einschalttaste, um das Gerät zu starten.



Genießen Sie Ihren Kaffee.



Image: A visual guide demonstrating the coffee brewing process, from adding coffee grounds and water to starting the machine and pouring the finished coffee.

1. **Prepare Coffee:** Insert the nylon filter into the coffee basket. Add your desired amount of ground coffee into the filter.
2. **Add Water:** Fill the removable water tank with fresh, cold water up to the desired level (max 1.35 L). Ensure the thermos is correctly placed on the heating plate.
3. **Start Brewing:** Press the "ON/OFF" button, then press the "START" button to begin the brewing process. The digital display will show the brewing progress.
4. **Serve:** Once brewing is complete, carefully remove the thermos and pour your coffee. The stainless steel thermos is designed to keep your coffee hot for an extended period.

Using the Aroma Function



Die spezielle Aromafunktion leitet einen einzigartigen Brühvorgang ein, der das intensive Aroma des Kaffees verstärkt und für einen volleren Geschmack sorgt.

Image: A detailed view of the coffee machine's control panel, highlighting the digital display and various function buttons, including the 'Aroma Function' button.

The Aroma Function enhances the coffee's flavor for a richer taste.

1. Follow steps 1 and 2 for basic brewing.
2. Before pressing "START", press the "AROMA FUNCTION" button. An indicator light may illuminate.
3. Press "START" to begin brewing with the enhanced aroma setting.

Setting the Timer (Programmable Brewing)



Die Timerfunktion sorgt dafür, dass Ihr Kaffee zubereitet wird, wann immer Sie es wünschen.

Image: The coffee machine on a wooden table with a cup of coffee, emphasizing the digital display and control panel, indicating the timer function for scheduled brewing.

The timer function allows you to program the machine to start brewing at a specific time.

1. **Set Current Time:** With the machine plugged in, use the "HOUR" and "MIN" buttons to set the current time on the digital display.
2. **Prepare for Brewing:** Add coffee grounds to the filter and fill the water tank as described in the basic brewing section.
3. **Set Program Time:** Press the "PROGRAM" button. The display will flash. Use the "HOUR" and "MIN" buttons to set your desired brewing start time.
4. **Activate Auto Brew:** Press the "AUTO" button. An indicator light will confirm that the automatic brewing is set. The machine will now start brewing at the programmed time.

CARE AND MAINTENANCE

Daily Cleaning



Image: A hand cleaning the reusable nylon filter under a faucet, accompanied by icons signifying easy cleaning and the recommendation for hand washing.

1. **Unplug:** Always unplug the coffee machine from the power outlet before cleaning.
2. **Wash Removable Parts:** Remove the water tank, nylon filter, coffee basket, and thermos. Wash them with warm, soapy water. Rinse thoroughly and dry completely. The nylon filter should be hand-washed.
3. **Wipe Exterior:** Wipe the exterior of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Do Not Immerse:** Never immerse the main unit of the coffee machine in water or any other liquid.

Descaling

Mineral deposits from water can build up in your coffee machine over time, affecting performance and coffee taste. Regular descaling is essential.

1. **Frequency:** The frequency of descaling depends on the hardness of your water and how often you use the machine. A general recommendation is every 2-4 weeks.
2. **Descaling Solution:** Use a commercially available descaling solution suitable for coffee machines, or a mixture of white vinegar and water (1 part vinegar to 2 parts water).
3. **Process:** Fill the water tank with the descaling solution. Place the empty thermos on the heating plate.

Run a full brewing cycle.

4. **Rinse Cycles:** After the descaling cycle, discard the solution. Fill the water tank with clean water and run at least two full brewing cycles with only water to rinse out any remaining descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew or stops mid-cycle.	Machine needs descaling; water tank empty; power interruption.	Perform descaling procedure; ensure water tank is filled; check power connection.
Coffee is not hot enough.	Thermos not properly sealed; thermos not pre-heated.	Ensure thermos lid is securely closed; pre-heat thermos with hot water before brewing.
Plastic taste in coffee.	New machine residue; insufficient initial cleaning.	Run several cycles with only water; ensure all removable parts are thoroughly cleaned. If problem persists, contact customer support.
Digital display or controls not responding.	Power issue; temporary electronic glitch.	Unplug the machine for a few minutes, then plug it back in. If the issue persists, contact customer support.

TECHNICAL SPECIFICATIONS



GRÖSSENTABELLE

Image: The coffee machine with its key dimensions labeled, including height, width, and depth, along with the power cord length.

Brand: KARACA

Model Number: 153.03.06.2270

Color: Inox (Stainless Steel)

Product Dimensions (L x W x H): 22 x 22 x 34 cm

Water Tank Capacity: 1.35 Liters

Thermos Capacity: 1.2 Liters

Power: 1000 Watts

Voltage: 230 Volts

Material: Stainless Steel







Weight: 3.88 Kilograms

Special Features: Programmable, Timer Function, Aroma Function, Digital Clock, Large Control Panel, Removable Water Tank, Reusable Nylon Filter

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation included with your product packaging or visit the official KARACA website. For technical support, spare parts, or service inquiries, please contact KARACA customer service through their official channels.

Related Documents - 153.03.06.2270

	<p>Karaca Hatir Koz Turkish Coffee Machine User Manual and Warranty</p> <p>Explore the Karaca Hatir Koz Turkish Coffee Machine user manual and warranty certificate. Learn about safety, usage, cleaning, and warranty conditions for your appliance.</p>
	<p>Karaca Hatir Aqua E301 ACM Turkish Coffee Machine User Manual</p> <p>Comprehensive user manual and warranty certificate for the Karaca Hatir Aqua Automatic Water Reservoir Turkish Coffee Machine, model E301 ACM. Learn about safe operation, brewing instructions, cleaning, maintenance, and technical specifications for your Karaca coffee maker.</p>
	<p>Karaca Hatir Kozs Turkish Coffee Maker User Manual and Warranty Certificate</p> <p>Comprehensive user manual and warranty certificate for the Karaca Hatir Kozs Turkish Coffee Maker (Model E205 ECM). Learn about operation, safety, cleaning, and warranty conditions from Karaca Porcelain UK Limited.</p>
	<p>Karaca GrindMaestro Filter Coffee Machine User Manual and Warranty</p> <p>User manual and warranty certificate for the Karaca GrindMaestro Filter Coffee Machine. Includes safety instructions, operating guide, cleaning, and maintenance tips for optimal coffee brewing.</p>
	<p>Karaca Coffee Art 1353 Espresso Maker User Manual and Warranty Certificate</p> <p>User manual and warranty certificate for the Karaca Coffee Art 1353 Espresso Maker, detailing operation, brewing, steaming, maintenance, and safety guidelines for optimal performance.</p>
	<p>Karaca Refika Birgul XL Glass Tea Machine User Manual and Warranty</p> <p>Comprehensive user manual and warranty certificate for the Karaca Refika Birgul XL Glass Tea Machine, detailing operation, safety, cleaning, and warranty conditions.</p>

