

AEG AZE159

AEG AZE159 Ultimate Power Mop Nozzle User Manual

Model: AZE159

1. INTRODUCTION

Thank you for choosing the AEG AZE159 Ultimate Power Mop Nozzle. This accessory is designed to enhance your cleaning experience by providing efficient wet cleaning for hard floors when used with compatible AEG 8000 series cordless vacuum cleaners. Please read this manual thoroughly before initial use to ensure proper setup, operation, and maintenance.

2. SAFETY INFORMATION

- Always ensure the mop nozzle is correctly attached to the vacuum cleaner before operation.
- Do not immerse the mop nozzle in water. Clean only as instructed in the maintenance section.
- Use only clean water or recommended cleaning agents in the spray bottle. Avoid corrosive or flammable liquids.
- Keep hands and loose clothing away from rotating parts during operation.
- Disconnect the mop nozzle from the vacuum cleaner before performing any maintenance or cleaning tasks.
- This product is intended for indoor household use only.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x AEG UltimatePower Mop Nozzle
- 2 x Standard Cleaning Pads
- 1 x Spray Bottle

4. SETUP INSTRUCTIONS

1. **Attach Cleaning Pads:** Securely attach the two standard cleaning pads to the underside of the mop

nozzle. Ensure they are centered and firmly in place. The pads are designed for easy removal and attachment with a loop.

2. **Fill Spray Bottle:** Open the spray bottle and fill it with clean water. You may add a small amount of compatible floor cleaning agent if desired. Do not overfill.
3. **Attach Spray Bottle:** Mount the filled spray bottle onto the hand part of your AEG 8000 cordless vacuum cleaner. Ensure it is securely fastened.
4. **Connect Mop Nozzle:** Attach the UltimatePower mop nozzle to the main body of your AEG 8000 cordless vacuum cleaner. Ensure a firm connection.



Image 4.1: The AEG Ultimate Power Mop Nozzle with cleaning pads attached.



Image 4.2: Close-up of the two standard cleaning pads.



Image 4.3: The spray bottle designed to attach to the vacuum's hand part.

5. OPERATION

1. **Power On:** Turn on your AEG 8000 cordless vacuum cleaner. The mop nozzle's rotating pads will begin to spin.
2. **Spray Function:** To dispense water or cleaning solution, manually press the trigger on the spray bottle. Dose the amount of liquid as needed for the cleaning task.

3. **Cleaning:** Guide the mop nozzle across your hard floors. The rotating pads will effectively remove dirt and grime. The integrated LED lights will illuminate the cleaning path, making dust and debris visible even in dimly lit areas or under furniture.
4. **Maneuvering:** The low profile (6.2 cm height) of the mop nozzle allows it to reach under furniture and into tight spaces for thorough cleaning.
5. **Power Off:** Once cleaning is complete, turn off your vacuum cleaner.



Image 5.1: Demonstrating the use of the mop nozzle with the vacuum.



Image 5.2: The mop nozzle in action, highlighting the LED lights.



Image 5.3: The rotating pads effectively cleaning a spill.

6. MAINTENANCE

- **Cleaning Pads:** After each use, remove the cleaning pads from the mop nozzle. The pads are machine washable for easy cleaning. Allow them to air dry completely before reattaching or storing.
- **Spray Bottle:** Empty any remaining liquid from the spray bottle after use. Rinse the bottle with clean water to prevent residue buildup.
- **Mop Nozzle Body:** Wipe the exterior of the mop nozzle with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the mop nozzle and accessories in a clean, dry place. Ensure the spray bottle is empty before storage. Note: The spray bottle may need to be removed from the vacuum for charging station compatibility.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

 
 

Problem	Possible Cause	Solution
No water is dispensed from the spray bottle.	Spray bottle is empty or clogged.	Refill the spray bottle. Check the nozzle for any blockages and clear if necessary. Ensure the bottle is correctly attached.
Mop nozzle not cleaning effectively.	Pads are dirty or worn. Insufficient pressure applied.	Clean or replace the cleaning pads. Apply gentle downward pressure on the vacuum cleaner during operation to enhance cleaning performance.
Mop nozzle not rotating.	Not properly connected to the vacuum. Obstruction.	Ensure the mop nozzle is securely attached to the vacuum cleaner. Check for any debris obstructing the rotating mechanism.

8. SPECIFICATIONS

Feature	Detail
Brand	AEG
Model Name	AZE159
Color	Black
Product Dimensions (L x W x H)	12.2" x 12.99" x 2.76"
Item Weight	2.75 pounds
Special Feature	Lightweight, LED lights
Included Components	Mop Nozzle, 2 Standard Pads, Spray Bottle
Recommended Use	Hard bottom floors

9. WARRANTY AND SUPPORT

This AEG product comes with a standard manufacturer's warranty. For detailed warranty information, service, or support, please refer to the documentation included with your AEG 8000 cordless vacuum cleaner or visit the official AEG website. Keep your proof of purchase for warranty claims. For further assistance, you may contact AEG customer support through their official channels. Please have your model number (AZE159) ready when contacting support.

<p>AEG Instruction Book</p>  <p>8000 CORDLESS CLEANER</p>	<p>AEG 8000 Cordless Cleaner: Instruction Manual, User Guide, and Accessories</p> <p>User manual and guide for the AEG 8000 Cordless Cleaner. Includes setup, operation, maintenance, safety instructions, and a list of available accessories and parts with model numbers.</p>
<p>AEG Instruction Book</p>  <p>ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p>AEG ULTIMATE 8000, ANIMAL 8000, HYGIENIC 8000 Cordless Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for AEG ULTIMATE 8000, ANIMAL 8000, and HYGIENIC 8000 cordless vacuum cleaners. Covers assembly, operation, maintenance, safety, and accessory information.</p>
<p>AEG Instruction Book</p>  <p>ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p>AEG Ultimate 8000 Series Cordless Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for AEG Ultimate 8000, Animal 8000, and Hygienic 8000 series cordless vacuum cleaners. Includes assembly, usage, maintenance, and accessory information.</p>
<p>AEG Instruction Book</p>  <p>ULTIMATE 8000 ANIMAL 8000 HYGIENIC 8000</p>	<p>AEG 8000 Series Cordless Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for AEG 8000 series cordless vacuum cleaners, including Ultimate, Animal, and Hygienic models. Covers assembly, usage, maintenance, and accessory information.</p>
<p>AEG Instruction Book</p>  <p>ULTIMATE 7000 ANIMAL 7000 HYGIENIC 7000</p>	<p>AEG 7000 Series Cordless Stick Vacuum Cleaner: Ultimate, Animal, Hygienic - Instruction Manual</p> <p>Comprehensive instruction manual for the AEG 7000 Series cordless stick vacuum cleaners, including Ultimate, Animal, and Hygienic models. Learn about assembly, charging, operation, maintenance, and accessories.</p>
<p>AEG Instruction Book</p>  <p>6000 CORDLESS CLEANER</p>	<p>AEG 6000 Cordless Cleaner Instruction Book</p> <p>This document provides instructions for the AEG 6000 Cordless Cleaner, covering assembly, charging, operation, maintenance, and troubleshooting. It details various accessories and their uses.</p>