

paperang C1S

Paperang C1S Bluetooth Thermal Label Printer User Manual

Model: C1S | Brand: Paperang

1. INTRODUCTION AND OVERVIEW

The Paperang C1S is a portable Bluetooth thermal label printer designed for versatile printing needs, including shipping labels, barcode labels, and household labels. With a high resolution of 300 dpi, it delivers clear and crisp prints without the need for ink. Its compact design and wireless connectivity make it an ideal solution for small businesses, home offices, and personal organization.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Paperang C1S Thermal Printer
- 4-Inch Thermal Paper Roll
- USB-C Cable
- Quick Start Guide (User Manual)



Image: The Paperang C1S printer, a USB-C charging cable, a roll of 4-inch thermal paper, and the user manual, illustrating the complete package contents.

3. SETUP GUIDE

3.1 Powering On and Charging

The Paperang C1S printer is equipped with two internal Lithium Ion batteries. Before first use, it is recommended to fully charge the device. Connect the included USB-C cable to the printer's charging port and plug the other end into

a compatible USB power adapter (not included) or a computer's USB port. The indicator light will show charging status.

3.2 Loading Thermal Paper

The C1S printer supports thermal paper rolls of various widths. Follow these steps to load paper:

1. Gently open the printer's top cover.
2. Insert the thermal paper roll into the paper compartment, ensuring the printing side of the paper faces upwards and the roll is aligned correctly.
3. Pull a small length of paper out beyond the print head.
4. Close the top cover firmly until it clicks into place. Ensure the paper feeds smoothly through the slot.

The printer supports 2-inch (57mm), 3-inch (80mm), and 4-inch (110mm) thermal paper rolls, with a maximum media size of 4 x 6 inches.

3 sizes Thermal Paper



Image: The Paperang C1S printer positioned next to three rolls of thermal paper, demonstrating the compatibility with 2-inch, 3-inch, and 4-inch paper widths.

3.3 App Installation and Bluetooth Connection

To operate the printer, you need to download the official Paperang app on your smartphone or tablet. The app is compatible with both iOS and Android devices.

1. Search for "Paperang" in your device's app store (Apple App Store or Google Play Store) and install it.
2. Ensure Bluetooth is enabled on your mobile device.
3. Open the Paperang app. The app will guide you through the process of connecting to your C1S printer via

Bluetooth. Select your printer from the list of available devices.

4. Once connected, the printer's indicator light will confirm the successful pairing.



Image: A smartphone displaying the Paperang app, highlighting its user-friendly interface and the variety of templates available for printing.

4. OPERATING INSTRUCTIONS

4.1 Printing Labels

The Paperang C1S utilizes thermal printing technology, meaning no ink cartridges are required. All printing is done through the Paperang app.

1. Ensure your printer is powered on and connected to the app via Bluetooth.
2. Within the Paperang app, select the type of content you wish to print (e.g., shipping label, barcode, text, image).
3. Adjust the content as needed using the app's editing tools.
4. Confirm the print settings and tap the print button. The printer will automatically feed and print the label.



Image: The Paperang C1S printer in operation, with a shipping label emerging from its output slot, demonstrating its primary function.

4.2 Using Printing Templates

The Paperang app offers a wide array of pre-designed templates for various purposes, enhancing the utility of your printer. These include templates for to-do lists, sticky notes, business cards, and various decorative designs.

- Navigate to the 'Templates' section within the Paperang app.
- Browse and select a template that suits your needs.
- Customize the template with your desired text or images.
- Proceed to print as described in Section 4.1.



Image: A collection of diverse printouts from the Paperang C1S, showcasing the variety of templates available in the app, such as to-do lists, decorative frames, and small images.

4.3 Supported Shipping Platforms

The Paperang C1S is compatible with various popular shipping and e-commerce platforms, allowing you to print shipping labels directly. This includes, but is not limited to:

- Amazon
- eBay
- Walmart

- PayPal
- Wish
- Easyship
- Shopify
- LaserShip
- DHL
- OnTrac
- FedEx
- Etsy
- Shippo
- USPS
- UPS

Shipping Made Easier

amazon

ebay

Walmart

PayPal

wish

easyship

shopify

LASERSHIP

DHL

OnTrac
On Time Delivery For Less

FedEx

Etsy

shippo

UNITED STATES
POSTAL SERVICE

ups



Image: A visual representation of multiple e-commerce and shipping platform logos, indicating the broad compatibility of the Paperang C1S printer for generating shipping labels.

5. MAINTENANCE

5.1 Cleaning the Printer

To ensure optimal print quality and prolong the life of your printer, regular cleaning is recommended:

- **Exterior:** Wipe the exterior of the printer with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Print Head:** If print quality degrades (e.g., faint lines, missing dots), the print head may need cleaning. Use a cotton swab lightly dampened with isopropyl alcohol to gently wipe the print head surface. Allow it to dry completely before closing the cover and resuming use.

5.2 Storage

Store the printer in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the printer is turned off and fully charged to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your Paperang C1S printer, refer to the common problems and solutions below:

- **Printer not connecting via Bluetooth:**
Ensure the printer is powered on and within range. Restart both the printer and your mobile device. Check that Bluetooth is enabled on your device and try re-pairing through the Paperang app.
- **Poor print quality (faint, blurry, or incomplete prints):**
Check if the thermal paper is loaded correctly with the printing side facing up. Ensure the paper roll is not old or damaged. Clean the print head as described in Section 5.1. Verify that the image or text being printed is of sufficient resolution. The C1S offers 300 dpi resolution for clear prints.



Paperang C1S 300dpi

Others 200dpi

PAPERANG

300dpi HD

Inkless Printing with Ease

Image: A side-by-side comparison illustrating the superior clarity and detail of a 300 dpi print (left) versus a 200 dpi print (right), emphasizing the high resolution capability of the Paperang C1S.

- **Paper jam:**

Turn off the printer immediately. Carefully open the top cover and gently remove any jammed paper. Ensure no paper fragments remain before closing the cover and restarting.

- **Printer not responding:**

Check if the battery is charged. Connect the printer to a power source. If the issue persists, perform a factory reset if available (refer to the Quick Start Guide for specific instructions).

For further assistance, please refer to the Paperang app's help section or contact customer support.

7. SPECIFICATIONS

Model Name	C1S
Brand	Paperang
Printing Technology	Thermal
Connectivity Technology	Bluetooth, USB
Maximum Color Print Resolution	300 x 300 Dots Per Inch
Print Media	Labels
Sheet Size	2/3/4 Inches (57/80/110mm)
Maximum Media Size	4 x 6 inch
Compatible Devices	Laptops, PC, Smartphones
Item Weight	1.43 pounds
Product Dimensions	6 x 4 x 2 inches
Batteries	2 Lithium Ion batteries (included)
UPC	750888169084

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Paperang C1S Bluetooth Thermal Label Printer comes with a Standard Warranty of 1 year from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical support, troubleshooting assistance, or warranty inquiries, please contact Paperang customer service. You can find more information and contact details on the official Paperang store page:

[Visit the Paperang Store on Amazon](#)