

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Yale](#) /

> [Yale YSS/250/DB2 Electronic Safe Locker User Manual](#)

## Yale YSS/250/DB2

# Yale YSS/250/DB2 Electronic Safe Locker User Manual

### INTRODUCTION

Welcome to your new Yale Electronic Safe Locker. This manual provides essential information for the safe and efficient operation of your safe. Please read it thoroughly before installation and use to ensure proper functionality and security.

### SAFETY INFORMATION

- **Important Safeguards:**
- Do not store the override keys inside the safe. Keep them in a secure, separate location.
- Keep the safe locked when not in use to maintain security.
- Ensure the safe is securely mounted to a floor or wall to prevent unauthorized removal.
- Replace batteries promptly when the low battery indicator appears to avoid lockout.

### PACKAGE CONTENTS

The package should contain the following items:

- 1 x Yale YSS/250/DB2 Electronic Safe Locker
- 2 x Security Override Keys
- 4 x AA Batteries (1.5V)
- Fixing Bolts for installation
- User Manual

### SETUP AND INSTALLATION

#### 1. Battery Installation

1. Open the safe using one of the provided override keys.
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

## 2. Mounting the Safe

The safe can be securely mounted to a floor or wall for added security.

1. Position the safe in the desired location, ensuring it is level.
2. Mark the drilling points through the pre-drilled holes located at the back or bottom of the safe.
3. Drill pilot holes suitable for the provided fixing bolts.
4. Secure the safe using the fixing bolts, tightening them firmly.
5. Ensure the safe is firmly attached and cannot be easily removed.



A side view of the Yale YSS/250/DB2 safe, illustrating its robust construction and indicating potential mounting points for secure installation.

## OPERATING INSTRUCTIONS

### 1. Initial Code Setting

1. With the safe door open, press the red reset button located on the inside of the door.
2. The display will show "PROG".
3. Enter a new 3 to 8 digit code, then press "START" or "E".
4. The display will show "GOOD" to confirm the new code is set.

5. Test the new code with the door open before closing to ensure it works correctly.

## **2. Opening the Safe**

1. Enter your 3 to 8 digit code on the keypad.
2. Press "START" or "E".
3. The display will show "OPEN".
4. Turn the handle clockwise within 5 seconds to open the door.

## **3. Locking the Safe**

- Close the door and turn the handle counter-clockwise. The safe will automatically lock.

## **4. Changing the User Code**

1. Open the safe using your current code.
2. Press the red reset button on the inside of the door.
3. The display will show "PROG".
4. Enter a new 3 to 8 digit code, then press "START" or "E".
5. The display will show "GOOD" to confirm the code change.

## **5. Manual Override (Emergency Key)**

- If the batteries are depleted or the code is forgotten, insert the override key into the keyhole (typically hidden behind a small cover near the keypad).
- Turn the key clockwise and simultaneously turn the handle to open the safe.

# DIGITAL MECHANISM



  
Keypad auto freezes  
after consecutive  
wrong password  
attempts

  
Safe opens  
with 3-6 digit  
secret password



A detailed view of the safe's digital keypad, showing the number buttons, 'START' button, and the LCD display for code entry and status messages.

## MAINTENANCE

### Battery Replacement

- When the low battery indicator appears on the display, replace all 4 AA batteries promptly.
- Use only new, high-quality alkaline batteries for optimal performance.

### Cleaning

- Wipe the safe exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- Ensure no moisture enters the keypad or electronic components.

## TROUBLESHOOTING

### Safe does not open with code:

- Ensure batteries are not depleted. Replace if necessary.
- Verify the code entered is correct. Try again slowly and carefully.

- If 4 incorrect attempts are made, the keypad will lock for 3 minutes as a security measure. Wait for the lockout period to end.
- Use the manual override key if all other methods fail.

### **Keypad is unresponsive:**

- Check battery installation and charge. Replace batteries if they are low or dead.
- Ensure no foreign objects are obstructing the buttons.

### **Alarm sounds unexpectedly:**

- The alarm sounds after 4 incorrect code entries. This is a built-in security feature.
- The alarm will sound for 3 minutes before resetting.


## **SPECIFICATIONS**

- **Model:** Yale YSS/250/DB2
- **Lock Type:** Electronic
- **Capacity:** 26.8 litres
- **Material:** Alloy Steel
- **Mounting Type:** Floor Mount, Wall Mount
- **Alarm:** Visual (after incorrect entries)
- **Power:** 4 x AA (1.5V) batteries
- **Locking Bolts:** Two anti-saw locking bolts (16 mm)



A front view of the Yale YSS/250/DB2 Electronic Safe Locker, showcasing its compact design and digital keypad.

## ABUNDANT STORAGE SPACE

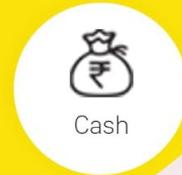

The safe's interior, with the door open, revealing the carpeted floor and ample space for documents, cash, and other valuables.

### WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the official Yale website or contact your local Yale distributor. It is recommended to keep your purchase receipt as proof of purchase for warranty claims.