

## Jedel GH-234

# Jedel Gaming Headphone GH-234 User Manual

Model: GH-234

## INTRODUCTION

Thank you for choosing the Jedel Gaming Headphone GH-234. This manual provides essential information for setting up, operating, and maintaining your new gaming headset. Please read this manual thoroughly before use to ensure proper functionality and to maximize your gaming experience.

## PRODUCT OVERVIEW

The Jedel GH-234 is a wired gaming headphone designed for immersive audio experiences. It features virtual 7.1 surround sound, a built-in microphone, and dynamic 7-color lighting to enhance your gaming setup. Its lightweight design ensures comfort during extended use.



**Figure 1:** Jedel GH-234 Gaming Headphone. This image displays the black over-ear headphones with a flexible microphone and illuminated earcups featuring a multi-color light effect.

## PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- Jedel GH-234 Gaming Headphone with integrated USB cable
- Ear Cushions (pre-installed)
- Headband (pre-installed)
- User Manual (this document)



**Figure 2:** Jedel GH-234 Headphone alongside its retail packaging. The image shows the headphone on a stand next to its black box, highlighting the product's design and branding.

## SETUP INSTRUCTIONS

---

1. **Connect to PC:** Plug the USB connector of the Jedel GH-234 headphone into an available USB port on your computer.
2. **Automatic Driver Installation:** Your operating system (Windows, macOS) should automatically detect the device and install the necessary drivers. This process may take a few moments.
3. **Verify Audio Output:**
  - **Windows:** Right-click the speaker icon in the taskbar, select "Sound settings," and ensure "Jedel GH-234" or a similar device name is selected as the output and input device.
  - **macOS:** Go to "System Preferences" > "Sound," and select "Jedel GH-234" under both "Output" and "Input" tabs.
4. **Adjust Volume:** Use the inline volume control on the headphone cable or your computer's system volume settings to adjust the audio level.
5. **Microphone Setup:** Ensure the microphone is positioned correctly near your mouth for clear communication. The microphone is flexible and can be adjusted.



**Figure 3:** Close-up view of the Jedel GH-234 headphone earcup and microphone. This image highlights the detailed texture of the earcups and the adjustable microphone arm, with the product box blurred in the background.

## OPERATING INSTRUCTIONS

---

### Volume Control

The Jedel GH-234 features an inline volume control wheel located on the cable. Rotate the wheel up to increase volume and down to decrease volume. You can also adjust the volume through your computer's operating system settings.

### Microphone Usage

The flexible microphone can be adjusted to your preferred position. Ensure it is close to your mouth for optimal voice pickup. There is typically an inline switch on the cable to mute or unmute the microphone. Refer to the physical controls on your cable.

### 7-Color Lighting

The earcups feature dynamic 7-color lighting that activates automatically when the headphone is connected via USB. This lighting is for aesthetic purposes and typically cycles through colors without user control. If there is a specific button for lighting control, it will be located on the inline remote.

### Virtual 7.1 Sound

The virtual 7.1 surround sound feature is typically enabled through the headphone's USB connection and associated drivers. For some systems, additional software or sound card settings may be required to fully utilize this feature. Consult your operating system's sound settings or Jedel's official support website for specific software if needed.

## MAINTENANCE AND CARE

---

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.

- **Cable Care:** Avoid sharp bends or excessive pulling on the cable to prevent damage.
- **Ear Cushions:** Periodically check ear cushions for wear and tear. Replacement cushions may be available from the manufacturer or authorized retailers.

## TROUBLESHOOTING

| Problem                      | Possible Solution                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound from headphones     | <ul style="list-style-type: none"><li>• Ensure the USB connector is fully plugged into the computer.</li><li>• Check the inline volume control and increase the volume.</li><li>• Verify that "Jedel GH-234" is selected as the default audio output device in your computer's sound settings.</li><li>• Try plugging the headphone into a different USB port.</li><li>• Restart your computer.</li></ul>     |
| Microphone not working       | <ul style="list-style-type: none"><li>• Ensure the microphone is not muted via the inline control.</li><li>• Verify that "Jedel GH-234" is selected as the default audio input device in your computer's sound settings.</li><li>• Check privacy settings in your operating system that might restrict microphone access for applications.</li><li>• Ensure the microphone is positioned correctly.</li></ul> |
| 7-Color lighting not working | <ul style="list-style-type: none"><li>• Ensure the USB connector is properly connected and receiving power.</li><li>• Try a different USB port.</li><li>• The lighting is typically automatic; there may not be a manual control.</li></ul>                                                                                                                                                                   |

## SPECIFICATIONS

|                          |                                       |
|--------------------------|---------------------------------------|
| Model Name               | GH-234                                |
| Brand                    | Jedel                                 |
| Connectivity Technology  | Wired (USB)                           |
| Headphones Form Factor   | Over Ear                              |
| Headphones Ear Placement | On Ear                                |
| Sound Feature            | Virtual 7.1 Sound                     |
| Lighting                 | 7-Color Lighting                      |
| Included Components      | Ear Cushions, Headband                |
| Color                    | Black                                 |
| Weight                   | Lightweight (as per product features) |

## SAFETY INFORMATION

- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Do not expose the headphones to water or excessive moisture.

- Keep out of reach of children.
- Do not attempt to disassemble or modify the headphones, as this may void the warranty and cause damage.
- Use only with compatible devices.

## WARRANTY AND SUPPORT

Jedel products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your purchase or visit the official Jedel website. Keep your proof of purchase for warranty claims.

© 2023 Jedel. All rights reserved. Information in this manual is subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question