

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LG](#) /

> [LG CordZero A913 - Cordless Stick Vacuum Cleaner, 60 Minute Runtime w/ Rechargeable Battery, Lightweight, Powerful Cleaning for Carpet, Hardwood, Pet Hair, Portable Charging Stand](#)

LG A913BM

LG CordZero A913 Cordless Stick Vacuum Cleaner Instruction Manual

Model: A913BM

Brand: LG

PRODUCT OVERVIEW

The LG CordZero A913BM Stick Vacuum Cleaner is designed for powerful and convenient cleaning across various floor types. It features a detachable, rechargeable battery for extended runtime, a portable charging stand for flexible storage, and a user-friendly one-touch control system. Its advanced 5-step filtration system helps capture fine dust and allergens, ensuring a cleaner home environment. The direct drive motor in the nozzle cleaning head effectively lifts dirt and pet hair from both hardwood floors and carpets. The versatile design also allows for easy conversion to a handheld vacuum for quick spot cleaning.

Key Features:

- **POWERFUL SUCTION, BUILT TO LAST:** The LG Smart Inverter Motor provides powerful suction across a range of floor types and is backed by a 10-year limited warranty for lasting peace of mind.
- **REMOVABLE, RECHARGEABLE BATTERY:** The LG CordZero A913BM Stick Vacuum features a detachable quick release battery for up to 50 minutes* of long lasting cleaning performance. *In normal mode without Power Nozzles using one battery.
- **PORTABLE CHARGING STAND LETS YOU STORE AND CHARGE ANYWHERE:** You decide where and how to store your LG CordZero vacuum—the self-standing design maintains a low profile in any room but may also be wall mounted if you prefer. Keeps accessories neatly organized and within easy reach. Store and charge a second battery** on the stand so you never run out of power.
- **EASY CLEANING WITH JUST A TOUCH:** One-touch control lets you turn the vacuum on and off or select different power levels, including Turbo mode, with just a single touch of a thumb. That means less strain on your hand and a more comfortable clean.
- **WASHABLE CYCLONE & FILTERS FOR EASY MAINTENANCE:** Extend the life of your vacuum with easy to maintain removable and washable filters. Unlike other vacuums that only let you remove the filter, LG CordZero lets you remove both the filter and the cyclone system to clean away dirt and keep your vacuum running at its best.
- **FILTERS OUT DUST, DIRT AND ALLERGENS:** Keep dust where it belongs with the 5-step filtration system.

Helps filter 99.9% of dust*** by separating suctioned particles in the dust bin and then filtering the remaining fine dust, pollen and pet dander.

- **CLEAN CARPETS AND HARD FLOOR SURFACES WITH EASE:** Effectively lifts dust, dirt and pet hair from hardwood floors and carpets thanks to the direct drive motor inside the nozzle cleaning head.
- **TRANSFORMS TO HAND VACUUM FOR QUICK SPOT CLEANING:** Detach the hand vacuum for quick and easy spot cleaning. Easily switch between floors and furniture, or even use it to vacuum your car, with the versatility of the detachable handheld vacuum.

SETUP AND ASSEMBLY

The LG CordZero A913BM is designed for easy setup, allowing you to quickly begin cleaning. Follow these steps for initial assembly and charging.

1. Charging Stand Assembly and Placement

The portable charging stand offers flexible placement options. You can use it as a self-standing unit or mount it to a wall. Ensure the charging cable is connected to a power outlet.

Easily Store and Charge *Anywhere, Anytime*



Image: The LG CordZero A913BM vacuum cleaner docked on its portable charging stand, illustrating both freestanding and wall-mounted configurations. The stand also provides storage for accessories.

2. Battery Installation and Initial Charge

Insert the rechargeable battery into the main body of the vacuum. Place the vacuum on the charging stand to begin the initial charge. A full charge takes approximately 3.5 hours.

Removable, Rechargeable Up to *50 Minutes* of Run Time



Image: A hand is shown inserting the bright yellow rechargeable battery into the main unit of the LG CordZero A913BM vacuum, highlighting the easy-to-detach battery feature.

3. Attaching the Wand and Nozzle

Connect the telescoping wand to the main body, and then attach the universal power nozzle to the end of the wand. Ensure all connections are secure.





Image: The LG CordZero A913BM Cordless Stick Vacuum Cleaner is shown fully assembled and standing upright on its charging base, ready for use.

OPERATING INSTRUCTIONS

The LG CordZero A913BM offers intuitive controls for efficient cleaning.

1. Power On/Off and Suction Control

To power on the vacuum, simply press the power button located on the handle. Use the '+' and '-' buttons to adjust the suction power. For stubborn dirt, press and hold the 'Turbo' button for increased suction.

Easily Store and Charge *Anywhere, Anytime*



Image: A hand is shown pressing the power button and adjusting the suction levels (+/-) on the handle of the LG CordZero A913BM vacuum, demonstrating its one-touch control feature.

Your browser does not support the video tag.

Video: This video demonstrates the one-touch control system of the LG CordZero vacuum, showing how to easily power it on and adjust suction settings without continuously holding a button.

2. Cleaning Different Surfaces

The universal power nozzle is effective on both carpets and hard floors. The vacuum's lightweight design and flexible head allow for easy maneuverability around furniture and into tight spaces.



Clean Carpets and Hard Floor Surfaces *with Ease*

Image: The LG CordZero A913BM vacuum is shown actively cleaning a light-colored carpet, demonstrating its effectiveness on soft floor surfaces.

3. Hand Vacuum Conversion

For quick spot cleaning or reaching elevated areas, detach the main body from the wand to use it as a handheld vacuum. This is ideal for cleaning furniture, car interiors, or ceiling corners.

One-Touch Control



Image: The LG CordZero A913BM is shown in its handheld configuration, being used to clean the interior of a car, highlighting its versatility for various cleaning tasks.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your LG CordZero vacuum.

1. Emptying the Dust Bin

To empty the dust bin, locate the release lever and open the bin. Dispose of collected debris into a trash receptacle. Close the bin securely after emptying.

The *5-Step Filtration System* Helps to Filter *99.99%* of Dust



Image: A close-up view of the LG CordZero A913BM's dust bin, showing the mechanism for opening and emptying collected dirt and debris.

2. Cleaning the 5-Step Filtration System

The 5-step filtration system, including the metal dust filter, 1st & 2nd cyclones, pre-filter, and fine dust filter, can be removed and washed for thorough cleaning. Allow all components to air dry completely before reassembling.

Removable & Washable Filters for *Easy* Maintenance



Image: An exploded view diagram illustrating the five components of the LG CordZero A913BM's filtration system: Metal Dust Filter, 1st & 2nd Cyclones, Pre-filter, and Fine Dust Filter.



Image: The washable components of the LG CordZero A913BM's filtration system (Pre-Filter, Cyclone Filter, Fine Dust Filter) are shown being rinsed under running water, emphasizing ease of maintenance.

TROUBLESHOOTING

If you encounter issues with your LG CordZero A913BM, try these common troubleshooting steps:

- **No Power/Short Runtime:** Ensure the battery is fully charged. Check that the charging stand is properly connected to a power outlet. The battery may need replacement after extended use.

- **Reduced Suction:** Empty the dust bin. Clean all filters thoroughly as described in the Maintenance section. Check the nozzle and wand for any blockages.
- **Unusual Noise:** Inspect the brush roll in the power nozzle for tangled hair or debris. Ensure all parts are securely assembled.
- **Vacuum Not Picking Up Debris:** Verify the power nozzle is correctly attached and the brush roll is spinning. Check for blockages in the air path.

For persistent issues, please refer to the full user manual or contact LG customer support.

SPECIFICATIONS

Feature	Detail
Brand	LG
Model Name	CordZero A913
Model Number	A913BM
Special Feature	Portable, Lightweight, Cordless, Long Lasting Battery, Washable Filter
Filter Type	5-Step Filtration System
Included Components	Universal Power Nozzle, Portable Charging Stand, Crevice Tool, Telescoping Wand, Battery, Combination Tool, Filters
Is Cordless?	Yes
Capacity	13.5 ounces
Wattage	160 watts
Runtime	50 minutes
Charging Time	3.5 Hours
Recommended Uses For Product	Carpet, Hard Floor
Form Factor	Stick
Color	Black/Silver
Product Dimensions	10.2"L x 10.6"W x 44.1"H
Battery Description	Lithium-Ion
Noise Level	84 dB
Manufacturer	LG
Controller Type	One Touch
UPC	048231029124

Item Weight	5.95 pounds
Country of Origin	Vietnam

WARRANTY AND SUPPORT

The LG CordZero A913BM comes with the following warranty coverage:

- **Product Warranty:** 1 year limited warranty.
- **Motor Warranty:** 10 year motor warranty.

For detailed warranty information, product support, or to purchase replacement parts and accessories, please visit the official LG website or contact LG customer service.

Visit the LG Store: [LG Electronics Official Store](#)