

## PRETTYCARE W200, W300 Replacement Filter Sponge

# PRETTYCARE Vacuum Cleaner Replacement Filter Sponge User Manual

For PRETTYCARE W200 and W300 Cordless Vacuum Cleaners

## INTRODUCTION

This manual provides essential information for the proper use and maintenance of your PRETTYCARE Replacement Filter Sponge. Designed for compatibility with PRETTYCARE W200 and W300 cordless vacuum cleaners, this filter is crucial for maintaining optimal suction performance and air quality.

The filter is engineered with high-density material to effectively capture fine dust and particles, ensuring a cleaner environment. Regular maintenance and timely replacement are key to extending the life of your vacuum cleaner and ensuring efficient operation.

## SETUP AND INSTALLATION

Installing the PRETTYCARE Replacement Filter Sponge is a straightforward process that requires no special tools.

- 1. Remove the Dust Bin:** First, detach the dust bin from your PRETTYCARE W200 or W300 vacuum cleaner according to your vacuum's specific instructions.
- 2. Locate the Old Filter:** Inside the dust bin, identify and carefully remove the existing filter.
- 3. Insert New Filter:** Place the new PRETTYCARE Replacement Filter Sponge into the designated slot within the dust bin. Ensure it fits snugly and is properly seated to prevent air leakage.
- 4. Reattach Dust Bin:** Reconnect the dust bin to your vacuum cleaner, ensuring it locks securely into place.

**Suitable for PRETTYCARE  
vacuum cleaner W200, W300**



Image: The PRETTYCARE Replacement Filter Sponge is compatible with both W200 and W300 cordless vacuum cleaner models, shown here with both vacuum units.

# 3~4 Months Regular Replacement



Image: A hand demonstrates the process of installing the filter into the vacuum cleaner's dust collection system.

## OPERATING PRINCIPLES

The PRETTYCARE Replacement Filter Sponge is a critical component in your vacuum cleaner's filtration system. It is designed to capture microscopic dust, allergens, and other airborne particles, preventing them from being released back into your environment.

The filter utilizes a multi-layer, high-density material that can effectively trap particles as small as 0.1 microns, contributing to cleaner air and maintaining the vacuum's suction power.

# High Density Filter Cotton

Multi-layer dust filter, let your family enjoy Cleaner Air  
Filters dust and particles as small as **0.1** microns

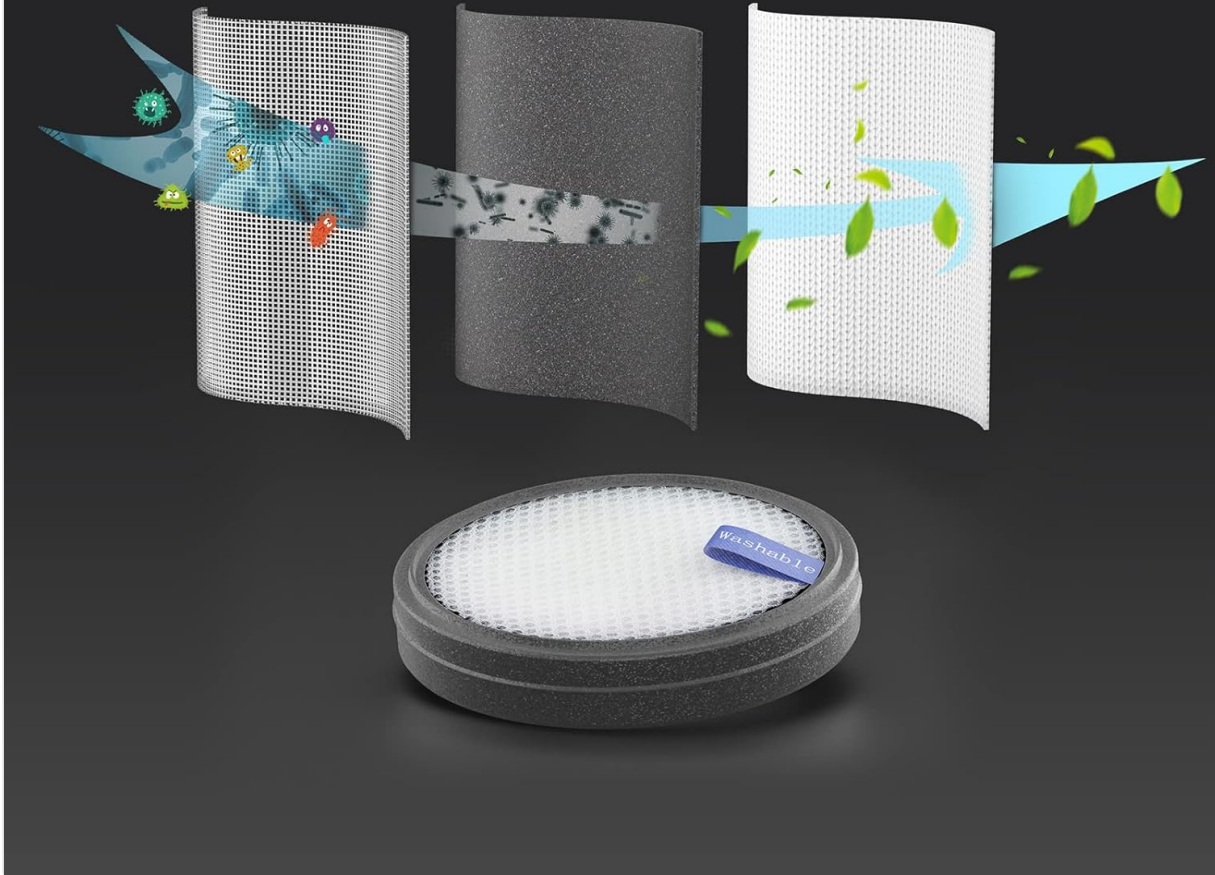 


Image: A diagram illustrating the multi-layer filtration process, showing how the high-density filter cotton captures dust and particles down to 0.1 microns.

## MAINTENANCE

Proper maintenance of your filter sponge ensures optimal performance and longevity of your vacuum cleaner.

### Cleaning the Filter

The PRETTYCARE Replacement Filter Sponge is washable and reusable. Follow these steps for cleaning:

- 1. Remove Filter:** Detach the dust bin and remove the filter as described in the "Setup and Installation" section.
- 2. Rinse with Water:** Rinse the filter under cool, running water until the water runs clear. Gently squeeze the filter to remove excess water and dislodge trapped debris. Do not use detergents or hot water.
- 3. Air Dry Completely:** Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Ensure it is thoroughly dry to prevent mold growth and damage to the vacuum.

# Easy Cleaning

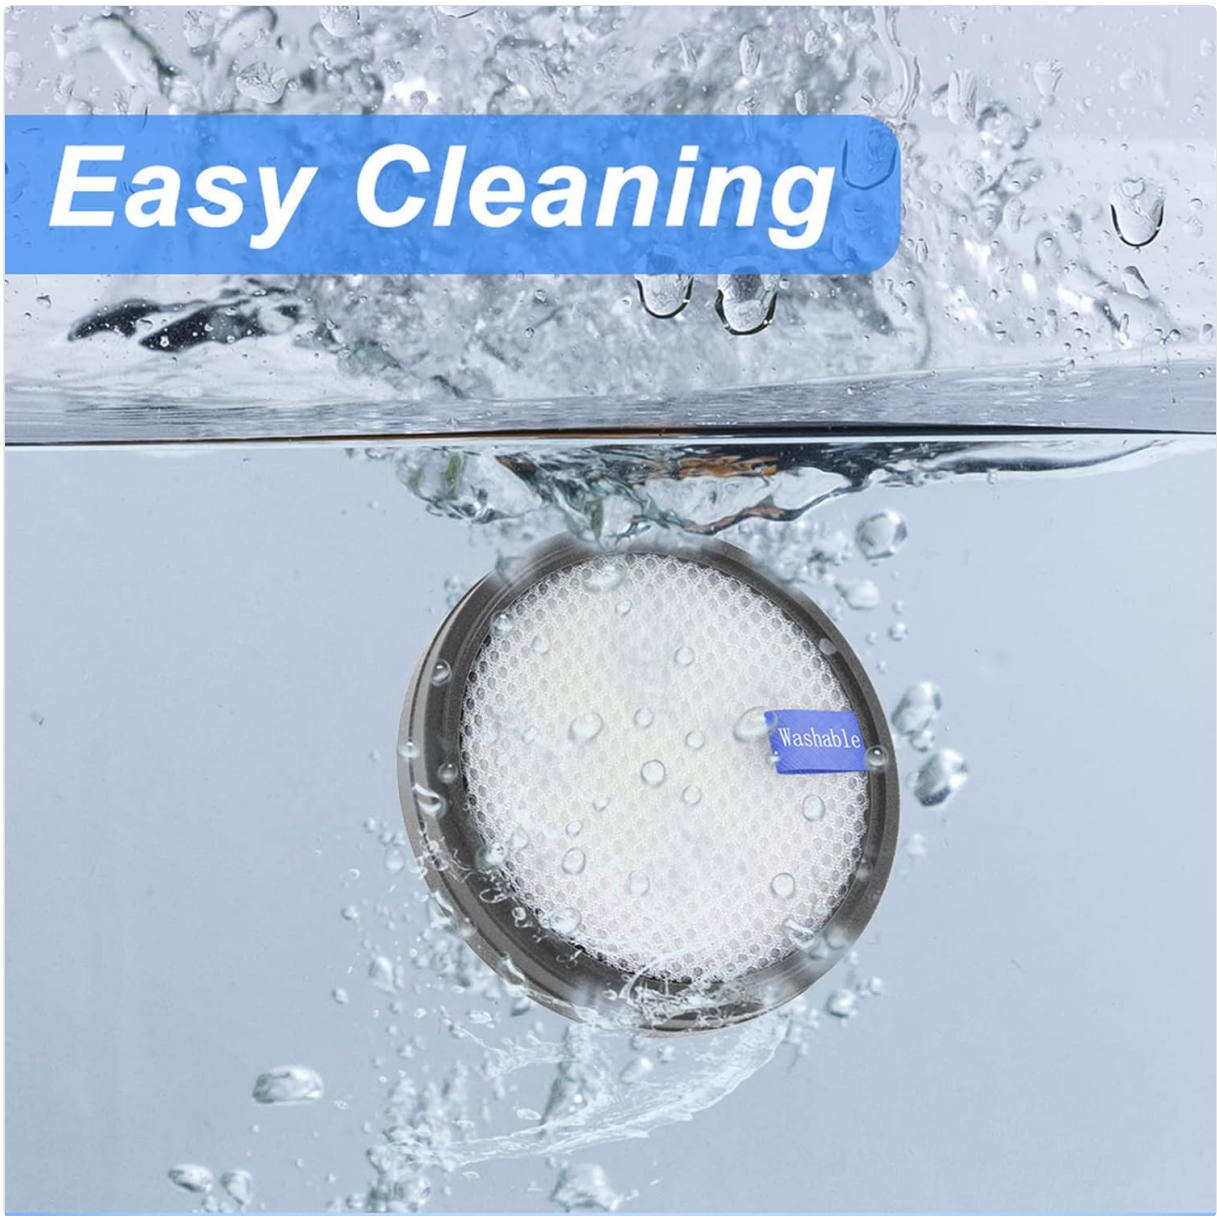 


Image: The filter sponge being rinsed under running water, demonstrating the easy cleaning process.

## Filter Replacement

For best performance and to maintain effective filtration, it is recommended to replace the filter every 2-3 months, depending on usage frequency and the amount of debris collected. Regular replacement helps prevent reduced suction and extends the lifespan of your vacuum cleaner.



Image: Two new PRETTYCARE replacement filter sponges, indicating a pack of two for convenient replacement.

## TROUBLESHOOTING

If you experience issues with your vacuum cleaner's performance, consider the following filter-related troubleshooting steps:

- **Reduced Suction:** If your vacuum's suction power decreases, the filter may be clogged. Remove and clean the filter thoroughly. Ensure it is completely dry before reinstallation. If suction does not improve, consider replacing the filter.
- **Unusual Odors:** Persistent odors from the vacuum cleaner can indicate a dirty or improperly dried filter. Clean the filter and ensure it is fully dry. If odors persist, replace the filter.
- **Dust Escaping:** If dust appears to be escaping from the vacuum, check that the filter is correctly installed and seated snugly in the dust bin. Also, inspect the filter for any damage or tears that might compromise its effectiveness.

## SPECIFICATIONS

<b>Brand</b>	PRETTYCARE
<b>Compatible Devices</b>	PRETTYCARE W200 and W300 Cordless Vacuum Cleaners
<b>Material Type</b>	Hepa Mushroom (High-density filter cotton)
<b>Product Dimensions</b>	Approximately 9.08 x 3.3 x 10.1 cm (3.57 x 1.3 x 3.98 inches)

<b>Weight</b>	Approximately 60 g (0.13 lbs) per filter
<b>Reusability</b>	Washable and Reusable
<b>Recommended Replacement</b>	Every 2-3 months
<b>Filtration Efficiency</b>	Captures 99.97% of air particles up to 0.1 micron

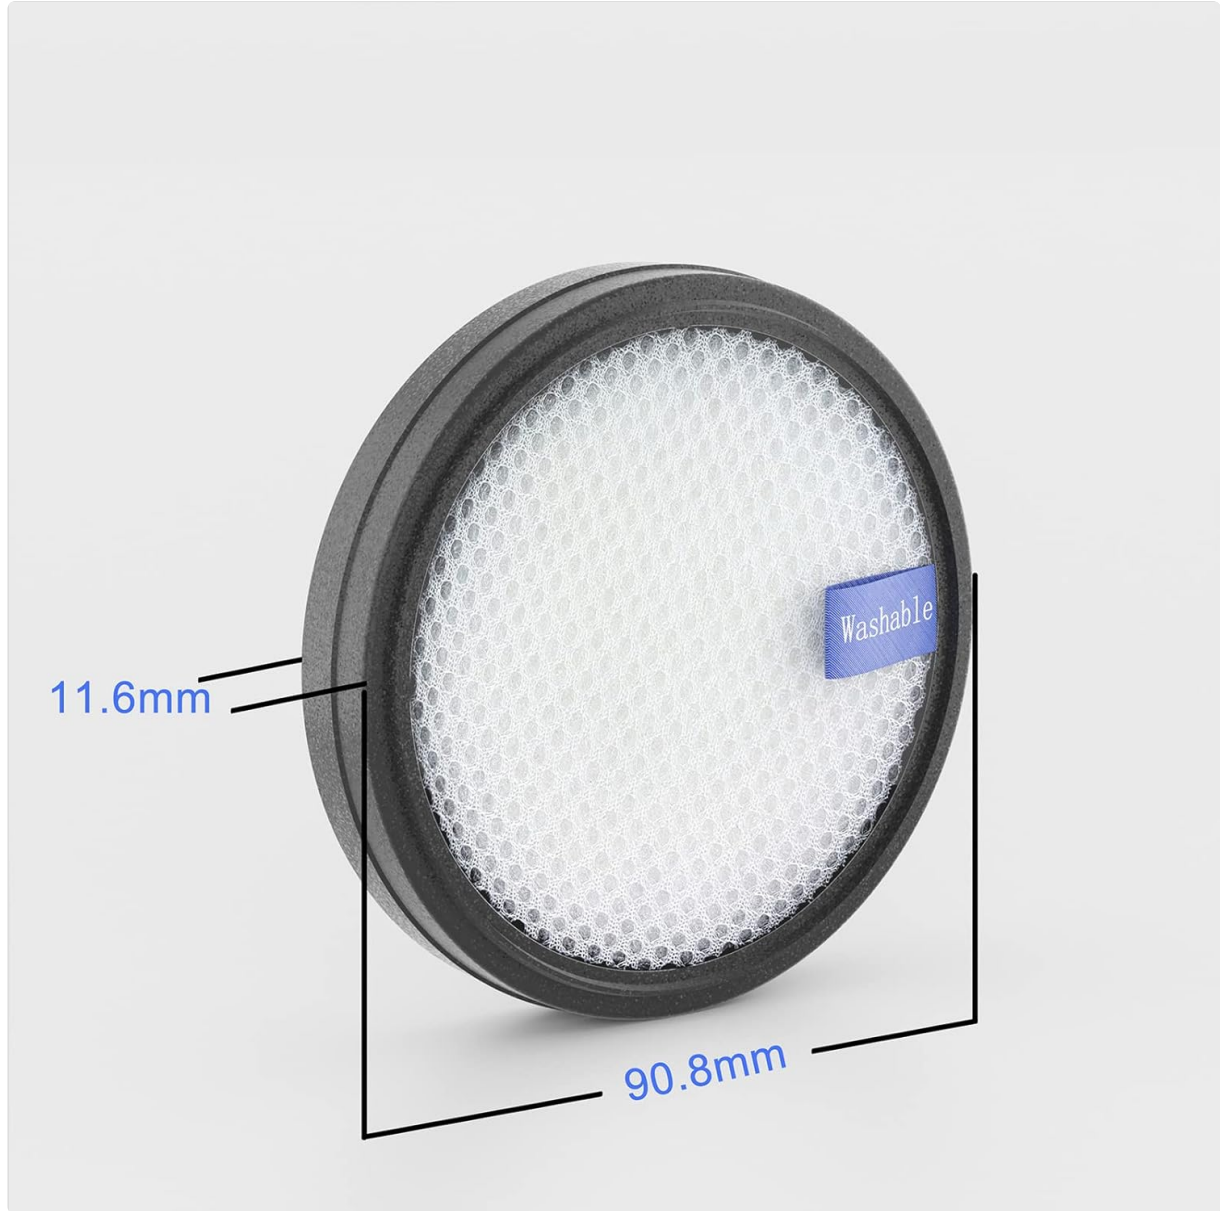 


Image: The filter with its approximate dimensions (90.8mm diameter, 11.6mm thickness) indicated.

## SUPPORT

For further assistance or inquiries regarding your PRETTYCARE Replacement Filter Sponge or PRETTYCARE vacuum cleaners, please visit the official PRETTYCARE website or contact customer support through your purchase platform.