

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Airblown Inflatable The Mandalorian and Grogu in Pod, 6.5 ft Tall, Grey Instruction Manual

Gemmy The Mandalorian and Grogu

Gemmy Airblown Inflatable The Mandalorian and Grogu in Pod, 6.5 ft Tall, Grey Instruction Manual

Model: The Mandalorian and Grogu | Brand: Gemmy

INTRODUCTION

This manual provides essential instructions for the safe and proper setup, operation, maintenance, and storage of your Gemmy Airblown Inflatable The Mandalorian and Grogu in Pod. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- **Keep Away From Fire:** Ensure the inflatable is placed a safe distance from any heat sources, open flames, or combustible materials.
- Do not operate the inflatable in strong winds or stormy conditions.
- Always unplug the inflatable when not in use or before performing any maintenance.
- Ensure all electrical connections are dry and protected from moisture.
- This product is not a toy. Keep out of reach of small children and pets.

PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Airblown Inflatable The Mandalorian and Grogu in Pod (6.5 ft Tall)
- Ground Stakes
- Tethers
- Internal Blower
- Internal LED Lights



Image: Included ground stakes and tethers. These accessories are crucial for securing the inflatable against wind and ensuring it remains upright during operation.

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, clear area for your inflatable, free from debris, sharp objects, and overhead obstructions. Ensure it is within reach of a grounded electrical outlet.
2. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
3. **Position the Inflatable:** Lay the inflatable flat on the chosen surface. Ensure the internal blower is facing away from any obstacles that might block airflow.
4. **Secure the Base:** Locate the anchor points at the base of the inflatable. Use the provided ground stakes to firmly secure these points to the ground.
5. **Connect Power:** Plug the inflatable's power cord into a grounded electrical outlet. The inflatable will begin to self-inflate immediately.
6. **Adjust and Secure with Tethers:** Once partially inflated, adjust the inflatable to its full upright position. Attach the tethers to the designated loops on the inflatable and secure them to the ground using additional stakes.

Adjust the tension of the tethers to ensure stability.





Image: The 6.5 ft tall Airblown Inflatable featuring The Mandalorian and Grogu in his pod, fully inflated and ready for display. This image demonstrates the product's appearance after successful setup.

OPERATING INSTRUCTIONS

- **Inflation:** The inflatable will automatically inflate when plugged into a power source. It typically inflates in seconds.
- **Lighting:** The internal LED lights will illuminate when the unit is powered, providing visibility during nighttime.
- **Deflation:** To deflate, simply unplug the power cord. The inflatable will slowly deflate for easy storage.
- **Continuous Operation:** The inflatable is designed for continuous operation during display periods.



Image: The inflatable positioned in an outdoor setting, showcasing its presence as a yard decoration. Proper placement and securing are essential for optimal display.

MAINTENANCE

- **Cleaning:** Clean the inflatable with a damp cloth and mild detergent. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is completely dry before storage.
- **Inspection:** Periodically inspect the fabric for tears or punctures. Small tears can often be repaired with a patch kit (not included).
- **Blower Care:** Keep the blower free from debris and obstructions to ensure proper airflow.

STORAGE

After use, ensure the inflatable is completely deflated and dry. Fold or roll it neatly and store it in its original packaging or a suitable storage container in a cool, dry place, away from direct sunlight and extreme temperatures. This helps preserve the material and colors for future use.





Image: A side profile of the inflatable, highlighting its three-dimensional design and the details of The Mandalorian's cape and Grogu's pod. This view can assist in proper positioning and storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	Not plugged in; power outage; blower obstructed; zipper open.	Check power connection; ensure power is on; clear any obstructions from blower; ensure all zippers are fully closed.
Inflatable does not stand upright.	Insufficient air; tethers not properly secured; strong winds.	Check for tears or obstructions in blower; adjust and secure tethers and stakes; deflate in strong winds.
Lights are not working.	Bulb failure; loose connection.	Check internal light connections; contact customer support if bulbs are not replaceable.

SPECIFICATIONS

- **Brand:** Gemmy
- **Model:** The Mandalorian and Grogu
- **Dimensions (L x W x H):** 43.31 x 31.89 x 77.95 inches (approximately 6.5 ft Tall)
- **Item Weight:** 6.7 pounds
- **Material:** Polyester
- **Light Color:** Bright White, Multicolor
- **Special Feature:** Lighted, Self-inflating
- **UPC:** 191245282808
- **Intended Use:** Indoor or Outdoor Holiday Decoration

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Gemmy website. Keep your proof of purchase for any warranty claims.