

Gemmy 111302

Gemmy Animated Christmas Airblown Inflatable Jack Skellington in Chimney Instruction Manual

Model: 111302

INTRODUCTION

This manual provides essential instructions for the safe and proper setup, operation, and maintenance of your Gemmy Animated Christmas Airblown Inflatable Jack Skellington in Chimney. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Keep the inflatable away from heat sources, open flames, and flammable materials.
- Ensure proper ventilation around the motor to prevent overheating.
- Anchor the inflatable securely to the ground using the provided stakes and tethers, especially in windy conditions, to prevent it from blowing away or causing damage.
- Do not operate the inflatable if the power cord or plug is damaged.
- Do not allow children to play with the inflatable or its components.
- Unplug the inflatable when not in use or during severe weather conditions.
- This product is designed for temporary seasonal use. Do not install permanently.

PACKAGE CONTENTS

- 1 x Gemmy Animated Christmas Airblown Inflatable Jack Skellington in Chimney
- Ground Stakes
- Tethers
- Internal Blower Motor
- Internal LED Lights



Figure 1: Included ground stakes and tethers for securing the inflatable.

SETUP INSTRUCTIONS

1. **Unpack the Inflatable:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position the Inflatable:** Choose a flat, clear area for placement. Ensure there are no obstructions that could interfere with inflation or the animated movement of Jack Skellington.
3. **Connect Power:** Plug the inflatable's power cord into a standard electrical outlet. Ensure the outlet is suitable for outdoor use if placing outdoors.
4. **Allow to Inflate:** The inflatable will begin to self-inflate within seconds. Ensure the blower motor is clear of any fabric obstructions.
5. **Secure the Inflatable:** Once fully inflated, use the provided ground stakes and tethers to secure the inflatable. Attach the tethers to the designated loops on the inflatable and stake them firmly into the ground at an angle. This

prevents the inflatable from moving or falling over, especially in windy conditions.





Figure 2: Front view of the fully inflated Jack Skellington in Chimney. Ensure all parts are fully expanded.



Figure 3: Example of outdoor placement. Secure anchoring is crucial for stability.

OPERATING INSTRUCTIONS

- **Power On:** Once plugged in, the inflatable will automatically begin to inflate and the internal LED lights will

illuminate. The animated Jack Skellington figure will start its up-and-down motion.

- **Power Off:** To turn off the inflatable, simply unplug it from the electrical outlet. The inflatable will deflate.
- **Animated Feature:** The Jack Skellington figure is designed to rise from and retract into the chimney repeatedly, creating an animated effect.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Inspection:** Periodically inspect the inflatable, power cord, and stakes for any signs of damage or wear. Replace damaged components immediately.
- **Motor Care:** Keep the blower motor free from debris, leaves, or snow to ensure proper operation and prevent overheating.

STORAGE

When the seasonal use is complete, or if storing for an extended period:

1. Unplug the inflatable and allow it to fully deflate.
2. Ensure the inflatable is clean and completely dry to prevent mold or mildew.
3. Carefully fold or roll the inflatable. Avoid sharp creases that could damage the material.
4. Store the inflatable and all accessories in its original packaging or a suitable storage container in a cool, dry place, away from direct sunlight and pests.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	Not plugged in. Power outlet not working. Zipper or opening not closed. Blower motor obstructed.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Verify all zippers and openings are fully closed. Clear any debris from the blower motor intake.
Inflatable does not stand upright or falls over.	Insufficient anchoring. Strong winds. Uneven ground.	Ensure all stakes and tethers are properly secured. Add additional weights or anchors if necessary. Relocate to a more sheltered area or deflate during high winds. Place on a level surface.
Animated Jack Skellington does not move properly.	Internal mechanism obstruction. Insufficient air pressure.	Check for any fabric or debris obstructing the internal moving parts. Ensure the inflatable is fully inflated and all openings are sealed.

SPECIFICATIONS

- **Brand:** Gemmy
- **Model Number:** 111302
- **UPC:** 191245113027
- **Dimensions (L x W x H):** 37.01 x 29.92 x 66.14 inches (approximately 94 x 76 x 168 cm)
- **Item Weight:** 3.6 pounds (approximately 1.63 kg)
- **Material:** Polyester
- **Light Type:** Energy-efficient LED lights
- **Special Feature:** Lighted, Animated
- **Usage:** Indoor or Outdoor

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact information provided on the product packaging or visit the official Gemmy website. Keep your purchase receipt as proof of purchase.

For additional product information, you may visit the [Gemmy Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question