

[Manuals.plus](#) /

› [AECOJOY](#) /

› AECOJOY Outdoor Recliner Chairs Set of 2 - Instruction Manual Model 16225

AECOJOY 16225

AECOJOY Outdoor Recliner Chairs Set of 2

Model: 16225 | **Brand:** AECOJOY

INTRODUCTION

Thank you for choosing the AECOJOY Outdoor Recliner Chairs. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner chairs. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of **350 pounds (158 kg)** per chair.
- Use caution when adjusting the reclining mechanism to prevent pinching or injury.
- Keep hands and fingers clear of moving parts during adjustment and folding.
- Place chairs on a stable, level surface to prevent tipping.
- Supervise children around the chairs.
- Store chairs in a protected area during extreme weather conditions to prolong their lifespan.

PACKAGE CONTENTS

Before assembly, verify that all parts are present. The package includes:

- Recliner Chair Frames (2 sets)
- Removable Beige Olefin Cushions (2 sets)
- Installation Hardware (bolts, washers, nuts)
- Assembly Tools (Allen wrench)
- Instruction Manual

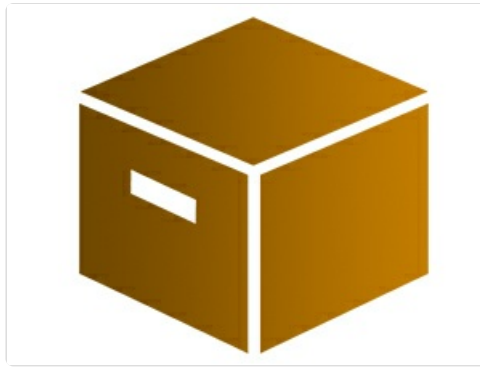 


Image: Illustration of a single chair packaged in a box, indicating typical contents.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for these recliner chairs. Follow the steps below carefully. It is recommended to assemble the chairs with two people for ease and safety.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts diagram (if available in your physical manual) to identify each component.
3. **Assemble Base Frame:** Connect the main frame sections using the provided bolts, washers, and nuts. Do not fully tighten bolts until all sections are aligned.
4. **Attach Armrests:** Secure the armrests to the main frame. Ensure they are oriented correctly.
5. **Install Backrest:** Attach the backrest to the frame. The backrest mechanism should allow for smooth adjustment.
6. **Attach Footrest Mechanism:** Connect the footrest assembly to the chair frame. Test its movement to ensure it extends and retracts smoothly.
7. **Tighten All Hardware:** Once all parts are assembled and aligned, securely tighten all bolts using the provided Allen wrench. Do not overtighten.
8. **Place Cushions:** Position the thick olefin cushions onto the chair frame. The cushions are designed to be removable for cleaning or storage.

Mesh Backrest Design

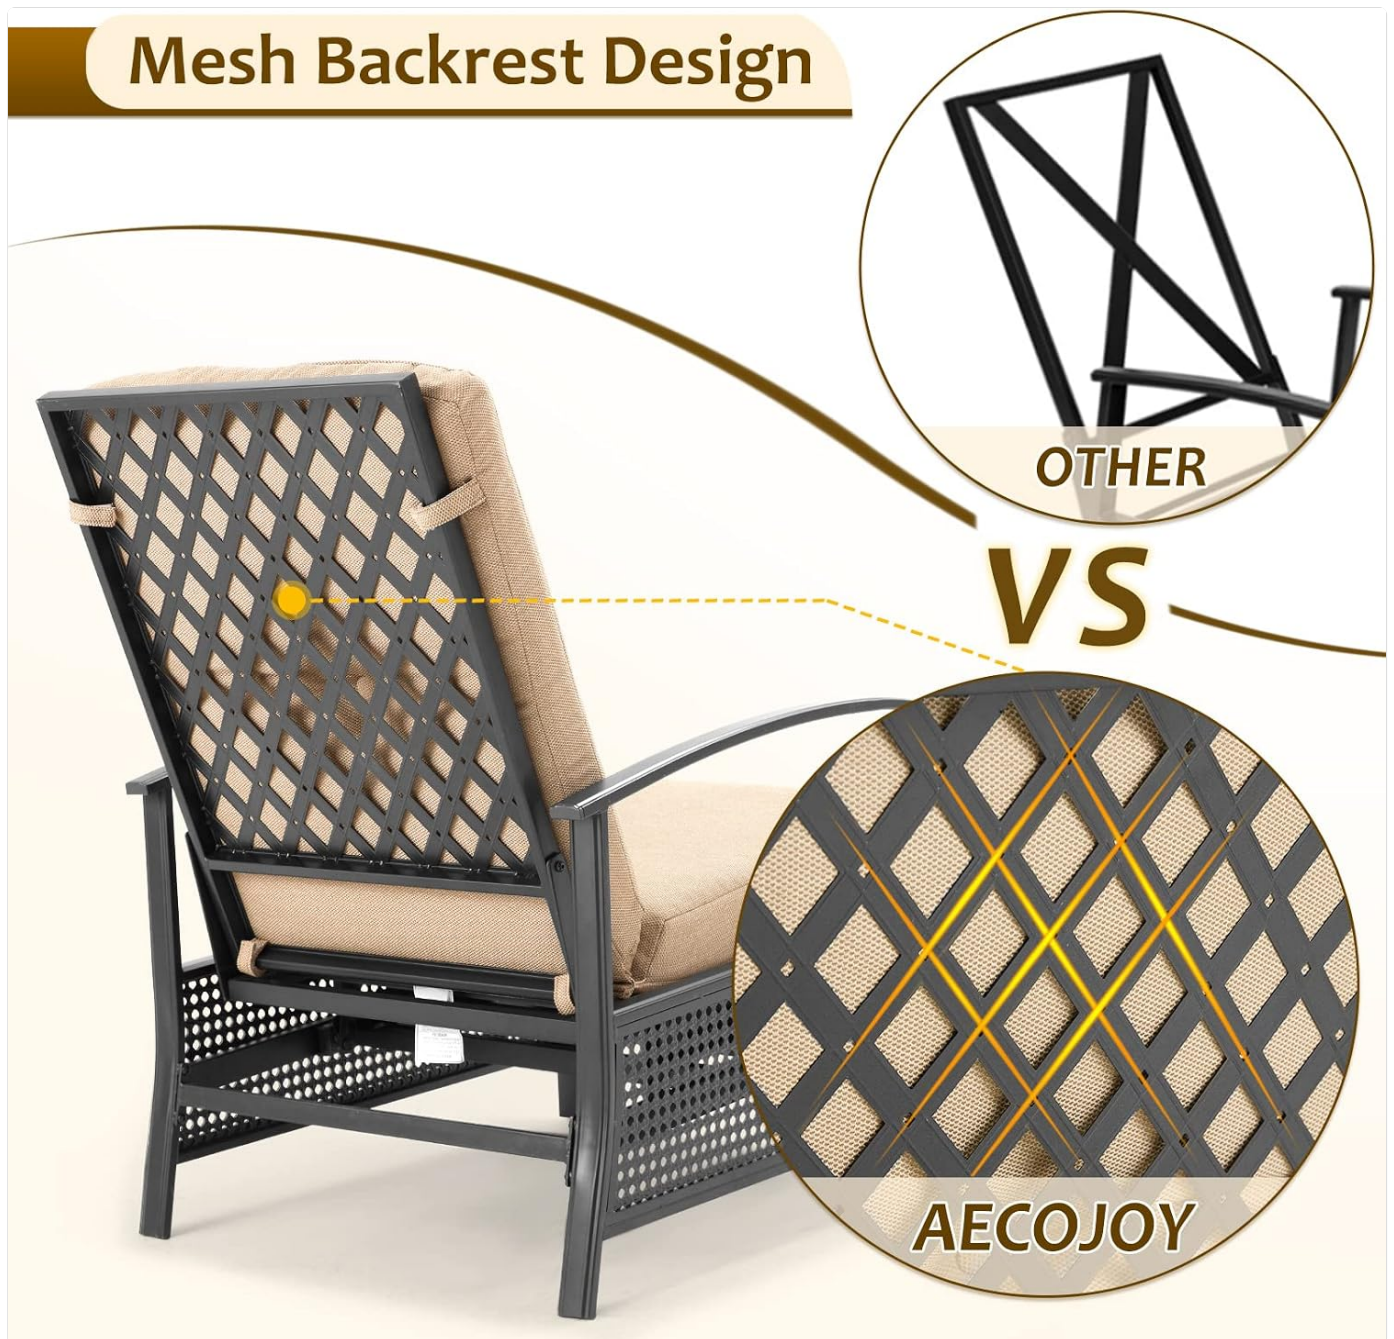 


Image: An assembled AEOJOY recliner chair, showcasing its structure and cushions.

OPERATING INSTRUCTIONS

Adjusting the Recliner Position

Your AEOJOY recliner chair features an adjustable backrest with three different reclining levels, including a zero-gravity angle. To adjust the position:

1. **To Recline:** While seated, gently push back on the backrest. The chair will smoothly transition through its adjustable positions. Stop at your desired angle.
2. **To Return Upright:** Lean forward slightly and the backrest will move back to an upright position.
3. **Zero-Gravity Position:** Continue pushing back until the chair reaches its most reclined position, elevating your legs above your heart for a zero-gravity feel.

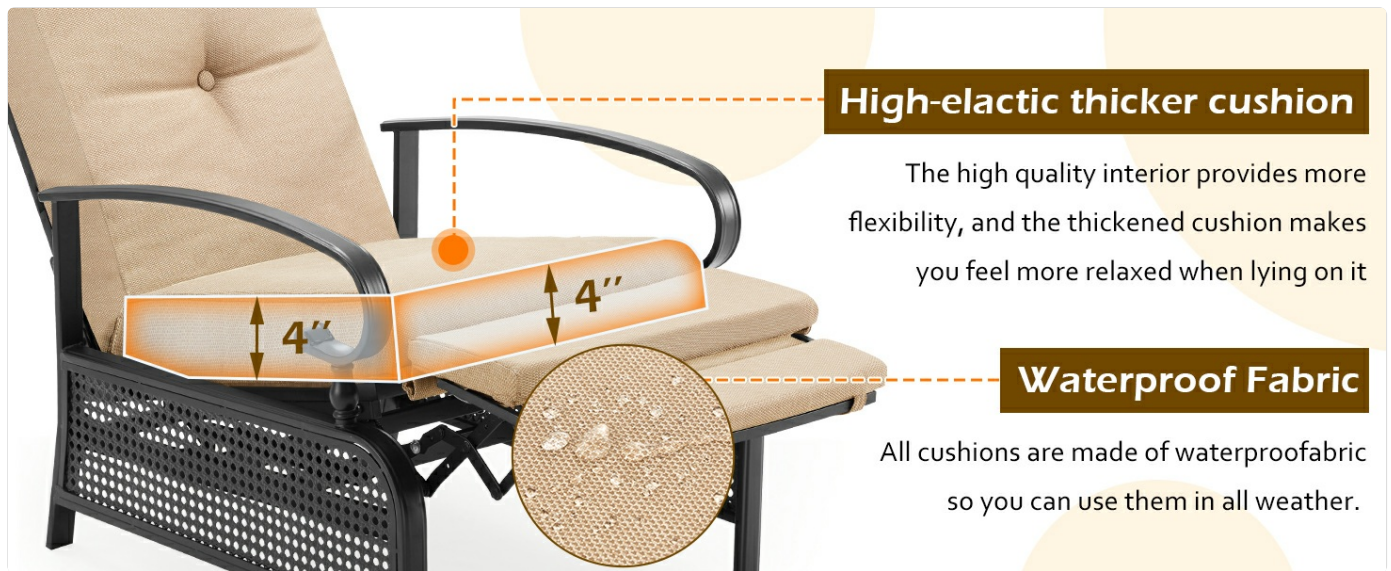 


Image: Visual representation of the chair adjusting through its three reclining levels.

MAINTENANCE

Frame Care

- Clean the metal frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots.
- Inspect the frame periodically for any signs of rust or damage. Touch up any scratches with rust-resistant paint if necessary.
- Ensure all bolts and connections remain tight. Retighten as needed.

Cushion Care

- The olefin cushion covers are removable and UV-resistant. Spot clean with mild soap and water.
- For deeper cleaning, remove the covers and hand wash or machine wash on a gentle cycle with cold water. Air dry only; do not tumble dry.
- Store cushions indoors during prolonged periods of non-use or inclement weather to maintain their appearance and extend their lifespan.

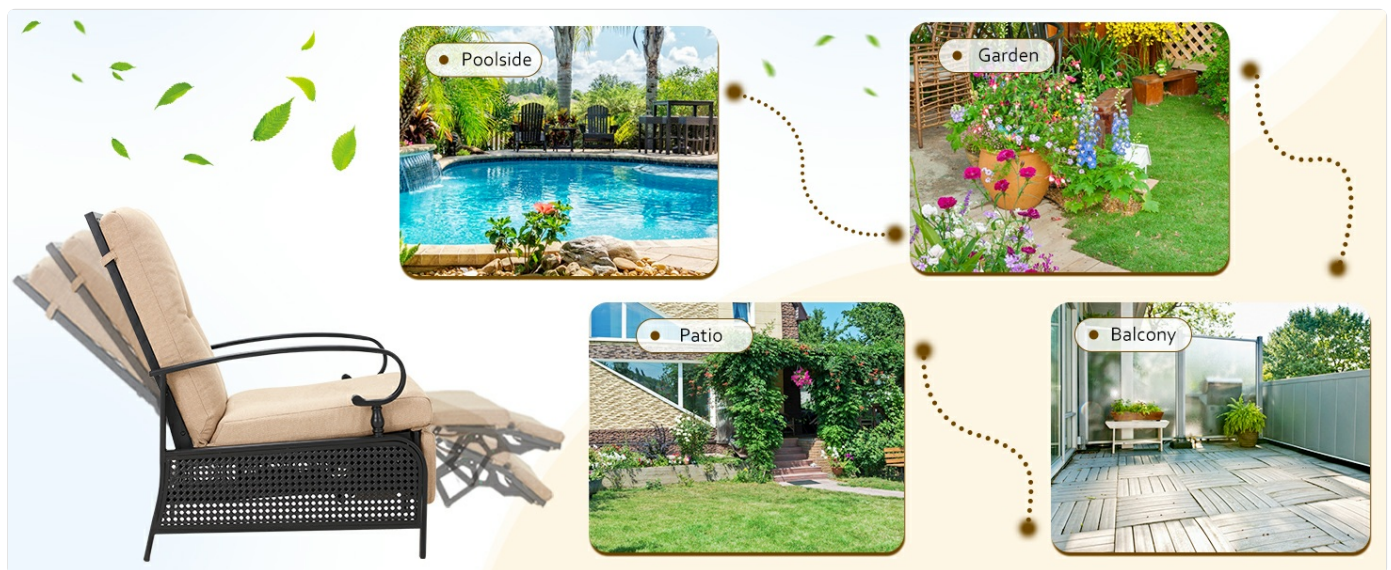 


Image: Detail of the cushion's thickness and waterproof fabric, highlighting its durability.

TROUBLESHOOTING

- **Difficulty Reclining:** Ensure no obstructions are blocking the mechanism. Check that all assembly bolts are tightened correctly but not overtightened, which could impede movement.
- **Wobbly Chair:** Verify that all bolts are securely tightened. Ensure the chair is placed on a flat, even surface.
- **Missing Parts:** If any parts are missing upon arrival, please contact AECOJOY customer support immediately.

SPECIFICATIONS

Brand	AECOJOY
Model Name	Outdoor Recliner Chairs Set of 2
Model Number	16225
Color	Beige
Material	Metal (Alloy Steel Frame), Polyester (Cushions)
Product Dimensions (Unfolded)	57.1"D x 26.8"W x 37"H (145cm D x 68cm W x 94cm H)
Product Dimensions (Folded)	29"L x 26.8"W x 37"H (73.7cm L x 68cm W x 94cm H)
Item Weight	95.3 pounds (43.2 kg)
Maximum Weight Capacity	350 pounds (158 kg)
Reclining Position Count	3
Indoor/Outdoor Usage	Outdoor
Included Components	Cushion, Installation Hardware



Water Resistant



4" Thick Cushion



Removable Cushion

Image: Diagram illustrating the key dimensions of the AECOJOY recliner chair.

WARRANTY AND SUPPORT

AECOJOY stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official AECOJOY website. If you encounter any issues, have questions about assembly, or require replacement parts, please contact AECOJOY customer support.

Customer Support: For assistance, please contact the seller AECOJOY-US directly through your purchase platform or refer to the contact information provided in your product packaging.

© 2026 AECOJOY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question