

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PowerA](#) /

› [PowerA Protection Case for Nintendo Switch OLED Model - Pokemon: Snorlax & Friends Instruction Manual](#)

PowerA Pokemon: Snorlax & Friends

PowerA Protection Case for Nintendo Switch OLED Model - Pokemon: Snorlax & Friends

Model: Pokemon: Snorlax & Friends | Brand: PowerA

1. PRODUCT OVERVIEW

The PowerA Protection Case is designed to securely store and transport your Nintendo Switch, Nintendo Switch OLED Model, or Nintendo Switch Lite console. This sturdy, compact case features a delightful Pokémon Snorlax & Friends design, offering both protection and style for your gaming device.

The interior is thoughtfully designed with a plush lining to prevent scratches, a screen-protector flap that doubles as storage for up to nine game cards, and a zippered mesh pocket for additional accessories. A custom logo tag adds a touch of authenticity.



Protection Case for Nintendo Switch - OLED Model, Nintendo Switch or Nintendo Switch Lite

Pokémon: Snorlax & Friends



Image: Front view of the PowerA Protection Case for Nintendo Switch, featuring Snorlax, Pikachu, and Eevee on a light blue background. The case has a rubberized handle and dual zipper pulls.

2. KEY FEATURES

- Adorable PokéMon Design:** Features Snorlax, Pikachu, and Eevee for a personalized touch.
- Durable Construction:** Equipped with a sturdy outer shell, rubberized handle, and durable dual zipper pulls for enhanced protection.
- Molded Interior:** Includes a soft felt lining to cradle your console and prevent scratches.
- Integrated Game Storage:** A padded screen-protector flap offers storage for up to nine Nintendo Switch game cards.
- Accessory Storage:** A zippered mesh pocket provides secure space for small accessories like charging cables or earbuds.
- Multi-Console Compatibility:** Officially licensed for Nintendo Switch - OLED Model, Nintendo Switch, and Nintendo Switch Lite.
- Built-in Play-Stand:** The case design allows for tabletop mode play while the console is secured.



Image: Back of the PowerA Protection Case retail packaging, highlighting features such as zippered mesh storage, an integrated play-stand, and game card storage. It also mentions 2-year limited warranty.

3. SETUP AND CONSOLE PLACEMENT

- Open the Case:** Unzip the dual zippers completely to open the case.
- Insert Console:** Carefully place your Nintendo Switch, Nintendo Switch OLED Model, or Nintendo Switch Lite into the molded compartment. Ensure the console sits snugly within the felt-lined tray.
- For Nintendo Switch Lite:** If using a Nintendo Switch Lite, insert the included foam adapter into the molded compartment first, then place your Switch Lite inside for a secure fit.
- Secure Console:** Fold the padded screen-protector flap over the console's screen. This flap helps protect the screen and holds the console in place.
- Store Game Cards:** Utilize the elastic slots on the screen-protector flap to store up to nine game cards.
- Store Accessories:** Use the zippered mesh pocket on the opposite side of the case to store small accessories like charging cables, earbuds, or extra Joy-Cons.
- Close the Case:** Zip up the dual zippers securely to ensure your console and accessories are protected during transport.



Image: Interior view of the PowerA Protection Case with a Nintendo Switch OLED Model placed inside. The padded screen-protector flap, which also holds game cards, is visible over the console's screen.



Image: Interior view of the PowerA Protection Case with a Nintendo Switch Lite placed inside. The black foam adapter is visible around the Switch Lite, ensuring a snug and secure fit within the case.

4. OPERATING INSTRUCTIONS

Using the Built-in Play-Stand

The PowerA Protection Case features a built-in play-stand function, allowing you to prop up your Nintendo

Switch console for tabletop mode gaming without removing it from the case.

1. **Open the Case:** Unzip the case and open it fully.
2. **Position Console:** Ensure your Nintendo Switch console is securely placed within the molded compartment.
3. **Engage Stand:** The design of the case allows the console to be angled for comfortable viewing. Simply adjust the console's position within the open case to achieve your desired viewing angle. The screen-protector flap can be folded back or used to support the console further.



Image: The PowerA Protection Case is shown open and used as a stand, with a Nintendo Switch OLED Model propped up for tabletop mode gaming. The console is angled for comfortable viewing.

Accessing Game Cards and Accessories

- **Game Cards:** To access game cards, simply lift the padded screen-protector flap. The elastic slots securely hold the game cards, allowing for easy insertion and removal.
- **Accessories:** The zippered mesh pocket provides quick access to your stored accessories. Unzip the pocket to retrieve or store items.



Image: Close-up view of the game card slots on the screen protector flap, demonstrating how multiple Nintendo Switch game cartridges are securely held in place.

5. MAINTENANCE

To ensure the longevity and appearance of your PowerA Protection Case, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the case's materials and design.
- **Interior Care:** Gently dust the interior felt lining and mesh pocket as needed. Avoid excessive rubbing to prevent wear.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight or extreme temperatures.

6. TROUBLESHOOTING

- **Case Not Closing Properly:** Ensure no items are obstructing the zippers or the case's edges. Verify that the console and accessories are correctly placed within their designated compartments.
- **Console Not Fitting Snugly:** Double-check that the correct console model is being used with the appropriate setup (e.g., foam insert for Switch Lite). Remove any bulky accessories attached to the console before placing it in the case.
- **Zippers Sticking:** Apply a small amount of zipper lubricant (e.g., beeswax or a specialized zipper wax) to the zipper teeth and gently work the zipper back and forth.

7. SPECIFICATIONS

Attribute	Detail
Item Weight	6.7 ounces (0.42 Pounds)
Shell Type	Hard
Closure Type	Zipper
Handle Type	Rubberized
Number of Compartments	4 (main console, game card flap, zippered mesh pocket, foam insert for Lite)
Pocket Description	Zipper Pocket
Hardware Platform	Nintendo Switch
Product Dimensions	10.24 x 5.91 x 1.85 inches

8. WARRANTY AND SUPPORT

This PowerA Protection Case comes with a **2-Year Limited Warranty**. For detailed warranty information, product support, or to register your product, please visit the official PowerA website or contact their customer service.

For further assistance, please refer to the contact information provided on the product packaging or the official PowerA support channels.