

Crosley CR8009B-DU

Crosley Discovery CR8009B-DU Record Player Instruction Manual

Model: CR8009B-DU | Brand: Crosley

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Crosley Discovery CR8009B-DU Record Player. Please read these instructions thoroughly before using the device and retain them for future reference.

The Crosley Discovery Record Player is a portable, belt-driven turntable designed to play vinyl records at three speeds (33 1/3, 45, and 78 RPM). It features built-in stereo speakers, Bluetooth input for streaming digital music, and Bluetooth output for connecting to external wireless speakers. Additional connectivity options include RCA outputs for wired external speakers or receivers, and a headphone jack for private listening.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Do not expose the unit to rain, moisture, or excessive heat.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or

moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Crosley CR8009B-DU Turntable
- 45 RPM Adapter
- Power Adaptor

4. SETUP

Follow these steps to set up your record player:

1. **Unpack the Unit:** Carefully remove the record player and all accessories from the packaging.
2. **Power Connection:** Connect the power adaptor to the DC IN port on the back of the unit and plug it into a wall outlet.
3. **Placement:** Place the record player on a stable, level surface. Ensure adequate ventilation around the unit.



The Crosley Discovery Record Player in Dune, shown open and ready for use. The turntable platter and tonearm are visible.



The back panel of the record player, featuring RCA output jacks for connecting to external speakers or a receiver, and an auxiliary input for connecting other audio devices.

5. OPERATING INSTRUCTIONS

 
5.1 Playing a Vinyl Record

1. **Power On:** Turn the ON/OFF/VOLUME knob clockwise until it clicks to power on the unit. The power indicator light will illuminate.
2. **Select Speed:** Adjust the speed switch (located near the tonearm) to match the RPM of your record (33 1/3, 45, or 78 RPM). Use the included 45 RPM adapter for 7-inch singles.
3. **Place Record:** Carefully place your vinyl record on the turntable platter.
4. **Lift Tonearm:** Push the cueing lever (located next to the tonearm rest) backward to lift the tonearm.
5. **Position Tonearm:** Gently move the tonearm over the desired track of the record.
6. **Lower Tonearm:** Push the cueing lever forward to slowly lower the tonearm onto the record. Playback will begin.

7. **Adjust Volume:** Rotate the ON/OFF/VOLUME knob to adjust the playback volume.

8. **Adjust Pitch:** Use the PITCH control knob to fine-tune the playback speed if needed.

This video demonstrates the basic operation of the Crosley Discovery Turntable, including placing a record, lowering the tonearm, and adjusting playback settings.

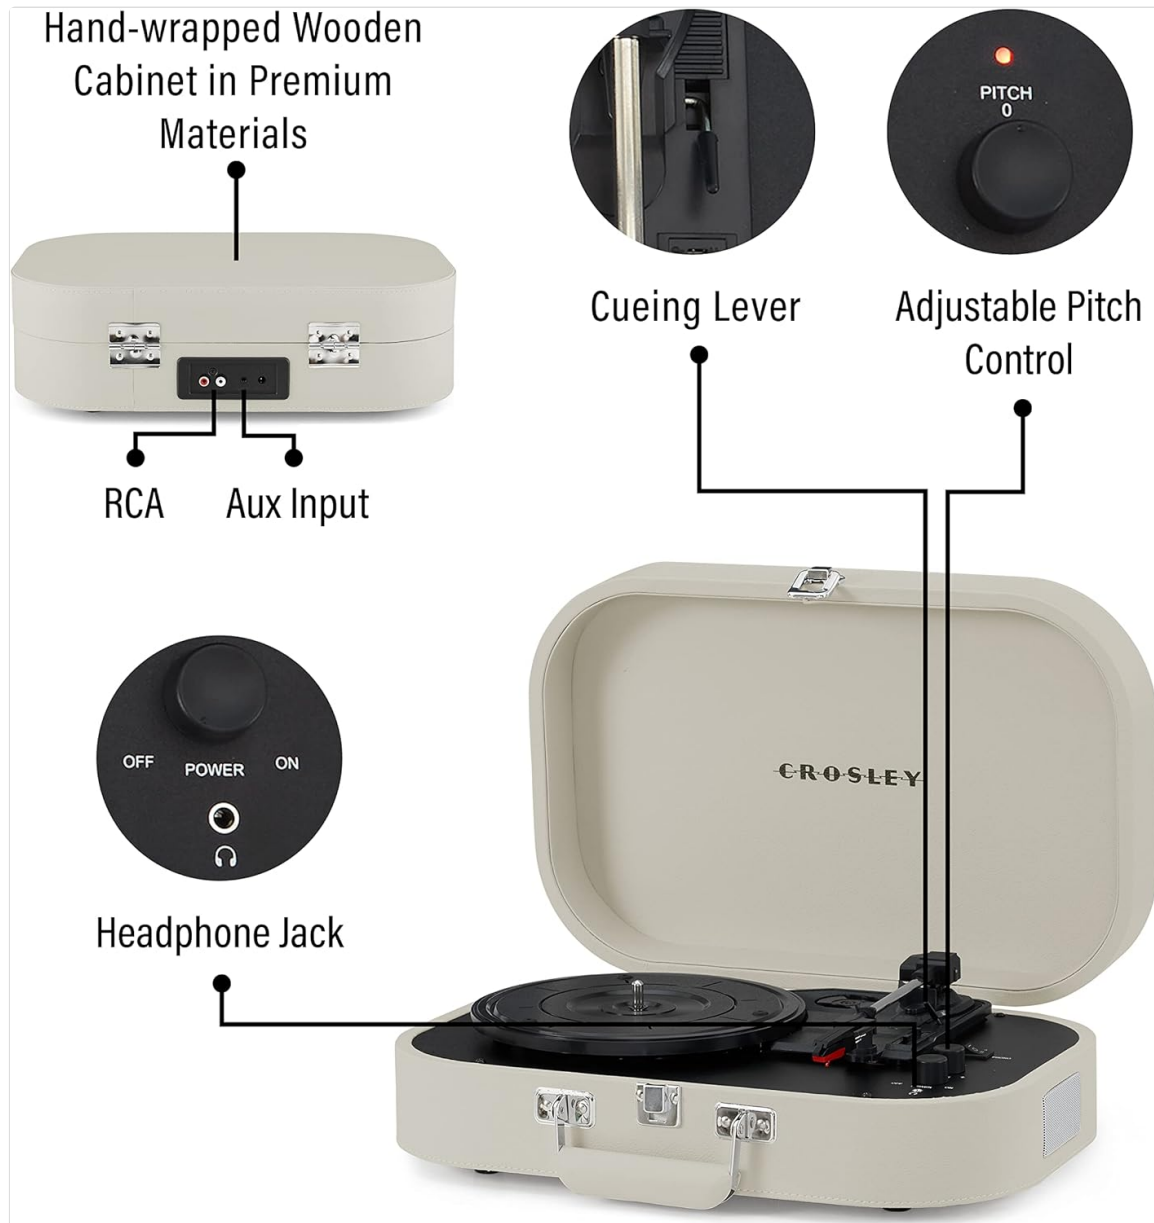

A detailed view of the control panel, highlighting the pitch adjustment knob, volume control, power switch, phono/Bluetooth mode selector, and headphone jack for private listening.

5.2 Bluetooth Input (Streaming to Turntable)

To stream music from your Bluetooth-enabled device through the record player's built-in speakers:

1. **Switch to Bluetooth Mode:** Slide the PHONO/BLUETOOTH switch to the Bluetooth position. The Bluetooth indicator light will flash.
2. **Pair Device:** Enable Bluetooth on your external device (e.g., smartphone, tablet) and select "Crosley Discovery" from the list of available devices.
3. **Start Playback:** Once paired, the Bluetooth indicator light will stop flashing and remain solid. You can now play music from your device, and it will sound through the record player's speakers.



Stream Vinyl Through External Bluetooth Speakers



**Bluetooth Speaker Not Included*

An illustration of the record player's Bluetooth input capability, allowing users to stream digital music from a smartphone or other Bluetooth-enabled device through the turntable's built-in speakers.

5.3 Bluetooth Output (Streaming from Turntable)

To stream vinyl audio from the record player to an external Bluetooth speaker:

1. **Enable Pairing on External Speaker:** Put your external Bluetooth speaker into pairing mode (refer to your speaker's manual for instructions).
2. **Activate Bluetooth Output:** While playing a record, press and hold the Bluetooth button on the record player. The Bluetooth indicator light will flash rapidly, indicating it's searching for an external speaker.
3. **Connect:** Once connected, the Bluetooth indicator light will remain solid, and audio from the record player will be streamed to your external Bluetooth speaker.



The record player connected wirelessly to an external Bluetooth speaker, showcasing its ability to stream vinyl audio to compatible external sound systems.

5.4 Using External Speakers or Headphones

For wired audio connections:

- **RCA Output:** Connect RCA cables (not included) from the RCA OUT ports on the back of the record player to the audio input of your receiver or powered external speakers.
- **Headphone Jack:** Plug 3.5mm headphones into the HEADPHONE jack for private listening. This will mute the built-in speakers.

6. MAINTENANCE

Proper care ensures the longevity of your record player:

- **Cleaning the Unit:** Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Stylus Care:** Handle the stylus (needle) with extreme care. Clean it periodically with a soft brush, brushing from back to front. Replace the stylus when sound quality deteriorates.
- **Record Care:** Keep records clean and free of dust. Store them vertically in their sleeves to

prevent warping.

7. TROUBLESHOOTING


If you encounter issues, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adaptor not connected or outlet not active.	Ensure power adaptor is securely connected and the outlet is functional.
No sound from speakers	Volume too low, headphones connected, or external speakers not properly connected/powerd.	Increase volume, disconnect headphones, check external speaker connections and power.
Record skips	Dirty record, worn stylus, or unstable surface.	Clean record, replace stylus, place unit on a stable surface.
Bluetooth pairing issues	Device too far, Bluetooth not enabled, or incorrect mode selected.	Ensure devices are within range, Bluetooth is enabled, and the correct Bluetooth mode (input/output) is selected.

8. SPECIFICATIONS

Feature	Detail
Model Number	CR8009B-DU
Brand	Crosley
Product Dimensions	10.63 x 15.75 x 4.72 inches
Item Weight	6.5 pounds
Maximum Rotational Speed	78 RPM (supports 33 1/3, 45, and 78 RPM)
Special Feature	Portable, Bluetooth In/Out
Material	Plastic
Included Components	45 RPM Adapter, CR8009B-DU Turntable, Power Adaptor

 OVERALL DIMENSIONS: 15.75" W x 4.72" H x 10.63" D

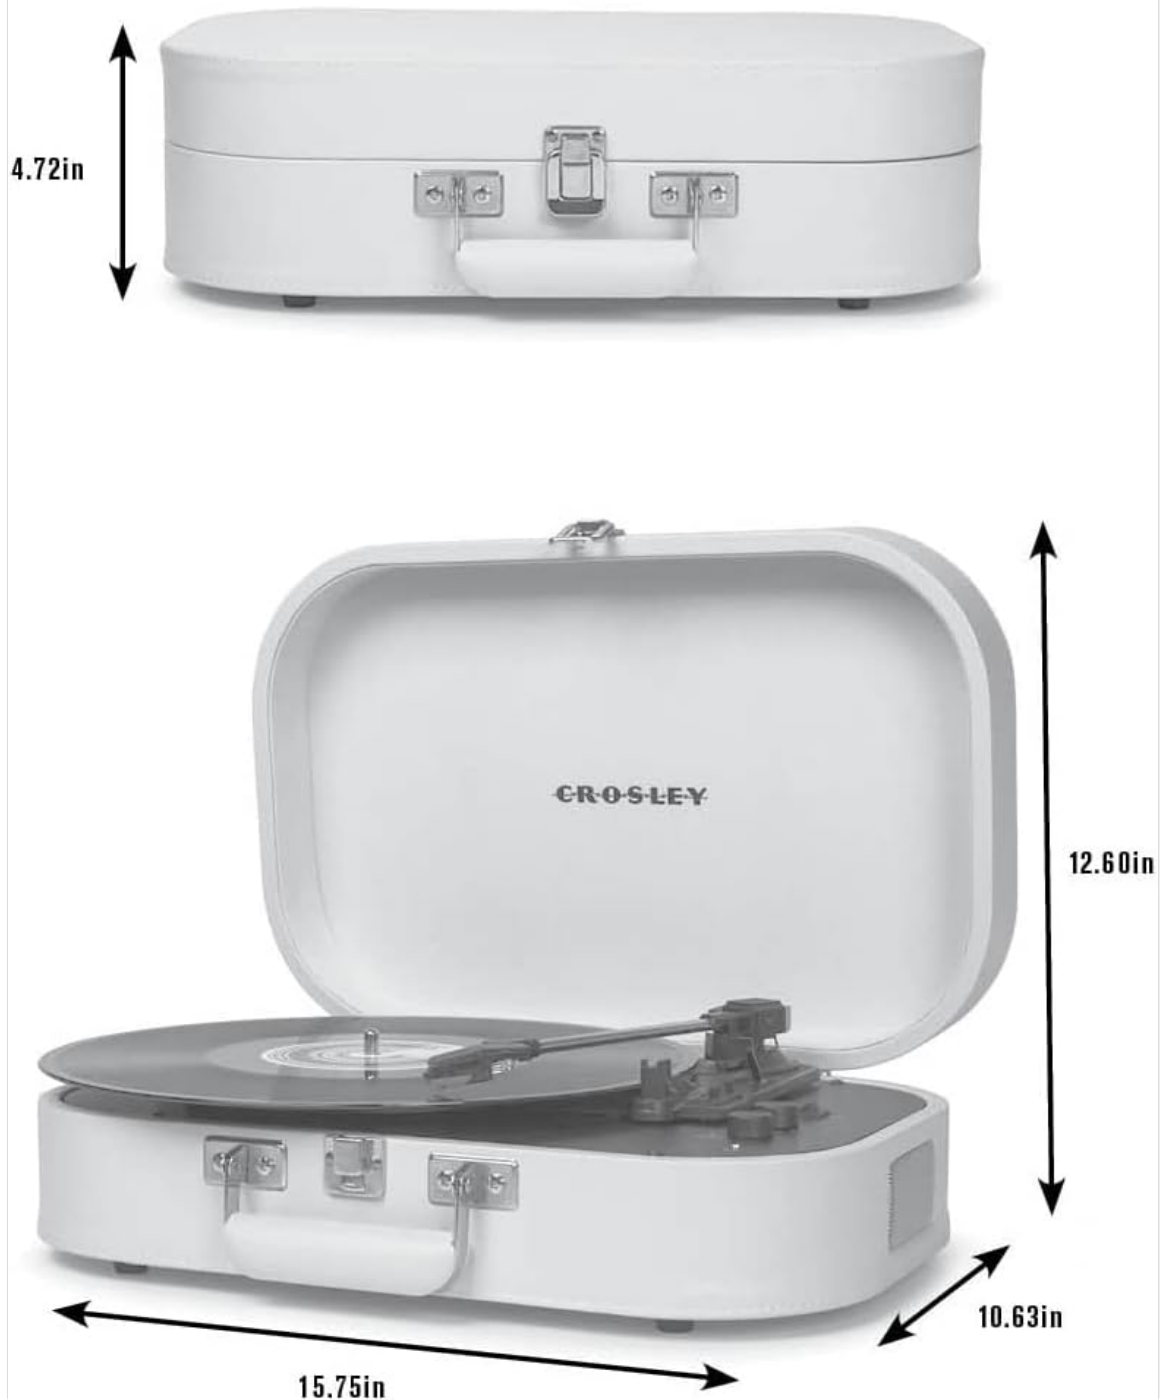


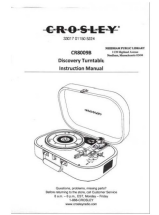 


A diagram illustrating the overall dimensions of the Crosley Discovery Record Player, including width, height, and depth, for placement and storage planning.



9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official Crosley website. You may also find additional resources and contact information on the [Crosley Store on Amazon](#).

© 2023 Crosley. All rights reserved.

Related Documents - CR8009B-DU

 <p>CROSLLEY CR8009B Discovery Turntable Instruction Manual</p> <p>CR8009B Discovery Turntable Instruction Manual</p> <p>CR8009B Discovery Turntable Instruction Manual</p>	<p>Crosley CR8009B Discovery Turntable Instruction Manual</p> <p>User manual for the Crosley CR8009B Discovery Turntable, detailing setup, operation, maintenance, and troubleshooting for this Bluetooth-enabled, 3-speed record player.</p>
 <p>CROSLLEY CR8009B Discovery Turntable Instruction Manual</p> <p>CR8009B Discovery Turntable Instruction Manual</p> <p>CR8009B Discovery Turntable Instruction Manual</p>	<p>Crosley CR8009B Discovery Turntable: Setup, Operation, and Maintenance Guide</p> <p>This comprehensive instruction manual provides detailed guidance for the Crosley CR8009B Discovery Turntable, covering essential safety precautions, package contents, specifications, product description, setup, operation, needle replacement, Bluetooth connectivity, maintenance tips, and troubleshooting common issues.</p>
 <p>CROSLLEY C62A Turntable Instruction Manual</p> <p>C62A Turntable Instruction Manual</p> <p>C62A Turntable Instruction Manual</p>	<p>Crosley C62A Turntable: Official Instruction Manual & User Guide</p> <p>Download the official Crosley C62A turntable instruction manual. This guide provides detailed steps for setup, operation, needle replacement, maintenance, troubleshooting, and technical specifications for your Crosley C62A record player.</p>
 <p>CROSLLEY C72A W.A. Turntable Instruction Manual</p> <p>C72A W.A. Turntable Instruction Manual</p> <p>C72A W.A. Turntable Instruction Manual</p>	<p>Crosley C72A Turntable Instruction Manual</p> <p>This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting the Crosley C72A Turntable. It includes detailed specifications, safety warnings, and component descriptions.</p>

<div><div><div>CROSLEY</div><div>CR6253B Anthology Turntable Instruction Manual</div></div><div><p>Questions, problems, missing parts? Before contacting us, please read the Customer Service FAQ on the back of the turntable's manual. © 2014 CROSLEY www.crosley.com</p></div></div>	<p>Crosley CR6253B Anthology Turntable: User Manual, Setup, and Operation Guide</p> <p>Get started with your Crosley CR6253B Anthology Turntable. This comprehensive guide covers setup, operation, Bluetooth connectivity, maintenance, troubleshooting, and safety instructions for your record player.</p>
<div><div><div>CROSLEY</div><div>CR8005D Cruiser Deluxe Turntable Instruction Manual</div></div><div><p>Questions, problems, missing parts? Before contacting us, please read the Customer Service FAQ on the back of the turntable's manual. © 2014 CROSLEY www.crosley.com</p></div></div>	<p>Crosley CR8005D Cruiser Deluxe Turntable Instruction Manual</p> <p>User manual for the Crosley CR8005D Cruiser Deluxe Turntable, providing comprehensive instructions on setup, operation, maintenance, troubleshooting, and safety guidelines.</p>