

- Manuals.plus /
- › Smartby /
 - › Universal Remote Control for Samsung-TV-Remote, Compatible with All Samsung LCD LED HDTV 3D Smart TVs - No Setup Needed

Smartby SMTB-Uni-SS

Universal Remote Control for Samsung TVs

Brand: Smartby
Model: SMTB-Uni-SS

INTRODUCTION

This manual provides instructions for the Smartby Universal Remote Control, designed for seamless compatibility with all Samsung LCD, LED, HDTV, and 3D Smart TVs. This remote is engineered for immediate use without complex setup procedures.

PRODUCT OVERVIEW

The Smartby Universal Remote Control is a direct replacement for various Samsung TV remote models, offering an updated chip for stronger signal and stable performance. It includes essential functions and a Smart Hub button for convenient access to smart TV features.



This image displays the Smartby Universal Remote Control from three angles: front (showing all buttons), side (showing its slim profile), and back (showing the battery compartment area). The remote is black with a brushed texture.

SETUP

Battery Installation

The Smartby Universal Remote Control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

This remote control is designed for immediate use with compatible Samsung TVs. No programming or pairing is required. Simply insert the batteries, and the remote is ready to operate your television.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your Samsung TV.

Remote Guide



Turns the TV on and off

SOURCE: Displays and selects the available video sources.

VOL +/-: Adjusts the volume.

CH +/-: Changes channels

MUTE: Cuts off the sound temporarily

CH LIST: Displays channel lists on the screen

SAMRT HUB: Brings up Smart Hub applications

MENU: Displays the main on-screen menu

TOOLS: Quickly select frequently used functions

INFO: Displays information on tho TV screen

RETURN: Returns to the previous menu

EXIT: Exits the menu

COLOR BUTTONS (YELLOW/BLUE/RED/GREEN):
Shortcut keys for interactive functions.

SPORTS: Accesses the "SPORTS"

This diagram illustrates the front of the Smartby Universal Remote Control, with lines pointing from each button to a text description of its function. Key functions include Power, Source, Volume Up/Down, Channel Up/Down, Mute, Smart Hub, Menu, Tools, Info, Return, Exit, and colored shortcut buttons.

- **Power Button** (Red Circle with Line): Turns the TV on and off.
- **SOURCE Button:** Displays and selects available video input sources (e.g., HDMI, AV).
- **VOL +/- Buttons:** Adjusts the volume level.

- **CH +/- Buttons:** Changes the television channel.
- **MUTE Button:** Temporarily cuts off the sound.
- **CH LIST Button:** Displays the channel list on the screen.
- **SMART HUB Button:** Accesses the Smart Hub applications on your Samsung Smart TV.
- **MENU Button:** Displays the main on-screen menu.
- **TOOLS Button:** Provides quick access to frequently used functions or settings.
- **INFO Button:** Displays information about the current program or TV status.
- **RETURN Button:** Navigates back to the previous menu or screen.
- **EXIT Button:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Yellow, Blue, Red, Green buttons for interactive functions or specific features within applications.
- **SPORTS Button:** Directly accesses sports-related content or modes.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **Number Buttons (0-9):** For direct channel input.
- **PRE-CH Button:** Returns to the previously viewed channel.
- **Media Control Buttons:** Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Backward for media playback.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Not Responding

If the remote control is not responding to commands:

1. **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA batteries.
2. **Line of Sight:** Make sure there is a clear line of sight between the remote control's infrared emitter and the TV's infrared receiver. Obstructions can block the signal.
3. **Interference:** Strong light sources (like direct sunlight or fluorescent lights) can interfere with the infrared signal. Try using the remote in a different lighting condition.
4. **Remote Reset:** Remove the batteries, press and hold any button on the remote for 5 seconds to discharge any residual power, then reinsert the batteries.

Specific Buttons Not Working

If only certain buttons are not functioning, it might indicate a physical defect or debris under the button.

- 1. **Clean Buttons:** Gently press the non-working button multiple times. If there's visible debris, try to carefully remove it.
- 2. **Inspect for Damage:** Check for any visible damage to the remote control.

Battery Compartment Issues

In rare cases, the battery compartment might be difficult to open or close.
Note: If the battery slot is deflected or stuck, do not force it open as this may cause damage. Contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	6.8 x 1.8 x 0.5 inches
Item Weight	2.39 ounces
ASIN	B09SW1SCW6
Item Model Number	SMTB-Uni-SS
Brand	Smartby
Special Feature	Universal
Max Number of Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared
Manufacturer	Smartby
Date First Available	February 19, 2022

WARRANTY AND SUPPORT

Smartby products are designed for reliability and performance. For specific warranty information, please refer to the product packaging or contact Smartby customer support directly.
If you encounter any issues or have questions regarding your Smartby Universal Remote Control, please visit the Smartby Store on Amazon or contact their customer service for assistance.
Smartby Store Link: [Visit the Smartby Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09SW1SCW6>

More documents and user manuals: <https://manuals.plus/>