

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSTWAY](#) /

› [COSTWAY Mobile Standing Desk \(Model 67483-CYWH-CA\) Instruction Manual](#)

## COSTWAY 67483-CYWH-CA

# COSTWAY Mobile Standing Desk (Model 67483-CYWH-CA) Instruction Manual

## INTRODUCTION

Thank you for choosing the COSTWAY Mobile Standing Desk. This instruction manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read it thoroughly before use and retain it for future reference.

This versatile mobile standing desk is designed to offer flexibility in your workspace, allowing for seamless transitions between sitting and standing positions. Its compact design and mobility make it suitable for various environments, including home offices, classrooms, and meeting rooms.

## PRODUCT FEATURES

- **Height Adjustable Design:** Easily adjust the desk height from 28.5 inches to 44 inches to switch between sitting and standing modes, promoting better posture and reducing fatigue.
- **Multifunctional 2-Tier Desktop:** Features an ample 24" x 24" desktop with two separate boards. One board can be tilted for ergonomic comfort, and includes an anti-skid strip to secure your laptop or other items.
- **Mobile with Lockable Casters:** Equipped with four universal casters for easy movement. Two of the casters are lockable to ensure stability when the desk is in use.
- **Heavy-Duty and Stable Construction:** Constructed from thick engineered wood boards and a sturdy steel frame, ensuring strong bearing capacity and durability.
- **Wide Application:** Its modern and sleek appearance makes it suitable for various settings such as home, office, meeting rooms, and classrooms.

## PACKAGE CONTENTS

Please ensure all components are present and undamaged before beginning assembly.

- 1 x Mobile Standing Desk (Components for assembly)
- 1 x Instruction Manual
- Assembly Tools (as required for assembly)

## SETUP AND ASSEMBLY

---

Assembly of the COSTWAY Mobile Standing Desk is straightforward and typically takes about 20-30 minutes. No specialized tools are required beyond what is provided.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Base Frame:** Connect the horizontal bars to the vertical support legs using the provided screws and tools. Ensure all connections are secure.
3. **Attach Casters:** Securely attach the four universal casters to the bottom of the base frame. Ensure two of the casters are lockable and positioned correctly for easy access.
4. **Install Desktop Supports:** Mount the adjustable desktop supports onto the vertical legs.
5. **Attach Desktop Panels:** Place the two desktop panels onto their respective supports. The main desktop panel (24" x 24") and the tilting panel should be aligned.
6. **Secure Tilting Mechanism:** If applicable, ensure the tilting mechanism for one of the desktop panels is correctly installed and the anti-skid strip is in place.
7. **Adjust Height:** Loosen the adjustment knobs on the vertical supports to set the desired height for each desktop panel. Once the desired height is achieved, tighten the knobs firmly to secure the panels in place.

# Humanized Ergonomic Design

Build a healthier working style and get away from unhealthy life



Fatigue



Obesity



Back Pain



## Pressure On Spine


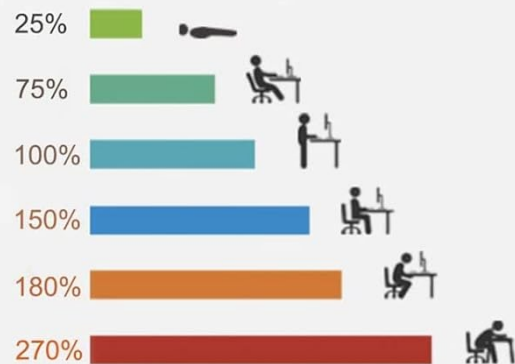 


Image: Detailed view of the desk components and assembly points.

# Selected Material

 The adjustable desk is made of natural walnut wood

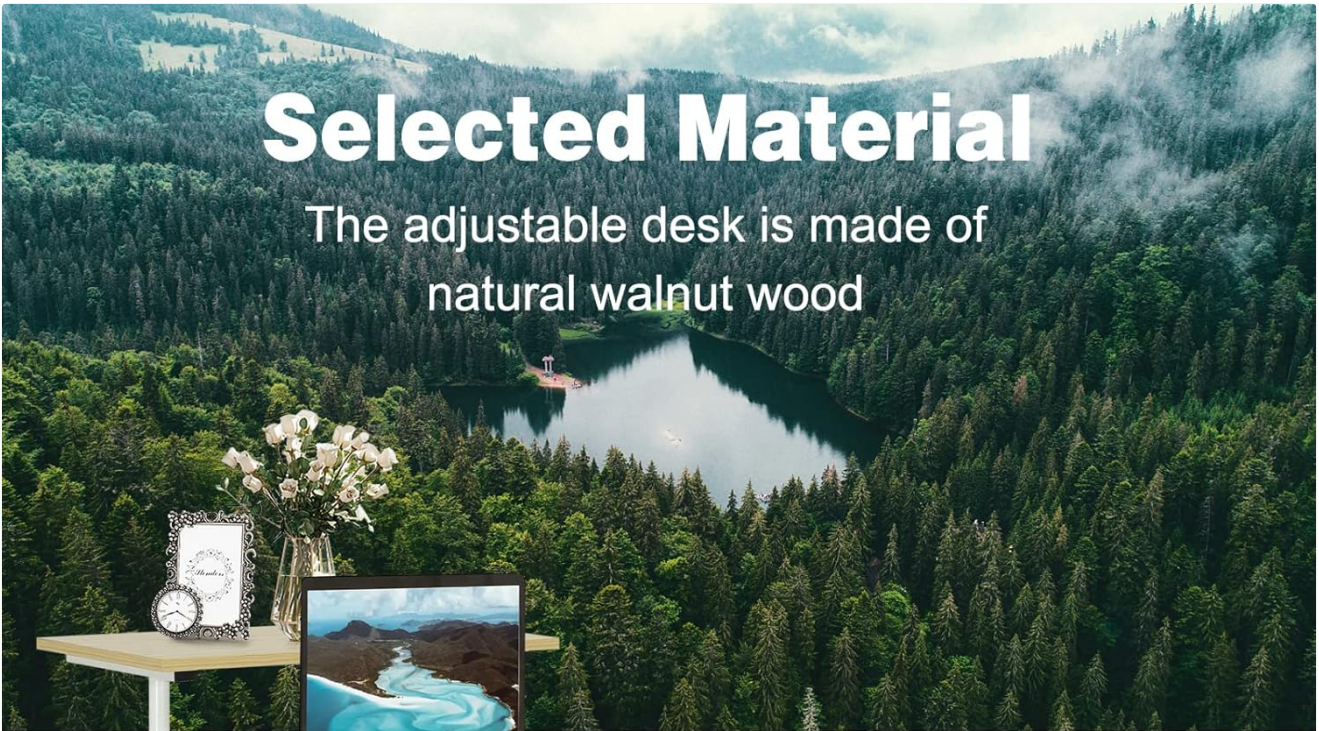

## Flip Over Desktop



Tightening Knobs

*Image: Close-up of the adjustment knobs for securing desk height.*

## OPERATING INSTRUCTIONS

### Adjusting Desk Height

To adjust the height of the desk panels:

1. Locate the black adjustment knobs on the vertical support poles for each desktop panel.
2. Turn the knobs counter-clockwise to loosen them.
3. Carefully raise or lower the desktop panel to your desired height. Ensure the panel is level if you intend to use it as a flat surface.
4. Once the desired height is reached, turn the knobs clockwise firmly to secure the panel in place. Verify stability before placing items on the desk.

### Tilting the Desktop Panel

One of the desktop panels can be tilted for ergonomic use, ideal for reading or using a tablet:

1. Locate the tilting mechanism underneath the designated desktop panel.
2. Adjust the angle to your preference.
3. Ensure the anti-skid strip is in place at the bottom edge of the tilting panel to prevent items from sliding off.

### Using Lockable Casters

To move or secure your desk:

- To move the desk, ensure all lockable casters are in the unlocked position.
- To secure the desk in place, push down the locking levers on the two lockable casters until they click into position. This prevents unintended movement.

## Adjustable Height

Allow you to realize quick transition between sitting and standing



Image: Visual representation of the desk's adjustable height and tilting desktop.

# Product Dimension

Overall Weight Capacity: 44 lbs



Image: Detail of the smooth-rolling casters, highlighting the locking mechanism.

Your browser does not support the video tag.

Video: A demonstration of the desk's sturdy construction and mobility. This video highlights the stability of the desk and the ease with which it can be moved and secured.

## MAINTENANCE

To ensure the longevity and appearance of your COSTWAY Mobile Standing Desk:

- **Cleaning:** Wipe the wood grain surface and steel frame with a damp cloth. Avoid using harsh chemicals or abrasive cleaners that could damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.
- **Caster Care:** Keep the casters free of dust and debris to ensure smooth rolling.

## TROUBLESHOOTING

If you encounter any issues with your COSTWAY Mobile Standing Desk, please refer to the following common solutions:

- **Desk Wobbles:** Ensure all assembly screws are tightened securely. Check that the casters are locked if you intend for the desk to remain stationary. Uneven floor surfaces can also cause wobbling; consider using a rug or shims for stability.
- **Difficulty Adjusting Height:** Loosen the adjustment knobs sufficiently before attempting to change the height. Ensure no weight is pressing down on the desktop while adjusting.
- **Casters Not Rolling Smoothly:** Check for any debris (hair, lint, etc.) caught in the caster wheels and remove it. Lubricate the caster axles if necessary.

For further assistance, please contact COSTWAY customer support.

 
## SPECIFICATIONS

<b>Brand</b>	COSTWAY
<b>Model Number</b>	67483-CYWH-CA
<b>Color</b>	Natural
<b>Material</b>	Engineered Wood, Alloy Steel
<b>Product Dimensions (D x W x H)</b>	23.5"D x 24"W x 40"H
<b>Minimum Height</b>	28.5 Inches
<b>Maximum Height</b>	44 Inches
<b>Item Weight</b>	18.5 Pounds
<b>Maximum Weight Recommendation</b>	44 Pounds
<b>Special Feature</b>	Adjustable, Rolling, Tilting Desktop
<b>Assembly Required</b>	Yes

# Practical Computer Desk For Wide Application



Office

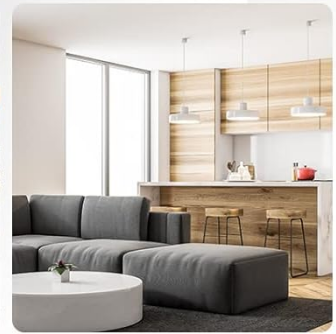

Living Room



Bedroom



Study

*Image: Detailed product dimensions for the mobile standing desk.*

## WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official COSTWAY website or contact their customer service department. Keep your purchase receipt for warranty claims.

### Contact Information:

- **Brand Store:** [Visit the COSTWAY Store on Amazon](#)
- **Manufacturer:** COSTWAY