

[Manuals.plus](#) /

> [RemotesReplaced](#) /

> RemotesReplaced Remote Control Instruction Manual for SELECLINE 888098/32S17

RemotesReplaced 888098/32S17

Instruction Manual

RemotesReplaced Remote Control

Model: SELECLINE 888098/32S17 Compatible

1. PRODUCT OVERVIEW

This document provides instructions for the RemotesReplaced replacement remote control, designed for full compatibility with the SELECLINE 888098/32S17 television model. This remote offers all the functionalities of the original remote without requiring any programming or setup codes.



Figure 1: Front view of the remote control, showing all buttons and layout.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control, highlighting the battery compartment.

2.2 Initial Use

No setup codes or programming are required. Once batteries are correctly installed, the remote control is ready for immediate use with your SELECLINE 888098/32S17 television.

3. OPERATING INSTRUCTIONS

This remote control provides access to all standard functions of your SELECLINE 888098/32S17 television. Point the remote directly at the TV's infrared receiver for optimal performance.

3.1 Basic Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **Number Buttons (0-9):** Directly select channels.
- **SOURCE:** Selects input sources (e.g., HDMI 1, AV).
- **MENU:** Opens the TV's main menu.

- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **EXIT:** Exits the current menu or function.

3.2 Advanced Functions

- **INFO:** Displays information about the current program.
- **EPG:** Accesses the Electronic Program Guide.
- **FAV:** Accesses favorite channels list.
- **SLEEP:** Sets the sleep timer.
- **NET TV / SMART:** Accesses smart TV features or internet applications (if supported by your TV model).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or smart TV applications as indicated on screen.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote works intermittently.	Weak batteries; Obstruction between remote and TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver.
Specific buttons not working.	Button stuck or damaged; TV model incompatibility for specific advanced features.	Gently press the button to ensure it's not stuck. Verify your TV model supports the specific function.

6. SPECIFICATIONS

Model Number: 888098/32S17

Brand: RemotesReplaced

Compatible With: SELECLINE 888098/32S17 TV

Battery Type: 2 x AAA (not included)

Weight: 120 Grams

Manufacturer: Linkwebb

7. WARRANTY INFORMATION

This Remote Replaced remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as intended for the specified SELECLINE model.

For warranty claims or support, please contact the seller or manufacturer directly with your proof of purchase. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.