

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit EN214C1H Replacement Remote Control User Manual](#)

ZdalaMit EN214C1H

ZdalaMit EN214C1H Replacement Remote Control User Manual

Model: EN214C1H | Brand: ZdalaMit

INTRODUCTION

This manual provides instructions for the ZdalaMit EN214C1H Replacement Remote Control, designed for use with Hisense HS214 2.1ch Sound Bar Systems. This remote control requires no programming or pairing; simply install batteries for immediate use.

PRODUCT OVERVIEW



Figure 1: Angled view of the ZdalaMit EN214C1H Replacement Remote Control.

The EN214C1H is a direct replacement remote control, offering essential functions for your Hisense HS214 soundbar. Its design focuses on ease of use and immediate functionality.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

No programming or pairing is required after battery installation. The remote control is ready for immediate use with compatible Hisense HS214 soundbar models.

OPERATING INSTRUCTIONS



Figure 2: Front view of the remote control showing button layout.

Point the remote control directly at your Hisense HS214 soundbar to ensure proper signal transmission. The remote provides access to various functions:

- **Power Button ()**: Turns the soundbar on or off.
- **Mute Button ()**: Mutes or unmutes the soundbar audio.
- **Volume Up/Down (VOL+ / VOL-)**: Adjusts the main volume level.
- **Play/Pause (/ PAIR)**: Controls media playback. Also used for Bluetooth pairing (refer to soundbar manual for pairing procedure).
- **Previous/Next Track (/)**: Skips to the previous or next track during media playback.
- **Sound Modes (MOVIE, MUSIC, NEWS)**: Selects preset audio equalization modes optimized for different content types.
- **Surround Sound (SURR)**: Activates or deactivates surround sound mode.
- **Display Dimmer (DIM-, DIM+)**: Adjusts the brightness of the soundbar's display.
- **Bass Control (BASS-, BASS+)**: Adjusts the bass level.

- **Source (SOURCE):** Cycles through available input sources (e.g., HDMI ARC, Optical, Bluetooth, AUX, USB).

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are installed correctly with the correct polarity.
- Replace old batteries with new 1.5V AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
- Confirm the remote is pointed directly at the soundbar.

- **No programming required:**

This remote control is pre-programmed for the Hisense HS214 soundbar. No manual programming or code entry is necessary. If it does not work, verify compatibility with your soundbar model (HS214).

SPECIFICATIONS

Model Number	EN214C1H
Compatible Soundbar	Hisense HS214 2.1ch Sound Bar System
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Dimensions	Approximately 5 x 1.2 x 0.5 inches (12.7 x 3.0 x 1.3 cm)
Weight	Approximately 1.06 ounces (30 grams) without batteries
Color	Black