



Manuals.plus /

› GEERTOP /

› GEERTOP 4 Person 4 Season Camping Tent Instruction Manual (Model: B08KZXNVP8)

## GEERTOP B08KZXNVP8

# GEERTOP 4 Person 4 Season Camping Tent Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the proper setup, operation, and maintenance of your GEERTOP 4 Person 4 Season Tent. Designed for versatility, this double-layer tent offers protection across all four seasons, making it suitable for camping, hiking, and backpacking in various outdoor conditions.

## PACKAGE CONTENTS

---

Before beginning assembly, please verify that all components are present:

- Fly Cover x 1
- Inner Tent x 1
- Poles x 2 (Aluminum)
- Stakes x 10
- Ropes x 4
- Top Net Pocket x 1
- Storage Bag x 1



<b>Sleeping Capacity</b>	4 Person	<b>Flysheet Waterproof Rating</b>	PU3000 mm
<b>Tent Floor Waterproof Rating</b>	PU5000 mm	<b>Poles</b>	Aluminum
<b>Weight</b>	9.14 lbs/4.15kg	<b>Package Size</b>	17.3 x 8.2 x 8.2 inches
<b>Structure</b>	Freestanding Dome Tent	<b>Use for</b>	Camping Hiking Backpacking Hunting Outdoor Survival

#### PACKAGE INCLUDES



Image: All components included in the tent package.

## SETUP INSTRUCTIONS

- 1. Prepare the Site:** Choose a flat, clear area free of sharp objects. Lay out the inner tent on the ground.
- 2. Assemble Poles:** Connect the aluminum pole sections.
- 3. Insert Poles:** Slide the assembled poles through the sleeves on the inner tent.
- 4. Secure Inner Tent:** Insert the ends of the poles into the grommets at the corners of the inner tent. Lift the tent to form its dome shape and clip the inner tent to the poles.



Image: Inner tent with poles assembled, showing the freestanding structure.

5. **Attach Rainfly:** Drape the fly cover over the inner tent, aligning the doors and vents. Secure the fly cover to the inner tent's corners using the buckles or straps.
6. **Stake Down:** Use the provided stakes to secure the tent corners and guy lines to the ground. This provides stability, especially in windy conditions.

# Double Wall 4 Person Tent

## All Season Protection



Image: Tent with and without rainfly, demonstrating its double-wall protection.

7. **Adjust Ventilation:** Ensure the two ventilation windows are open for airflow.

## OPERATING INSTRUCTIONS

---

### Ventilation

The tent features two entrances and two ventilation windows to ensure optimal airflow and reduce condensation. Keep these open whenever possible, especially in humid conditions, to maintain a comfortable interior environment.

### Vestibule Use

The tent includes a vestibule area, which can be used for gear storage or as an awning. When using as an awning, trekking poles (not included) can be used to prop up the outer door curtain. The outer door curtain can be rolled up and secured with buckles for easy access or to create an open porch area.



## Spacious Double Entry with Porch

Extra storage for all your outdoor gear and shoes, plus the cozy area to sit—all while maintaining excellent, fresh airflow



Image: Tent vestibule configured as a porch, providing extra space and airflow.

### 4-Season Use

This tent is designed for 4-season use. The integrated snow skirt provides additional protection against wind and snow in colder conditions. In warmer weather, the rainfly can be removed to use only the inner tent for increased ventilation and stargazing.

### MAINTENANCE

- **Cleaning:** After each use, clean the tent with a soft sponge and mild soap. Do not use harsh detergents or washing machines. Rinse thoroughly.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and damage to the waterproof coatings. Air dry in a shaded area.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid compressing the tent for long periods.
- **Pole Care:** Inspect poles for damage or bending. Clean dirt from pole sections and shock cord.
- **Zipper Care:** Keep zippers clean and lubricated with a silicone-based spray to ensure smooth operation.

## TROUBLESHOOTING

---

### Condensation Inside Tent

Condensation is a natural occurrence. To minimize it, ensure adequate ventilation by keeping the tent's vents and doors (if weather permits) open. Avoid cooking inside the tent.

### Water Leaks

Check for proper rainfly placement and ensure all zippers are fully closed. Verify that seams are sealed. If leaks persist, inspect for damage to the fabric or seam tape.

### Difficulty Setting Up Poles

Ensure pole sections are fully connected. Do not force poles; if they are stiff, check for dirt or damage in the joints. Setting up on a flat surface can also help.

## SPECIFICATIONS

---

Feature	Specification
Occupancy	4 Person
Seasons	4 Season (Spring, Summer, Fall, Winter)
Structure Type	Freestanding Dome Tent
Inner Tent Material	210T Breathable Polyester
Floor Material	210D PU 5000 mm Oxford Fabric
Fly Tarp Material	210T PU 3000 mm Anti-tear Checkered Polyester
Poles Material	Aluminum
Item Weight	9.1 lbs (4 kg)
Product Dimensions (L x W x H)	94.49" x 82.68" x 55.12" (240cm x 210cm x 140cm)
Packed Size	17.3" x 8.2" x 8.2" (approx.)

# SPACIOUS ROOM



**Roomy 4-Person Tent for Camping:**

Fits 3-4 people comfortably in a 6.9' x 7.8' space.  
Perfect for families with children and small groups

Image: Interior view of the tent, highlighting spaciousness.

# 4 Person Tent with Vestibule



**INCH**

29.5in 94.5in 29.5in

53in 94.5in

**9.14 lbs**

**EASY CARRY BAG**

19.6in 7.8in

Image: Detailed dimensions and weight of the tent.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact GEERTOP customer service directly. Contact details can typically be found on the manufacturer's official website or through your retailer.