

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny Kids Porch Swing with Adjustable Canopy - Model 312-071CF Instruction Manual](#)

**Outsunny 312-071CF**

# Outsunny Kids Porch Swing with Adjustable Canopy

Model: 312-071CF

Brand: Outsunny

## 1. INTRODUCTION

---

This manual provides essential information for the safe assembly, operation, and maintenance of your Outsunny Kids Porch Swing, Model 312-071CF. Please read these instructions thoroughly before assembly and use to ensure proper function and safety.



Image: The Outsunny Kids Porch Swing, featuring a brown frame, monkey-themed backrests, and an adjustable canopy, situated on a green lawn.

## 2. SAFETY INFORMATION

---

**WARNING:** Failure to follow these safety instructions may result in serious injury or death.

- **Age Range:** This porch swing is designed for children aged 3 to 6 years old.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 132 lbs (60 kg). This swing is designed for two children.
- **Adult Supervision:** Always ensure children are supervised by an adult while using the swing.
- **Seatbelts:** Always secure children with the provided seatbelts before use to prevent falls. Ensure seatbelts are properly fastened and adjusted.
- **Assembly:** Adult assembly is required. Ensure all parts are correctly installed and tightened before allowing children to use the swing.
- **Placement:** Place the swing on a level, stable surface. Ensure adequate clear space around the swing to prevent collisions.
- **Inspection:** Regularly inspect the swing for loose bolts, worn parts, or damage. Do not use if any part

is damaged or missing.

- **Weather Conditions:** Do not use the swing during strong winds or severe weather. Store or secure the swing during adverse weather conditions.
- **Certifications:** This product meets ASTM F963, CPSIA, and SOR safety standards.



Image: A child is shown sitting on the swing, with a close-up inset demonstrating the proper use of the seatbelt for safety.

### 3. PACKAGE CONTENTS

---

Please verify that all components are present and undamaged before beginning assembly. Refer to the parts list included in your product packaging for a complete and detailed inventory. If any parts are missing or damaged, contact customer support immediately.

### 4. SETUP AND ASSEMBLY

---

Adult assembly is required for this product. Please follow the step-by-step instructions provided in the separate assembly manual included with your purchase. Ensure you have all necessary tools as specified in the manual.

- **Preparation:** Lay out all components on a clean, flat, and soft surface to prevent scratches.

- **Frame Assembly:** Assemble the main metal frame components according to the diagrams. Ensure all bolts are securely tightened.
- **Seat and Backrest Installation:** Attach the seat and backrest fabric to the frame.
- **Canopy Attachment:** Install the adjustable canopy onto the top frame.
- **Final Check:** Before first use, double-check all connections, bolts, and safety features to ensure they are secure and correctly installed.

## MORE DETAILS

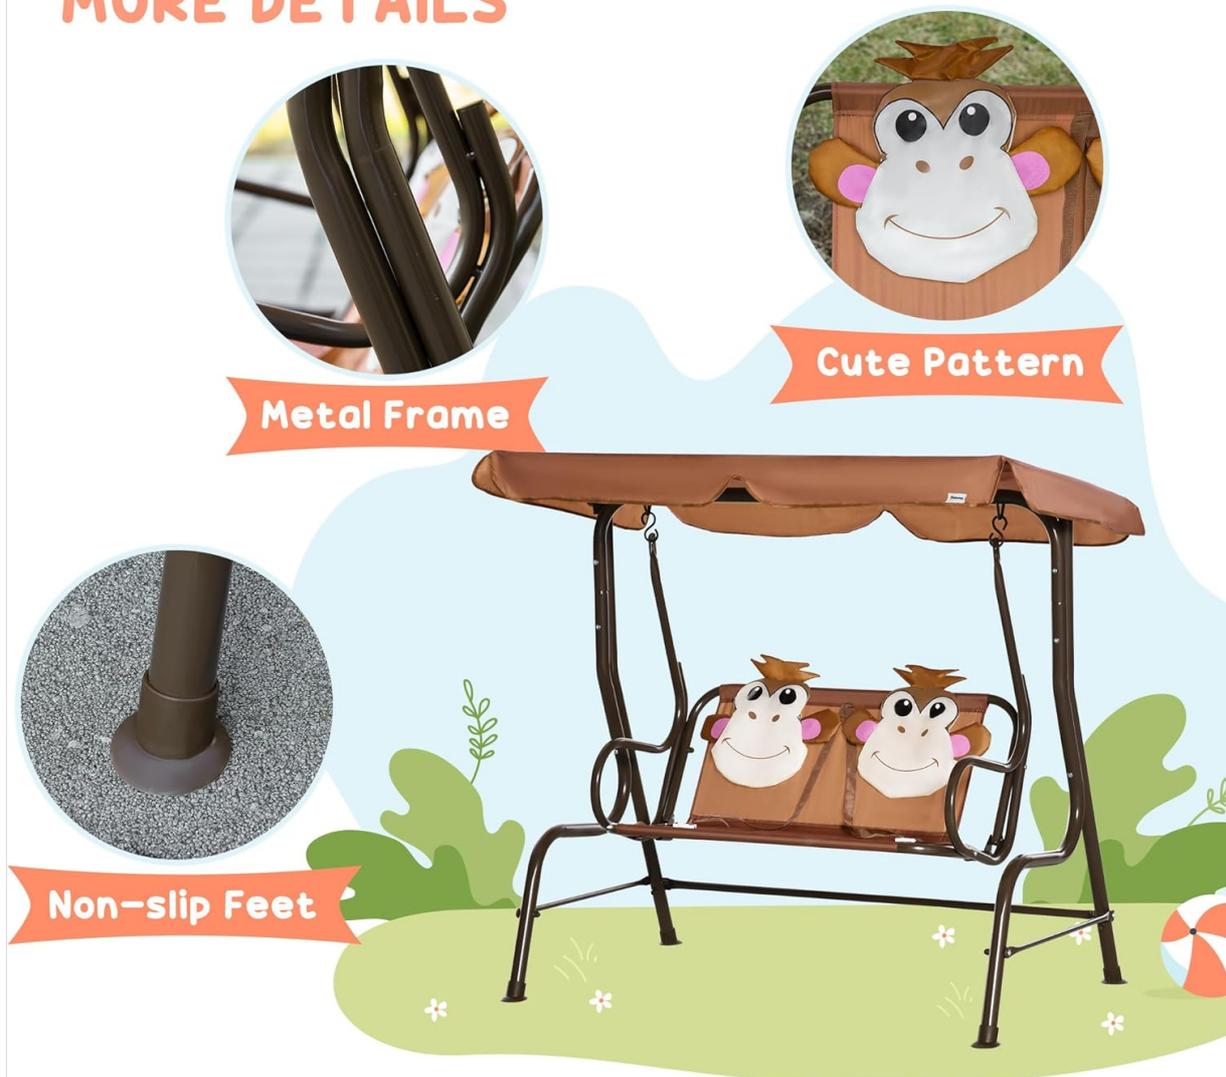


Image: This image highlights key structural details including the robust metal frame, non-slip feet for stability, and the decorative monkey pattern on the backrest.

## 5. OPERATING INSTRUCTIONS

- **Seating:** Guide children to sit properly on the swing seat. The swing is designed for two children.
- **Seatbelt Use:** Always fasten the seatbelts around each child and adjust them snugly.
- **Swinging Motion:** Encourage gentle swinging. Avoid excessive force or standing on the swing.
- **Adjusting the Canopy:** The canopy can be adjusted to block the sun from various angles. Locate the adjustment knobs on the side of the canopy frame and rotate them to set the desired angle (up to 15 degrees). Ensure the canopy is securely locked in position after adjustment.

# ADJUSTABLE CANOPY

Brings shade to children on a hot summer day



Image: A visual representation of the adjustable canopy, demonstrating how it can be tilted up to 15 degrees by rotating a knob to provide shade.

## 6. MAINTENANCE

---

- **Cleaning:** Clean the metal frame with a damp cloth and mild soap. The fabric seat and canopy can be spot cleaned with a mild detergent and water. Do not use abrasive cleaners.
- **Canopy Care:** To prolong the life and color of the canopy, avoid prolonged exposure to direct sunlight when not in use. Consider covering or storing the swing during extended periods of harsh weather.
- **Fastener Check:** Periodically check all bolts, nuts, and other fasteners to ensure they are tight. Retighten as necessary.
- **Fabric Inspection:** Inspect the seat fabric, backrests, and canopy for tears, fraying, or excessive wear. Replace damaged components if necessary.
- **Storage:** When not in use for extended periods, store the swing in a dry, protected area to prevent weather damage.

## 7. TROUBLESHOOTING

---

- **Swing is unstable:** Ensure the swing is placed on a completely level surface. Check all frame connections and bolts to confirm they are tightened securely.
- **Canopy does not stay in position:** Verify that the adjustment knobs on the canopy frame are fully tightened after setting the desired angle.
- **Seatbelts are difficult to fasten/unfasten:** Check for any obstructions in the buckle mechanism. Ensure the straps are not twisted. If damaged, contact customer support for replacement parts.
- **Squeaking during use:** Apply a small amount of silicone-based lubricant to the pivot points of the swing mechanism.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	312-071CF
Color	Coffee
Overall Dimensions	43.25" W x 29.25" D x 44.5" H
Adjustable Canopy Range	15°
Seat Depth	11.75 inches
Frame Material	Metal pipe
Fabric Material	Polyester
Finish Type	Powder Coated
Item Weight	22 pounds
Recommended Age	3-6 Years Old
Assembly Required	Yes
Certifications	ASTM F963, CPSIA, SOR



Image: A technical drawing illustrating the full dimensions of the Outsunny Kids Porch Swing, including width, depth, height, and seat measurements.

## 9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Outsunny website. If you require assistance with assembly, missing parts, or have any questions regarding the product, please contact Aosom LLC customer support. Contact details can typically be found on the product packaging or the manufacturer's website.