

Bosch MFQ49700

Bosch Styline MFQ49700 Hand Mixer Instruction Manual

Model: MFQ49700 | Brand: Bosch

INTRODUCTION

Thank you for choosing the Bosch Styline MFQ49700 Hand Mixer. This appliance is designed for efficient mixing, beating, and kneading tasks in your kitchen. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.



Image: Bosch Styline MFQ49700 Hand Mixer with kneading hooks, surrounded by ingredients for baking.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor unit in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Bosch Styline MFQ49700 Hand Mixer Motor Unit
- 2 FineCreamer Turbo Whisks (Stainless Steel)
- 2 Kneading Hooks (Stainless Steel)
- Stainless Steel Immersion Blender Foot
- Mixing Bowl with Lid
- Coiled Cable



Image: Bosch Styline MFQ49700 Hand Mixer with all included accessories: whisks, kneading hooks, immersion blender foot, and mixing cup. The image also shows product dimensions for the mixer and attachments.

PRODUCT FEATURES

- **Powerful 850W Motor:** Ensures quick and effortless mixing and kneading.
- **FineCreamer Whisks:** Two stainless steel FineCreamer whisks for optimal beating and mixing results, ideal for cream, sauces, and light batters.
- **Stainless Steel Kneading Hooks:** Two robust stainless steel kneading hooks for handling heavy doughs like bread or pasta.
- **5 Speed Settings + Turbo Function:** Provides precise control for various recipes.
- **Ergonomic Design:** Soft-touch handle for comfortable use.
- **Easy Cleaning:** Whisks, kneading hooks, immersion blender foot, and mixing bowl are dishwasher-safe.
- **Versatile Attachments:** Includes an immersion blender foot for blending soups and sauces.



✓ 1 Paar innovative
Rührbesen für
optimale Ergebnisse

Image: Close-up of the Bosch Styline MFQ49700 hand mixer with FineCreamer whisks attached, ready for use. The text on the image highlights '1 Pair innovative whisks for optimal results'.



Image: Bosch Styline MFQ49700 hand mixer with stainless steel kneading hooks mixing dough in a clear bowl. The text on the image indicates 'Including stainless steel kneading hooks'.



Sahne, Cremes,
leichte Teige



Brot-, Nudel-,
Hefeteige



Image: Comparison of FineCreamer whisks and kneading hooks, showing their applications for light batters/creams and heavy doughs respectively. The image shows whipped cream cupcakes and a loaf of bread.

SETUP

1. **Attaching Whisks/Kneading Hooks:** Ensure the appliance is unplugged. Insert the desired whisks or kneading hooks into the openings on the front of the mixer until they click into place. The whisks/hooks are designed to fit only one way.
2. **Attaching Immersion Blender Foot:** For models including the immersion blender foot, align the foot with the opening on the bottom of the mixer and twist to secure it. Ensure it is firmly locked before use.
3. **Power Connection:** Plug the coiled cable into a suitable power outlet (240V).

OPERATING INSTRUCTIONS

The Bosch Styline MFQ49700 features 5 speed settings and a turbo function for optimal control.

1. **Selecting Speed:** Use the slider switch on the top of the mixer to select one of the 5 speed settings (1-5). Start with a lower speed and gradually increase as needed for your recipe.
2. **Turbo Function:** For a short burst of maximum power, press and hold the "M" (Momentary/Turbo) button. Release the button to stop the turbo function.
3. **Ejecting Attachments:** After use, ensure the mixer is switched off and unplugged. Press the eject button (located near the speed selector) to release the whisks, kneading hooks, or immersion blender foot.

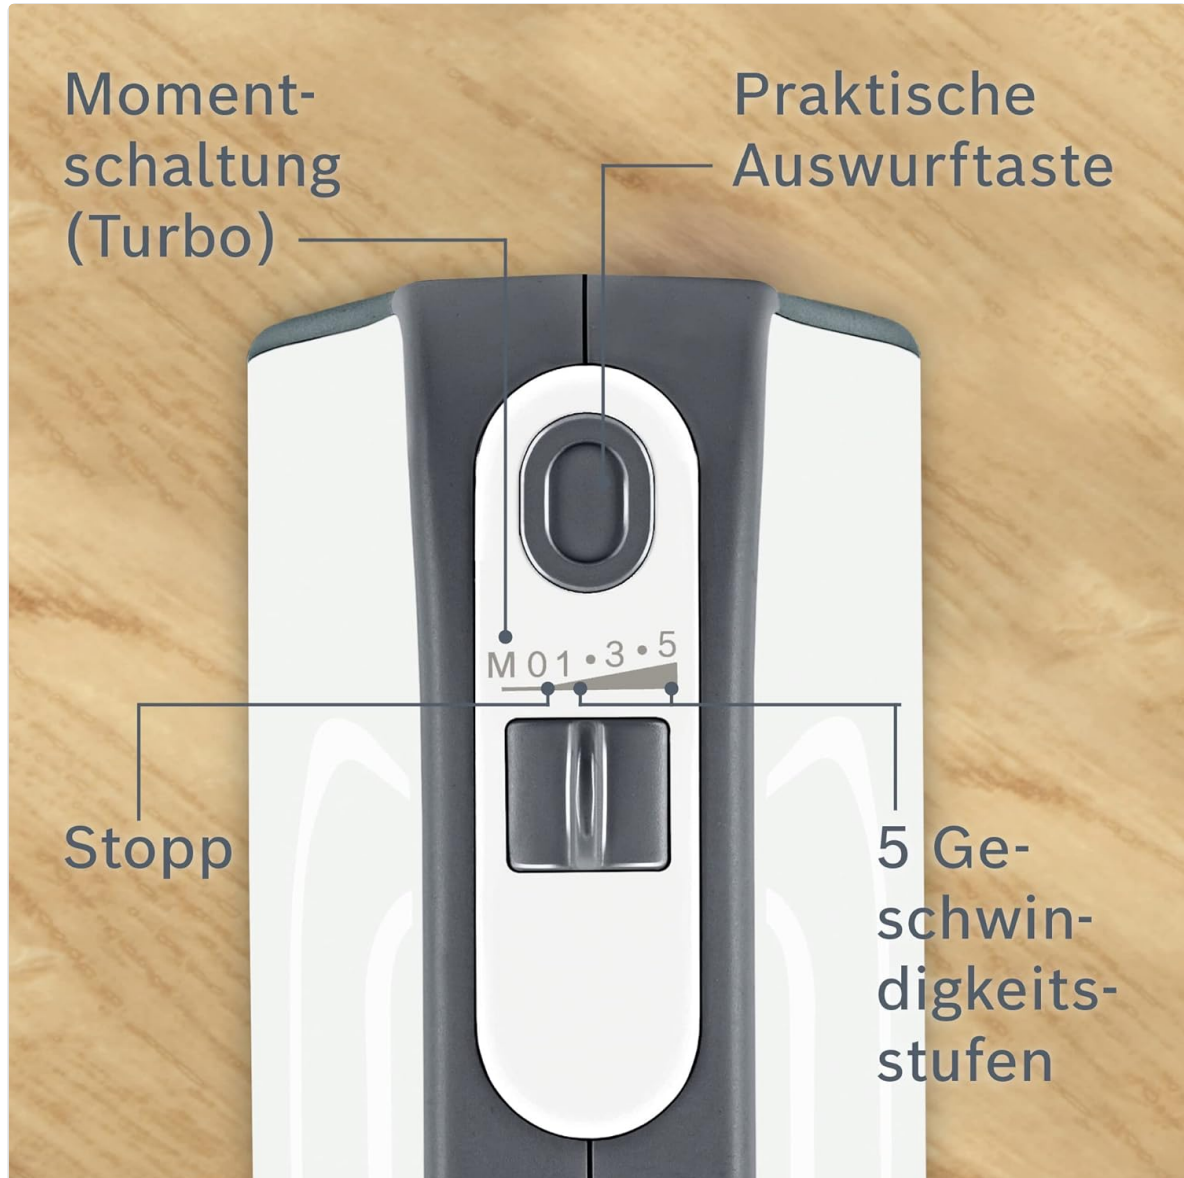


Image: Close-up of the Bosch Styline MFQ49700 hand mixer's control panel, showing the speed selector (M, 0, 1-5), the turbo button, and the eject button. Labels indicate 'Momentary Switch (Turbo)', 'Stop', '5 Speed Levels', and 'Practical Eject Button'.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your hand mixer.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or wash it under running water.

- **Attachments:** The FineCreamer whisks, kneading hooks, immersion blender foot, and mixing bowl are dishwasher-safe. Alternatively, they can be washed by hand in warm, soapy water and rinsed thoroughly.
- Ensure all parts are completely dry before storing.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------------|---|--|
| Mixer does not turn on. | Not plugged in; power outlet faulty; appliance damaged. | Check power connection; try a different outlet; contact customer support if damaged. |
| Attachments do not lock in place. | Attachments not inserted correctly. | Ensure attachments are aligned and pushed firmly until they click. |
| Mixer stops during operation. | Overheating due to prolonged use or heavy load. | Turn off and unplug the mixer. Allow it to cool down for at least 30 minutes before resuming use. Reduce load if possible. |

TECHNICAL SPECIFICATIONS

Model Number: MFQ49700

Power: 850 Watts

Voltage: 240 Volts

Number of Speeds: 5 + Turbo

Dimensions (L x W x H): 20 cm x 7.5 cm x 14.2 cm

Weight: 1.4 Kilograms

Material: Plastic, Stainless Steel

Noise Level: 65 Decibels

Country of Origin: Slovenia



Image: Bosch Styline MFQ49700 Hand Mixer with dimensions labeled: 142mm height, 200mm length, 75mm width. Also shows whisks and kneading hooks with 208mm length, and a 1.1kg weight label.

WARRANTY AND SUPPORT

This Bosch Styline MFQ49700 Hand Mixer comes with a **2-year manufacturer's warranty**. For warranty claims, technical support, or service inquiries, please contact Bosch customer service. Retain your proof of purchase for warranty validation.