

Manuals.plus /

› Bosch /

› Bosch MFQ4980B 850 Watt Hand Mixer Instruction Manual

## Bosch MFQ4980B

# Bosch MFQ4980B 850 Watt Hand Mixer Instruction Manual

Model: MFQ4980B | Brand: Bosch

## INTRODUCTION

Thank you for choosing the Bosch MFQ4980B Hand Mixer. This appliance is designed to assist you with various food preparation tasks, offering powerful performance and versatile attachments. Please read this manual carefully before first use to ensure safe operation and optimal results. Keep this manual for future reference.

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions thoroughly before operating the appliance.
- To protect against electric shock, do not immerse the motor unit, cord, or electrical plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters and dough hooks during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the appliance is switched off and unplugged before changing accessories or approaching parts that move in use.

## PACKAGE CONTENTS

Your Bosch MFQ4980B Hand Mixer package includes the following items:

- 1 x Bosch MFQ4980B Hand Mixer Motor Unit
- 2 x Premium Stainless Steel Turbo Beaters
- 2 x Professional Dough Hooks

- 1 x Stainless Steel Blending Wand
- 1 x Blending/Measuring Jug with Lid
- 1 x Universal Chopper
- 1 x Spiral Power Cable (integrated)



Image: Bosch MFQ4980B Hand Mixer with all included attachments, including turbo beaters, dough hooks, blending wand, and chopper.

## PRODUCT OVERVIEW

The Bosch MFQ4980B Hand Mixer is a versatile kitchen tool featuring a powerful 850-watt motor and a soft-touch handle for comfortable use. It offers 5 speed settings plus an additional turbo function for maximum performance. The separate eject button allows for easy removal of accessories.



Image: The Bosch MFQ4980B Hand Mixer with turbo beaters attached, ready for use.

## SETUP

---

Before first use, clean all accessories as described in the 'Cleaning and Maintenance' section. Ensure the mixer is unplugged from the power outlet before attaching or removing any accessories.

### Attaching Beaters or Dough Hooks:

1. Select the desired beaters (turbo beaters for whipping/mixing, dough hooks for kneading).
2. Insert the shafts of the beaters or dough hooks into the openings on the underside of the motor unit. Push firmly until they click into place. Ensure they are securely locked.
3. For dough hooks, ensure the hook with the collar is inserted into the larger opening.

### Attaching the Blending Wand or Chopper:

The blending wand and chopper attach to a separate port on the mixer. Refer to the specific instructions for these attachments for proper assembly and use.

## OPERATING INSTRUCTIONS

---

Always ensure the mixer is unplugged before attaching or removing accessories. Once accessories are securely attached, plug the mixer into a 220-240V power outlet.



Image: Control panel of the Bosch MFQ4980B Hand Mixer, indicating speed settings (0, 1, 3, 5) and the eject button.

### Speed Control:

- The mixer features 5 speed settings, indicated by numbers on the control panel.
- Slide the speed selector switch to the desired speed (1-5) to start the mixer.
- Use lower speeds for gentle mixing and higher speeds for more intensive tasks like whipping or beating.

### Turbo Function:

- For a short burst of maximum power, press and hold the 'M' (Moment/Turbo) button. The mixer will operate at its highest speed as long as the button is held down.
- Release the button to return to the selected speed or to stop the mixer if the speed selector is at '0'.

### Ejecting Accessories:

- Always switch off the mixer (speed selector to '0') and unplug it from the power outlet before ejecting accessories.
- Press the separate eject button firmly to release the beaters or dough hooks.







Image: A hand demonstrating the comfortable grip of the Bosch MFQ4980B Hand Mixer.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your Bosch Hand Mixer.

### Motor Unit:

- Always unplug the mixer before cleaning.
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as these can damage the surface.

### Accessories:

- The premium stainless steel turbo beaters, professional dough hooks, stainless steel blending wand, blending/measuring jug, and universal chopper parts are dishwasher-safe.
- Alternatively, wash them in warm, soapy water, then rinse thoroughly and dry.



Image: Dishwasher-safe accessories, including turbo beaters and dough hooks, in a dishwasher rack.

## TROUBLESHOOTING

---

If you encounter issues with your hand mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet issue; speed selector at '0'.	Ensure the mixer is securely plugged into a working power outlet. Move speed selector to a numbered setting (1-5).
Attachments do not eject.	Eject button not pressed firmly; attachments jammed.	Ensure the mixer is unplugged. Press the eject button firmly. If jammed, gently wiggle attachments while pressing the button.
Motor sounds strained or overheats.	Overloaded with thick mixture; continuous operation for too long.	Reduce the amount of ingredients or thin the mixture. Allow the mixer to cool down for several minutes before resuming use. Avoid continuous operation for more than 5 minutes.
Unusual noise during operation.	Attachments not properly inserted; foreign object.	Unplug the mixer. Check that attachments are securely locked in place. Inspect for any foreign objects that may be interfering with the attachments.

## SPECIFICATIONS

<b>Brand Name</b>	Bosch
<b>Model Name</b>	MFQ4980B
<b>Product Type</b>	Hand Mixer
<b>Color</b>	Black
<b>Wattage</b>	850 Watts
<b>Voltage</b>	220-240 Volts
<b>Number of Speeds</b>	5
<b>Control Type</b>	Push Button
<b>Material</b>	Plastic (main unit), Stainless Steel (beaters, hooks, blending wand)
<b>Special Features</b>	Safety Lock
<b>Capacity (Blending Jug)</b>	800 Milliliters
<b>Item Weight</b>	1.8 Kilograms
<b>Product Dimensions (DxWxH)</b>	9 x 9 x 9 cm (Note: Feature bullets state 14.2 x 20 x 7.5 cm, please refer to product packaging for exact dimensions)
<b>Dishwasher Safe Parts</b>	Yes
<b>Country of Manufacture</b>	Slovenia
<b>GTIN/UPC</b>	04242005297061

## WARRANTY AND SUPPORT

This Bosch MFQ4980B Hand Mixer comes with a Bosch Warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty. For technical support, service, or to inquire about replacement parts, please contact Bosch customer service or visit the official Bosch website for your region. Keep your purchase receipt as proof of purchase for warranty claims.

