

GDR PRO GICT390

GDR PRO Garage Door Opener Visor 1-Button Remote Instruction Manual

Model: GICT390 Compatible

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your GDR PRO Garage Door Opener Visor 1-Button Remote, designed for compatibility with Genie (GICT390) systems. Please read this manual thoroughly before use to ensure proper function and safety.

SAFETY INFORMATION

- Always ensure the garage door area is clear of people, pets, and obstructions before operating the remote.
- Do not allow children to play with the garage door remote control.
- Keep the remote control out of reach of children.
- If the remote is lost or stolen, reprogram your garage door opener to prevent unauthorized access.
- Dispose of batteries properly according to local regulations.

PACKAGE CONTENTS

Upon opening your package, please verify that all the following items are included:



One (1) GDR PRO Garage Door Opener Visor 1-Button Remote: This is the primary remote control unit, featuring a single button for operation and a durable casing.



One (1) Visor Clip: A metal clip designed to attach the remote securely to your vehicle's sun visor for easy access.

One (1) CR2032 Lithium Metal Battery: A pre-installed or included battery to power the remote control.

One (1) Program Guide/Instructions: A detailed guide providing specific programming steps for your remote, often included as a separate leaflet or digital resource.

SETUP AND PROGRAMMING

The GDR PRO remote is self-programmable. Detailed programming instructions are provided with your purchase. The general steps involve syncing the remote with your garage door opener unit. Please refer to the specific program guide included with your remote for precise instructions tailored to Genie (GICT390) compatible systems.

General Programming Steps (Refer to included guide for specifics):

- 1. Locate the Learn Button:** On your garage door opener motor unit, find the "Learn" or "Program" button. The location and color of this button may vary by model.
- 2. Activate Learn Mode:** Press and immediately release the "Learn" button. An indicator light on the opener unit will typically illuminate, signifying that it is in learn mode. You usually have about 30 seconds to complete the next step.
- 3. Program the Remote:** Within the learn mode timeframe, press and hold the button on your new GDR PRO remote that you wish to use to operate the garage door.
- 4. Confirm Programming:** Release the remote button once the garage door opener's light blinks or makes a clicking sound, indicating successful programming.
- 5. Test Operation:** Press the programmed button on your remote to test if it operates the garage door.

Note: If programming is unsuccessful, ensure the remote has a fresh battery and repeat the steps carefully. Consult the specific programming guide for troubleshooting tips or contact support if issues persist.

OPERATING INSTRUCTIONS

To operate your garage door using the GDR PRO remote:

- Ensure you are within range of your garage door opener.
- Press the programmed button on the remote control firmly and release.
- The garage door will begin to open or close. Pressing the button again during operation will typically stop the door.

MAINTENANCE

Battery Replacement:

The remote uses one CR2032 Lithium Metal battery. If the remote's range decreases or it stops responding, the battery may need replacement.

1. Locate the battery compartment on the back or side of the remote.

- 2. Use a small coin or screwdriver to gently pry open the compartment cover.
- 3. Remove the old CR2032 battery.
- 4. Insert a new CR2032 battery with the positive (+) side facing up (or as indicated by the compartment markings).
- 5. Snap the compartment cover back into place.
- 6. Test the remote's operation.

Note: Dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working after programming.	Incorrect programming steps, dead battery, or remote out of range.	<ul style="list-style-type: none">• Re-attempt programming following the included guide precisely.• Replace the battery with a new CR2032.• Ensure you are within effective range of the garage door opener.
Reduced operating range.	Low battery or interference.	<ul style="list-style-type: none">• Replace the battery.• Check for sources of radio frequency interference near the garage door opener.
Garage door opens/closes unexpectedly.	Stuck button, interference, or accidental activation.	<ul style="list-style-type: none">• Ensure the remote button is not stuck.• Reprogram the remote and potentially clear all existing codes from the opener and reprogram all remotes.

SPECIFICATIONS

Model: GICT390 Compatible
Brand: GDR PRO
Power Source: 1 x CR2032 Lithium Metal Battery (included)
Item Weight: Approximately 1 ounce
Package Dimensions: Approximately 6.22 x 3.66 x 1.1 inches
Compatibility: Designed for Genie (GICT390) systems

WARRANTY AND SUPPORT

This product is an aftermarket replacement. For specific warranty information, please refer to the documentation included with your purchase or contact GDR PRO directly. Standard return policies typically allow for returns within 30 days of purchase.

For technical support or further assistance, please contact the manufacturer, GDR PRO, through their official channels or the retailer from whom the product was purchased.

