

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Outsunny](#) /

> [Outsunny 2-Seater Garden Swing Chair Instruction Manual - Model IT84A-233BG0631](#)

Outsunny IT84A-233BG0631

Outsunny 2-Seater Garden Swing Chair

Model: IT84A-233BG0631

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Specifications](#)
[Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)

1. INTRODUCTION

Thank you for choosing the Outsunny 2-Seater Garden Swing Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new swing chair. Please read it thoroughly before use and retain it for future reference.



Figure 1: Outsunny 2-Seater Garden Swing Chair (Model IT84A-233BG0631) in a garden setting.

This swing chair features a comfortable 2-seater design with a quick-drying and breathable textiline fabric for a cool seating experience. It is equipped with an adjustable canopy to provide optimal shade.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 220 kg (485 lbs).
- **Proper Assembly:** Ensure all parts are correctly assembled and tightened before use. Refer to the assembly instructions carefully.
- **Stable Surface:** Place the swing chair on a flat, stable, and level surface to prevent tipping.
- **Weather Conditions:** Do not use the swing chair during strong winds, heavy rain, or other severe weather conditions. Store or secure the canopy to prevent damage.
- **Children Supervision:** Children should be supervised at all times when using the swing chair.
- **Avoid Standing:** Do not stand on the swing chair.
- **Regular Inspection:** Periodically check all bolts, nuts, and connections to ensure they are secure. Tighten as necessary.
- **Keep Clear:** Ensure the area around the swing chair is clear of obstructions to allow for safe

swinging motion.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact customer service immediately.



Figure 2: Example of product components. Refer to the included parts list for exact items.

The package typically includes:

- Steel frame components
- Texteline seat and backrest fabric
- Adjustable polyester canopy
- Hardware kit (bolts, nuts, washers, spring hooks)
- Assembly tools (if provided)
- Instruction manual

4. SETUP & ASSEMBLY

Assembly is required for this product. It is recommended to have two people for assembly. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Frame:**
 - Connect the main A-shaped steel frame components using the provided bolts and nuts. Ensure all connections are secure but do not fully tighten until the entire frame is assembled.
 - Attach the reinforced bars to the base of the frame for added stability.

DETTAGLI



Figure 3: Key structural details: robust steel frame, resistant spring hook, non-slip feet, and reinforced bars.

3. Attach the Seat:

- Secure the textiline seat and backrest fabric to the seat frame.
- Hang the assembled seat onto the main frame using the resistant spring hooks. Ensure the hooks are fully engaged and secure.



Figure 4: Detail of the textline seat attachment to the frame.

4. Install the Canopy:

- Mount the canopy frame to the top of the swing chair frame.
- Attach the polyester canopy fabric to its frame, typically using Velcro straps or similar fasteners.



Figure 5: Canopy attachment using Velcro for a secure fit.

5. **Final Tightening:** Once all components are in place, fully tighten all bolts and nuts. Do not overtighten.
6. **Check Stability:** Gently rock the swing chair to ensure it is stable and all connections are secure.

5. OPERATION

Using your Outsunny 2-Seater Garden Swing Chair is straightforward:

- **Seating:** The swing chair is designed for two individuals. Sit gently and distribute weight evenly.
- **Swinging Motion:** Push off gently with your feet to initiate a comfortable swinging motion. Avoid excessive force or sudden movements.
- **Adjusting the Canopy:** The polyester canopy is adjustable to provide optimal shade throughout the day.

TETTuccio REGOLABILE

Il design inclinabile ti permette di regolare l'angolo del tettuccio per bloccare i raggi del sole tutto il giorno



Figure 6: The canopy can be tilted to block sunlight from various angles.

- Locate the adjustment knobs or levers on the canopy frame.
- Loosen the knobs, adjust the canopy to the desired angle, and then tighten the knobs to secure it in place.



Figure 7: Detail of the knob used to adjust and secure the canopy angle.

6. MAINTENANCE

Regular maintenance will extend the life of your swing chair:

- **Cleaning the Frame:** Wipe the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust.
- **Cleaning the Fabric:** The texteline fabric is quick-drying. Clean with a mild soap solution and a soft brush or sponge. Rinse thoroughly and allow to air dry. Do not use harsh chemicals or abrasive cleaners.
- **Canopy Care:** The polyester canopy can be cleaned similarly to the texteline fabric. Ensure it is completely dry before folding or storing to prevent mildew.
- **Seasonal Storage:** During off-seasons or periods of non-use, it is recommended to store the swing chair in a dry, protected area to shield it from extreme weather conditions.
- **Hardware Check:** Periodically inspect all bolts, nuts, and connections. Tighten any loose hardware to maintain structural integrity.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Squeaking Noise:** If the swing mechanism squeaks, apply a silicone-based lubricant to the spring hooks and pivot points.
- **Instability:** Ensure the swing chair is placed on a level surface. Check and tighten all assembly bolts and nuts. Verify that the non-slip feet are properly installed and making full contact with the ground.
- **Canopy Not Holding Position:** Ensure the canopy adjustment knobs are fully tightened after positioning. Check for any obstructions in the adjustment mechanism.
- **Rust Spots:** If minor rust spots appear on the steel frame, clean the area, lightly sand it, and apply a rust-inhibiting paint.

8. SPECIFICATIONS

Detailed specifications for the Outsunny 2-Seater Garden Swing Chair:



Figure 8: Product dimensions overview.

Feature	Detail
Brand	Outsunny
Model	IT84A-233BG0631

Feature	Detail
Color	Beige
Overall Dimensions (L x W x H)	140 x 118 x 162 cm
Item Weight	18 kg
Weight Capacity	220 kg
Materials	Steel (frame), Polyester (canopy), Texteline (seat/backrest)
Special Features	Double seating, Adjustable canopy

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims. For further assistance, you may also visit the official Outsunny website or contact their customer service directly.