

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AULCMEET](#) /
- › [CT-90336 PERFASCIN Replacement Remote Control User Manual](#)

AULCMEET CT-90336

User Manual: CT-90336 PERFASCIN Replacement Remote Control

For Toshiba LCD TV Models

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your CT-90336 PERFASCIN Replacement Remote Control. This remote is designed as a direct replacement for various Toshiba LCD TV models, offering seamless functionality without the need for complex setup or programming.





Image 1.1: Front view of the CT-90336 replacement remote control, showing all buttons and the model number at the bottom.



Image 1.2: Angled view of the CT-90336 replacement remote control, highlighting its ergonomic design.

2. SETUP

The CT-90336 remote control is an IR (Infrared) basic remote and does not require any special settings or programming. To begin using your remote, simply install the batteries as described below.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **Batteries are not included in the package.**
4. Slide the battery compartment cover back into place until it clicks securely.





Image 2.1: Rear view of the remote control with the battery cover removed, illustrating the battery compartment for AAA batteries.

Once batteries are installed, the remote is ready for immediate use with compatible Toshiba LCD TV models.

3. OPERATING INSTRUCTIONS

This remote control functions identically to the original Toshiba remote it replaces. Point the remote directly at your Toshiba LCD TV's infrared receiver for optimal performance.

3.1 Compatible Models

The CT-90336 remote control is compatible with the following Toshiba LCD TV models:

- 32AV800E, 32AV800T, 32AV800V
- 32AV700E, 32AV700T, 32AV700V
- 40AV700E, 40AV700T, 40AV700V
- 32CV700E, 32CV700T, 32CV700V
- 40CV700E, 40CV700T, 40CV700V
- 24P1300

3.2 Basic Functions

The remote features standard buttons for TV operation:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (+/-):** Adjusts the sound volume.
- **Channel Up/Down (P^/P^):** Changes TV channels.
- **Navigation Buttons (Up, Down, Left, Right, OK):** For navigating menus and confirming selections.
- **Menu Button:** Accesses the TV's main menu.

- **Exit Button:** Exits current menu or function.
- **Return Button:** Returns to the previous screen or channel.
- **Quick Button:** Provides quick access to frequently used functions (specific function may vary by TV model).
- **Text Button:** Activates or deactivates Teletext.
- **Subtitle Button:** Controls subtitle display.
- **CD I/II Button:** Likely for audio language selection or dual audio.
- **List Button:** Displays a list of channels or programs.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or interactive services.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, moisture, or dust.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new, fresh alkaline batteries.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This is rare for a new remote. Re-check battery installation.
 - Ensure the button is not stuck.

If the problem persists after trying these steps, please refer to the Support section.

6. SPECIFICATIONS

Model	CT-90336
Brand	AULCMEET
Manufacturer	PERFASCIN FACTORY
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Toshiba LCD TV)

Max Number of Supported Devices	1
Special Features	Ergonomic
Product Dimensions	22 x 5 x 1.5 cm; 71 g
Date First Available	24 March 2022
ASIN	B09T2JHCDP

7. WARRANTY AND SUPPORT

7.1 Extended Warranty Options

Extended warranty plans may be available for your product through third-party providers:

- **1-Year Extended Warranty** by Salama Care (E-mail delivery)
- **2-Year Extended Warranty** by Salama Care (E-mail delivery)

Please refer to your purchase details or contact your retailer for more information on purchasing these extended warranty options.

7.2 Product Support

For any questions or further assistance regarding your CT-90336 PERFASCIN Replacement Remote Control, please contact the seller or manufacturer directly through the platform where the product was purchased. They will be able to provide specific support and address any concerns you may have.