

[Manuals.plus](#) /

> [CD.PANG](#) /

> CD.PANG 6019C Liquid Air Freshener Dispenser User Manual

CD.PANG 6019C

CD.PANG 6019C Liquid Air Freshener Dispenser User Manual

Model: 6019C

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your CD.PANG 6019C Liquid Air Freshener Dispenser. Please read this manual thoroughly before use to ensure proper function and longevity of the device. This automatic odor control system is designed for commercial and public spaces, as well as home use, offering programmable fragrance dispensing.





Image: The CD.PANG 6019C Liquid Air Freshener Dispenser in dark grey, featuring an LCD screen and spray nozzle.

SAFETY INFORMATION

- Keep the device out of reach of children and pets.
- Do not spray directly into eyes or on skin. In case of contact, rinse thoroughly with water.
- Use only liquid air freshener refills. This dispenser is **not compatible** with aerosol cans.
- Ensure proper battery polarity when installing.
- Do not expose the device to extreme temperatures or direct sunlight.
- If the device malfunctions, discontinue use and consult the troubleshooting section or contact support.

PACKAGE CONTENTS

Please verify that all items are present:

- 1 x CD.PANG 6019C Liquid Air Freshener Dispenser
- 1 x 300mL Refillable Liquid Bottle (empty)

- Mounting hardware (screws, wall anchors, or adhesive strips)
- User Manual (this document)

Note: 3 'AA' cell batteries are **not included** and must be purchased separately.

PRODUCT OVERVIEW

The CD.PANG 6019C dispenser features a sleek design with an integrated LCD screen for programming and monitoring. It utilizes a refillable liquid reservoir for your preferred fragrance.

Refillable Liquid Reservoir



NOT Compatible
with Aerosol Cans

Image: The internal mechanism of the dispenser showing the refillable liquid bottle and the spray nozzle. A red circle with a line through it indicates that aerosol cans are not compatible.

1. Installing Batteries

The dispenser requires 3 'AA' cell batteries (not included).

1. Open the dispenser's front cover.
2. Remove the liquid bottle if it is already installed.
3. Locate the control unit (the white module with the LCD screen and buttons). Press the snap tab at the bottom of the control unit to release it from the main housing. Gently slide the control unit downwards and out.
4. Insert 3 'AA' batteries into the battery compartment on the back of the control unit, ensuring correct polarity (+/-).
5. Slide the control unit back into the main housing until it clicks securely into place.

How to Replace Batteries



Image: A multi-panel image illustrating the steps to replace batteries: 1) Removing the liquid bottle, 2) Pressing the snap to release the spray timer/control unit, and 3) Inserting AA batteries into the control unit.

2. Filling the Liquid Reservoir

The dispenser uses a 300mL refillable bottle. Use your preferred liquid air freshener.

1. Remove the empty liquid bottle from the dispenser.
2. Unscrew the cap from the liquid bottle.
3. Carefully pour your chosen liquid air freshener into the bottle. A funnel is recommended to prevent spills.
4. Screw the cap back on tightly.
5. Insert the filled bottle back into the dispenser, ensuring the nozzle aligns correctly with the spray mechanism.

3. Mounting the Dispenser

The dispenser can be mounted on a wall using screws or adhesive strips.

1. Choose a suitable location, ensuring it is within the desired coverage area (up to 2,000 cubic feet per dispenser) and away from direct airflow or heat sources.
2. For screw mounting: Mark the desired drill points using the holes on the back panel as a template. Drill holes, insert wall anchors (if necessary), and secure the dispenser with screws.
3. For adhesive mounting: Clean the wall surface thoroughly. Apply strong adhesive strips to the back of the dispenser and firmly press it against the wall for the recommended duration.



Image: A white air freshener dispenser mounted on a wall above a sink in a modern bathroom setting.

1. Understanding the LCD Display and Buttons

The LCD screen displays time, work days, spray interval, and spray count. The control unit has several buttons for programming:

- **SET:** Enters programming mode.
- **WORK:** Selects working days.
- **24H:** Toggles 24-hour mode.
- **ON/OFF:** Sets the start and end times for spraying.
- **INT:** Sets the spray interval.
- **COUNT:** Displays the total number of sprays.
- **RESET:** Resets all settings.
- **TEST:** Initiates a manual spray for testing.

Advanced Programming



Image: A detailed view of the dispenser's LCD screen showing time (10:06), interval (15 minutes), and spray count (0001). Below the screen are the control buttons labeled SET, WORK, 24H, ON, OFF, INT, COUNT, TEST, RESET.

2. Programming Settings

Follow these steps to configure your dispenser:

1. Set Current Time:

Press **SET**. The hour will flash. Use **WORK** to adjust the hour, then **24H** to confirm and move to minutes. Adjust minutes with **WORK**, then **24H** to confirm. Press **SET** to exit time setting.

2. Set Working Days:

Press **SET** repeatedly until 'WORK' flashes. Use **WORK** to select desired days (e.g., MO-FR for weekdays, or individual days). Press **24H** to confirm.

3. Set Spray Start Time (ON):

Press **SET** repeatedly until 'ON' flashes. Use **WORK** to set the start hour, then **24H** to confirm and move to minutes. Adjust minutes with **WORK**, then **24H** to confirm.

4. Set Spray End Time (OFF):

Press **SET** repeatedly until 'OFF' flashes. Use **WORK** to set the end hour, then **24H** to confirm and move to minutes. Adjust minutes with **WORK**, then **24H** to confirm.

5. Set Spray Interval (INT):

Press **SET** repeatedly until 'INT' flashes. Use **WORK** to select the desired interval (1-60 minutes). Press **24H** to confirm.

6. Exit Programming:

Press **SET** until the display returns to the normal time view.

3. Manual Spray Function

To test the spray or dispense fragrance manually, press the **TEST** button. The dispenser will emit one spray.

MAINTENANCE

1. Refilling Liquid

When the fragrance level is low, follow the steps in the 'Filling the Liquid Reservoir' section under Setup.

2. Cleaning

Periodically clean the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

3. Battery Replacement

When the batteries are low, the LCD display may dim or the dispenser may stop spraying. Replace batteries by following the steps in the 'Installing Batteries' section under Setup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not spraying	Low or dead batteries Empty liquid bottle Nozzle clogged Incorrect programming	Replace batteries Refill liquid bottle Clean nozzle gently Verify ON/OFF times and interval settings
LCD display is dim or blank	Low batteries	Replace batteries
Dispenser sprays at wrong times	Incorrect time setting Incorrect ON/OFF times or WORK days	Reset and reprogram current time Verify ON/OFF times and WORK day settings

Problem	Possible Cause	Solution
Dispenser is loud during spray	Normal operation sound	A slight mechanical sound during spraying is normal. Ensure the unit is securely mounted to minimize vibration.

SPECIFICATIONS

- **Brand:** CD.PANG
- **Model Number:** 6019C
- **Color:** Dark Grey
- **Product Dimensions (L x W x H):** 8.1 x 7.9 x 21.3 cm (3.19 x 3.11 x 8.39 inches)
- **Item Weight:** 402 g
- **Power Source:** 3 x 'AA' batteries (not included)
- **Liquid Capacity:** 300mL refillable bottle
- **Coverage Area:** Up to 2,000 cubic feet per dispenser
- **Spray Interval Options:** 1-60 minutes
- **Material:** ABS Plastic

Item Dimensions



Image: The dispenser shown with its dimensions: 3.11 inches (width), 3.18 inches (depth), and 8.39 inches (height).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

