

## Andis 67585

# Andis Cordless Professional Dog Grooming Clipper User Manual

Model: 67585

## 1. INTRODUCTION

Thank you for choosing the Andis Cordless Professional Dog Grooming Clipper. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grooming tool. Please read all instructions carefully before operating the clipper and retain this manual for future reference.

## 2. PRODUCT OVERVIEW

The Andis Cordless Professional Dog Grooming Clipper (Model 67585) is a high-performance, two-speed grooming tool designed for professional and home use. It features a powerful motor, a durable CeramicEdge No.10 blade, and a long-lasting lithium-ion battery for cordless convenience.

### 2.1 Components

- Andis Cordless Clipper
- CeramicEdge No.10 Blade
- Charging Adapter with International Plugs
- Blade Oil
- Blade Guard

### 2.2 Product Features

- **Cordless Operation:** Powered by a high-torque, lighter lithium-ion battery for maximum flexibility.
- **Two-Speed Settings:** Offers versatile grooming with speeds ranging from 300 to 3800 strokes per minute.
- **CeramicEdge Blade:** The included No.10 ceramic blade stays cooler and sharper longer than traditional steel blades.
- **Compact Design:** Ergonomically designed for comfortable handling during extended grooming

sessions.



**Figure 1:** Front view of the Andis Cordless Clipper, showcasing its sleek design and the Andis logo.



**Figure 2:** Angled view of the Andis Cordless Clipper, highlighting the CeramicEdge blade and the power switch.



**Figure 3:** Andis Cordless Clipper with the power indicator light illuminated, showing operational status.



**Figure 4:** Contents of the Andis Cordless Clipper kit, including the clipper, charger, multiple international plug adapters, blade oil, and a blade guard.



**Figure 5:** A hand demonstrating the proper method for removing or attaching the blade on the Andis Cordless Clipper.

### 3. SETUP

---

#### 3.1 Initial Charging

1. Before first use, fully charge the clipper for approximately 60 minutes.
2. Connect the charging adapter to the clipper and plug it into a suitable electrical outlet.
3. The indicator light will show charging status (refer to the clipper's specific light indicators for full/low charge).

#### 3.2 Attaching the Blade

1. Ensure the clipper is turned off.
2. Align the blade with the clipper's blade hinge.
3. Push the blade firmly until it clicks securely into place. Do not force it.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Powering On/Off

- To turn on, slide the power switch to the 'I' position for low speed or 'II' for high speed.

- To turn off, slide the power switch to the 'O' position.

## 4.2 Grooming Techniques

- Always start with a clean, dry, and tangle-free coat.
- Hold the clipper firmly and flat against the animal's coat.
- Move the clipper smoothly and steadily against the direction of hair growth for best results.
- Use the appropriate speed setting for the coat type and area being groomed.

## 5. MAINTENANCE

---

### 5.1 Blade Cleaning and Oiling

- After each use, brush hair from the blade with a cleaning brush.
- Apply 2-3 drops of clipper oil to the teeth and bearing surfaces of the blade while the clipper is running. This helps lubricate and cool the blade.
- Wipe off any excess oil.

### 5.2 Battery Care

- To maximize battery life, allow the battery to fully discharge occasionally before recharging.
- Store the clipper in a cool, dry place when not in use.

## 6. TROUBLESHOOTING

---

### 6.1 Clipper Not Turning On

- **Check Battery:** Ensure the clipper is fully charged.
- **Power Switch:** Verify the power switch is in the 'I' or 'II' position.

### 6.2 Blade Pulling Hair

- **Blade Cleanliness:** Clean the blade thoroughly and remove any trapped hair.
- **Blade Oiling:** Apply clipper oil to the blade as per maintenance instructions.
- **Blade Sharpness:** If the blade is dull, it may need to be sharpened or replaced.
- **Coat Preparation:** Ensure the animal's coat is clean, dry, and free of mats and tangles.

### 6.3 Excessive Heat

- **Blade Oiling:** Insufficient oil can cause friction and heat. Oil the blade regularly.
- **Continuous Use:** Allow the clipper to cool down if used for extended periods.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	67585
Power Source	Battery Powered (Lithium-Ion)
Speed Settings	2-Speed (300-3800 SPM)
Blade Material	Ceramic

Blade Type	CeramicEdge No.10
Recommended Use	Clipping (All Hair Types)
Manufacturer	ABK IMPORTS PVT LTD

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official Andis website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Official Andis Website:** [www.andis.com](http://www.andis.com)