

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Walk](#) /
- › [Walk Audio W202 Wired Over-Ear Headphones Instruction Manual](#)

Walk W202

Walk Audio W202 Wired Over-Ear Headphones

Instruction Manual

[Features](#) [Setup](#) [Operation](#) [Introduction](#) [Maintenance](#) [Package Contents](#) [Troubleshooting](#) [Product Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Walk Audio W202 Wired Over-Ear Headphones. These headphones are designed to deliver clear audio with a comfortable listening experience. This manual provides instructions for proper setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Figure 1: Front view of the Walk Audio W202 Wired Over-Ear Headphones.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Walk Audio W202 Wired Over-Ear Headphones
- Ear Cushions (pre-installed or spare, as applicable)
- Instruction Manual (this document)

3. PRODUCT FEATURES

- **TruSound Technology:** Engineered for clear audio reproduction.
- **1.2M Cable:** Provides ample length for connection to audio devices.
- **3.5mm Jack:** Standard audio connector for broad compatibility.
- **Comfortable Cushioned Headphones:** Designed for extended wear.
- **Adjustable Headband:** For a personalized fit.

- **Media Control:** Integrated controls for audio playback.

4. SETUP

1. **Unpack the Headphones:** Carefully remove the headphones from their packaging.
2. **Adjust the Headband:** Gently extend or retract the headband to fit comfortably over your head. The earcups should fully cover your ears.
3. **Position Ear Cushions:** Ensure the cushioned earcups sit securely and comfortably around your ears for optimal sound and comfort.
4. **Connect to Audio Source:** Insert the 3.5mm audio jack firmly into the headphone port of your audio device (e.g., smartphone, tablet, computer, MP3 player).



Figure 2: Side view of the Walk Audio W202 Headphones, showing the adjustable headband and earcups.

5. OPERATING INSTRUCTIONS

Once connected, your Walk Audio W202 headphones are ready for use.

- **Audio Playback:** Begin playing audio from your connected device.
- **Volume Control:** Adjust the volume directly on your audio source device. The headphones do not feature independent volume controls.
- **Media Control:** If your audio source supports it, the headphones may offer basic media control functionality (e.g., play/pause, track skip) via the integrated control on the cable. Refer to your audio device's manual for compatibility and specific functions.

6. MAINTENANCE

Proper care will extend the life of your headphones.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the headphones. Do not use liquid cleaners or solvents.
- **Ear Cushions:** Periodically check ear cushions for wear. If removable, they can be gently cleaned with a damp cloth and mild soap, then air-dried completely before reattaching.
- **Storage:** When not in use, store the headphones in a clean, dry place away from extreme temperatures and direct sunlight. Avoid tangling the cable.
- **Cable Care:** Do not pull on the cable to disconnect the headphones. Always grasp the 3.5mm jack directly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	<ul style="list-style-type: none"> • Cable not fully connected. • Audio source volume too low or muted. • Incorrect audio output selected on device. • Damaged cable or jack. 	<ul style="list-style-type: none"> • Ensure the 3.5mm jack is fully inserted into the audio source. • Increase volume on your audio device and check for mute settings. • Verify your device's audio settings to ensure output is directed to the headphone jack. • Test with another audio device or cable if possible.
Poor sound quality (distortion, low bass)	<ul style="list-style-type: none"> • Loose connection. • Audio source quality. • Damaged drivers. 	<ul style="list-style-type: none"> • Ensure the 3.5mm jack is securely connected. • Try a different audio source or higher quality audio file. • If the issue persists, contact customer support.
Headphones are uncomfortable	<ul style="list-style-type: none"> • Improper headband adjustment. • Ear cushions not positioned correctly. 	<ul style="list-style-type: none"> • Adjust the headband to find a comfortable fit. • Ensure ear cushions fully enclose your ears without excessive pressure.

8. SPECIFICATIONS

Model Name	W202
Brand	Walk
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Ear Placement	Over Ear

Form Factor	Over Ear
Impedance	32 Ohms
Sensitivity	105 DB
Frequency Response	20-20Khz
Cord Length	1.2M
Drivers	40mm Neodymium
Material	Plastic
Item Weight	120 Grams / 4.2 ounces
Color	Black
Noise Control	None
Control Type	Media Control
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for warranty claims.

For further assistance, please visit the official Walk Audio website or contact their customer service department.