

- Manuals.plus /
- › WTTHAI /
- › WTTHAI CT-8516 Remote Control User Manual for Toshiba TVs

WTTHAI CT-8516

WTTHAI CT-8516 Remote Control User Manual

Model: CT-8516

1. INTRODUCTION

1.1 Product Overview

This manual provides instructions for the WTTHAI CT-8516 remote control, designed for use with various Toshiba television models. This remote control offers direct functionality without requiring any programming or pairing procedures.



**Figure 1:** WTHAI CT-8516 Remote Control. This image displays the remote control from an angled perspective, highlighting its silver and black design and the arrangement of its buttons.

## 1.2 Compatible TV Models

The CT-8516 remote control is compatible with the following Toshiba TV models:

- 49U9750, 55U9750, 65U9750
- 43U7750, 43U7750VN, 43U7750VE
- 49U7750, 49U7750VN, 49U7750VE
- 55U7750, 55U7750VN, 55U7750VE
- 65U7750, 65U7750VN, 65U7750VE
- 75U7750, 75U7750VN, 75U7750VE

## 2. SETUP

### 2.1 Battery Installation

The CT-8516 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch (if present) and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





**Figure 2:** Rear view of the CT-8516 remote control with the battery compartment open, showing the slots for two AAA batteries.

Once batteries are installed, the remote control is ready for use with compatible Toshiba TVs without any further setup.

### 3. OPERATING INSTRUCTIONS

---

Point the remote control directly at the Toshiba TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.





**Figure 3:** Frontal view of the CT-8516 remote control, illustrating the complete button layout.

### 3.1 Button Functions

The remote control features various buttons for controlling your Toshiba TV. Below is a general guide to their functions:

- **Power Button ( ):** Turns the TV on or off.
- **Number Pad (0-9):** Directly enters channel numbers.
- **CH LIST:** Displays the channel list.
- **Volume Up/Down (+ / -):** Adjusts the audio volume.
- **Channel Up/Down ( ^ / v ):** Changes the TV channel.
- **Mute ( ):** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.

- **OK Button:** Confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **NETFLIX:** Direct access button for the Netflix application.
- **Google Play:** Direct access button for the Google Play application.
- **P.MODE (Picture):** Cycles through picture modes.
- **S.MODE (Sound):** Cycles through sound modes.
- **SLEEP:** Sets the sleep timer.
- **ASPECT:** Adjusts the screen aspect ratio.
- **SUB-PAGE:** Accesses sub-pages in teletext or other functions.
- **AD:** Audio Description button.
- **FREEZE:** Freezes the current image on screen.
- **TEXT:** Activates or deactivates teletext.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback.
- **SUBTITLE:** Toggles subtitles on/off.
- **CD/I:** Likely for input source selection or specific TV functions.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote control.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

## 5. TROUBLESHOOTING

---

### 5.1 Common Issues and Solutions

| Issue                                                      | Possible Cause                                                                        | Solution                                                                                                 |
|------------------------------------------------------------|---------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Remote control is not working.                             | Dead or incorrectly inserted batteries.                                               | Replace batteries with new AAA alkaline batteries, ensuring correct polarity.                            |
| Remote control has limited range or intermittent response. | Weak batteries; obstruction between remote and TV; remote not pointed directly at TV. | Replace batteries. Remove any obstructions. Ensure the remote is pointed directly at the TV's IR sensor. |

| Issue                                | Possible Cause                                                                | Solution                                                                                                                         |
|--------------------------------------|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Specific buttons are not responding. | Button malfunction; TV model incompatibility for specific advanced functions. | Check if other buttons work. If only specific advanced functions are affected, verify TV model compatibility for those features. |

## 6. SPECIFICATIONS

- **Model:** CT-8516
- **Brand:** WTTHAI
- **Connectivity Technology:** Infrared
- **Power Supply:** 2 x AAA Alkaline Batteries (not included)
- **Product Dimensions:** 9.5 x 2 x 0.55 inches (approximately)
- **Maximum Range:** 10 Meters (approximately 33 feet)
- **Compatible Devices:** Toshiba TVs (specific models listed in Section 1.2)

## 7. SUPPORT

Should you encounter any issues or require assistance with your WTTHAI CT-8516 remote control, please refer to the troubleshooting section of this manual. If the problem persists, contact the seller or manufacturer for further support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B09T3T1X91>

More documents and user manuals: <https://manuals.plus/>