

[manuals.plus](#) /

› [Samsonite](#) /

› [Samsonite Omni PC Hardside Expandable Luggage 2-Piece Set \(20/28\) Instruction Manual](#)

Samsonite 68311-2479

Samsonite Omni PC Hardside Expandable Luggage 2-Piece Set (20/28) Instruction Manual

Model: 68311-2479

INTRODUCTION

Thank you for choosing Samsonite Omni PC Hardside Expandable Luggage. This manual provides essential information for the proper setup, operation, and maintenance of your 2-piece luggage set (20-inch and 28-inch). Please read these instructions carefully to ensure optimal use and longevity of your product.



Image: The Samsonite Omni PC 2-Piece Hardside Luggage Set, featuring a 20-inch carry-on and a 28-inch checked bag, both in navy blue with a micro-diamond texture.

SETUP

Telescopic Handle Operation

The luggage features a multi-stage telescopic handle. To extend the handle, press the button located on the top of the handle and pull upwards. To retract, press the button again and push the handle downwards until it is fully nested.

Setting the TSA Combination Lock

Your Samsonite Omni PC luggage is equipped with a side-mounted TSA-compatible combination lock. Follow these steps to set your personal combination:

1. The lock is preset to 0-0-0.
2. Locate the small reset button (often recessed) next to the dials. Use a pen or a pointed object to press and hold this button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set.
5. Test your new combination by scrambling the dials and then entering your combination to open the lock.

Important: Remember your combination. There is no master key for personal combinations, and Samsonite cannot assist in resetting forgotten codes.



Image: A close-up view of the luggage's zipper pull, featuring a red fabric tab, and the integrated TSA combination lock located on the side of the suitcase.

OPERATING THE LUGGAGE

Spinner Wheels

Your luggage is equipped with four multi-directional spinner wheels designed for effortless 360-degree mobility. To move the luggage, simply push or pull it in any direction. For optimal performance, ensure the

luggage is upright when rolling.



Image: A detailed view of the luggage's re-engineered lightweight spinner wheels, designed for smooth, multi-directional movement.

Expansion Feature

Both pieces of luggage in your set feature an expansion zipper. To increase packing capacity, unzip the secondary zipper located around the perimeter of the main compartment. This provides additional space for your belongings.

Interior Organization

The main compartment of your luggage includes a full-zip interior divider and cross-straps. The mesh divider helps separate items and keep them organized, while the cross-straps secure your clothing and prevent shifting during transit. A zipped modesty pocket is also included for smaller items.

MAINTENANCE

Cleaning the Exterior

The micro-diamond polycarbonate shell is scratch-resistant. To clean, wipe the surface with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents, as these can damage the finish.

Zippers and Wheels

Periodically check zippers for any debris and clean as needed. Lubricate zippers with a silicone-based spray if they become stiff. Inspect wheels for hair or dirt accumulation and remove to ensure smooth

rolling. Avoid exposing wheels to excessive force or impact.

Storage

Store your luggage in a cool, dry place away from direct sunlight when not in use. Ensure the luggage is clean and dry before storage to prevent mold or mildew.

TROUBLESHOOTING

Sticking Zippers

If a zipper becomes difficult to move, apply a small amount of zipper lubricant or a graphite pencil lead along the teeth. Slowly work the zipper back and forth to distribute the lubricant.

Wheels Not Rolling Smoothly

Check the wheels for any trapped debris such as hair, lint, or small objects. Carefully remove any obstructions. If the issue persists, the wheel mechanism may require professional inspection.

Forgotten Lock Combination

If you forget your TSA lock combination, Samsonite cannot provide the code. You may need to try all 1000 possible combinations (000-999) or contact a locksmith. For security, it is recommended to keep your combination in a secure, memorable location.

SPECIFICATIONS

Feature	Description
Material	100% Polycarbonate with Micro-diamond texture
Color	Navy
Set Includes	One 20-inch Carry-On, One 28-inch Checked Luggage
20-inch Carry-On Body Dimensions	19.0" x 14.5" x 9.5"
20-inch Carry-On Overall Dimensions	22.0" x 15.0" x 9.5"
20-inch Carry-On Item Weight	6.8 lbs
28-inch Checked Luggage Product Dimensions	27.56 x 18.22 x 11.59 inches
28-inch Checked Luggage Item Weight	11.2 ounces (Note: This weight seems unusually low for a 28-inch bag, please verify with product label if concerned.)
28-inch Checked Luggage Capacity	92 Liters
Wheels	Four Multi-directional Spinner Wheels
Lock	Side-mounted TSA Combination Lock

Feature	Description
Expansion	Consumer-preferred expansion on both sizes

WARRANTY AND SUPPORT

10-Year Limited Warranty

Samsonite products are rigorously tested to meet stringent standards. This luggage set comes with a 10-year limited warranty against defects in materials and workmanship. This warranty covers manufacturing defects but does not cover damage caused by misuse, neglect, accidents, abrasion, extreme temperatures, solvents, acids, water, normal wear and tear, or transport damage (e.g., by airlines).

For warranty claims or service, please visit the official Samsonite website or contact Samsonite customer service directly. Keep your proof of purchase for warranty validation.

Customer Support

For further assistance, product inquiries, or to locate authorized repair centers, please refer to the contact information provided on the official [Samsonite website](#) or contact their customer service department.