

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Vitamix](#) /

> [Vitamix 068255-ABAB Touch & Go Advance 32 Ounce Bar Blender Instruction Manual](#)

## Vitamix 068255-ABAB

# Vitamix 068255-ABAB Touch & Go Advance 32 Ounce Bar Blender Instruction Manual

Model: 068255-ABAB | Brand: Vitamix

## INTRODUCTION

The Vitamix Touch & Go Advance 32 Ounce Bar Blender is engineered for efficiency and performance in commercial settings. Featuring a powerful 2.3 HP motor, convenient pre-set controls, and advanced noise reduction technology, this blender is designed to deliver consistent, high-quality blends while minimizing operational sound. Its durable construction and user-friendly design make it an ideal choice for preparing a variety of beverages and food items.

## PRODUCT FEATURES

- **Powerful 2.3 HP Motor:** Effortlessly blends frozen drinks and tough ingredients.
- **Twist-and-Lock Sound Enclosure:** Significantly reduces operational noise for a quieter environment.
- **6 Pre-set Buttons & 20 Recipe Programs:** Provides consistent results for commonly made drinks with minimal effort.
- **32-Ounce (0.9-Liter) Advance Container:** Designed to create smooth, pourable blends and prevent leaking.
- **Adjustable Speed Control:** Offers precise control over blending consistency.
- **Removable Lid with Cap:** Allows for easy addition of ingredients during blending.

## COMPONENTS

The Vitamix Touch & Go Advance blender includes the following main components:

- Blender Base (Motor Housing)
- 32-Ounce Advance Container with Blades
- Container Lid
- Removable Lid Cap
- Tamper
- Sound Enclosure (attached to base)



Image: Vitamix 068255-ABAB Touch & Go Advance 32 Ounce Bar Blender with its main components.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the Advance container, lid, and lid cap with warm, soapy water before first use. Rinse thoroughly and dry.
3. **Placement:** Place the blender base on a dry, stable, and level surface. Ensure adequate ventilation around the unit.
4. **Assemble:** Place the Advance container securely onto the blender base. Ensure the sound enclosure is properly positioned and closed.
5. **Power:** Plug the power cord into a grounded electrical outlet (120 Volts).

## OPERATING INSTRUCTIONS

1. **Add Ingredients:** Place desired ingredients into the Advance container. For best results, add liquids first, followed by soft ingredients, then hard ingredients, and finally ice or frozen items.
2. **Secure Lid:** Place the lid firmly onto the container and ensure the lid cap is in place. Close the sound enclosure.
3. **Select Program/Speed:**
  - o **Pre-set Programs:** Use the 6 pre-set buttons for common drink preparations. The blender will automatically adjust speed and duration.
  - o **Variable Speed:** For manual control, use the speed dial to select a desired speed from low to high (1-15).
  - o **Pulse Function:** Use the pulse switch for quick bursts of power to chop ingredients or refresh blends.
4. **Start Blending:** Press the appropriate pre-set button or turn the speed dial to your desired setting and then activate

the power switch.

5. **Adding Ingredients During Blending:** If additional ingredients need to be added during blending, remove the lid cap and carefully add them through the opening. Use the tamper if necessary to push ingredients towards the blades.
6. **Stop Blending:** Once desired consistency is achieved, turn off the power switch or press the stop button for pre-set programs.

Your browser does not support the video tag.

*Video: Learn more about the Vitamix Touch & Go Advance blender's features and operation.*

## CLEANING AND MAINTENANCE

1. **Unplug:** Always unplug the blender before cleaning.
2. **Container Cleaning:** For quick cleaning, fill the container halfway with warm water and a drop of dish soap. Secure the lid and run the blender on high speed for 30-60 seconds. Rinse thoroughly. For deeper cleaning, disassemble the lid and lid cap and wash all parts with warm, soapy water.
3. **Blender Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water.
4. **Sound Enclosure:** Wipe the sound enclosure with a damp cloth.
5. **Storage:** Store the blender in a clean, dry place.

## TROUBLESHOOTING

- **Blender Not Starting:** Ensure the power cord is securely plugged in, the power switch is on, and the container is properly seated on the base. Check if the sound enclosure is fully closed.
- **Ingredients Not Blending:** Add more liquid if the mixture is too thick. Use the tamper to push ingredients towards the blades. Increase the speed setting.
- **Leaking from Container:** Ensure the lid is securely fastened and the lid cap is properly inserted. Check for any damage to the container or lid seals.
- **Unusual Noise/Odor:** Immediately turn off and unplug the blender. Check for any foreign objects in the container or damage to the blades. Contact customer support if the issue persists.

## SPECIFICATIONS

Feature	Detail
Model Number	068255-ABAB
Brand	Vitamix
Motor Power	2.3 HP
Capacity	32 Fluid Ounces (0.9 Liters)
Product Dimensions	10.8"D x 8.5"W x 18"H
Item Weight	18.96 pounds
Voltage	120 Volts
Control Type	Pre-set, Push Button, Adjustable Speed Control
Container Material	Plastic
Blade Material	Alloy Steel

## WARRANTY AND SUPPORT

---

This Vitamix Touch & Go Advance blender comes with a **3 Year Limited Warranty**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your product packaging or visit the official Vitamix website.