



[Manuals.plus](#) /

> [iClimb](#) /

> iClimb Ultralight Compact Camping Chair IC607017 Instruction Manual

## iClimb IC607017

# iClimb Ultralight Compact Camping Chair

MODEL: IC607017

User Instruction Manual

## 1. Introduction

---

Thank you for choosing the iClimb Ultralight Compact Camping Chair. This chair is designed for portability, comfort, and stability in various outdoor environments. Its lightweight yet durable construction makes it suitable for activities such as camping, hiking, beach trips, and other light travel adventures. This manual provides essential information for the safe and effective use of your chair.

**Similar Chairs**  
Small Feet  
Sink Into Soft Sand



**iClimb New Design**  
Large Detachable Feet  
Stay Stable on Soft Sand



Image: The iClimb camping chair ready for use in a natural setting.

## 2. Package Contents

Please ensure all the following components are present in your package:

- Chair Frame (collapsible aluminum alloy poles)
- Chair Fabric (900D ripstop oxford with mesh back)
- Storage Bag
- 4 x Large Detachable Anti-Sinking Feet (optional use)



# INSTRUCTION

for camping chair IC607

1, Take all the parts out of the bag.



2, Set up the frame.



3, Put on the fabric.



4, Install the anti-sinking feet when needed.



Image: All components included in the package.

## 3. Setup Instructions

Follow these steps to assemble your iClimb camping chair:

1. **Unpack Components:** Take all parts out of the storage bag.

2. **Set Up the Frame:**

The aluminum alloy frame poles are connected by elastic cords. Simply shake the frame gently, and the poles will snap into place, forming the chair's base. Ensure all connections are secure.

3. **Attach the Fabric:**

The chair fabric has four corner pockets. Insert the two upper poles of the frame into the corresponding upper pockets of the fabric (labeled 'A' in the diagram). Then, lay the chair on its back to make it easier to insert the two lower poles into the lower pockets (labeled 'B' in the diagram).

Ensure the fabric is fully stretched and securely attached to all four frame corners.

4. **Install Anti-Sinking Feet (Optional):**

If using the chair on soft ground like sand or mud, attach the large detachable anti-sinking feet to the bottom of each chair leg. Twist them clockwise until they are firmly secured.



# INSTRUCTION

for camping chair IC607

1, Take all the parts out of the bag.



2, Set up the frame.



3, Put on the fabric.



4, Install the anti-sinking feet when needed.



Image: Detailed assembly steps for the chair.

## 4. Operating Instructions

Your iClimb camping chair is designed for straightforward use:

- **Sitting Position:** The ergonomic design provides ample back support. Sit comfortably, ensuring your weight is evenly distributed.
- **Side Pocket:** Utilize the integrated side pocket for convenient storage of small items such as your mobile phone, keys, or a small water bottle.
- **Stability on Soft Ground:** When using on sand, mud, or other soft surfaces, ensure the large detachable anti-sinking feet are installed to prevent the chair from sinking.



Image: The large detachable feet provide enhanced stability on soft surfaces.

## 5. Maintenance and Care

To ensure the longevity of your iClimb camping chair, follow these maintenance guidelines:

- **Cleaning:** Wipe the fabric with a damp cloth and mild soap if necessary. Do not use harsh chemicals

or abrasive cleaners. Allow to air dry completely before storing.

- **Frame Care:** The aluminum frame is corrosion-resistant. If it gets wet, dry it thoroughly to prevent water spots.
- **Storage:** Disassemble the chair and store all components in the provided storage bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all frame connections and fabric for any signs of wear or damage. Replace any damaged parts immediately.

## 6. Troubleshooting

---

If you encounter any issues with your chair, refer to the following:

- **Difficulty Assembling Frame:** Ensure all elastic cords are properly aligned and poles are fully inserted into their connectors. A gentle shake can help the poles snap into place.
- **Difficulty Attaching Fabric:** If the fabric seems too tight, try attaching the top two corners first, then lay the chair on its back to gain leverage for attaching the bottom two corners. The fabric may be tight initially but will ease with use.
- **Chair Feels Unstable:** Verify that all frame poles are fully connected and the fabric is securely attached to all four corners. If on soft ground, ensure the anti-sinking feet are installed and tightened.

## 7. Specifications

---

Feature	Detail
Model Number	IC607017
Material (Frame)	7075 Aluminum Alloy
Material (Fabric)	900D Ripstop Oxford
Material (Connections)	Nylon 66
Set Up Dimensions (L x W x H)	20.5 x 20.9 x 26.4 inches (52.1 x 53.1 x 67.1 cm)
Seat Height	13.8 inches (35 cm)
Packed Dimensions (L x W x H)	13.8 x 5.5 x 5.1 inches (35 x 14 x 13 cm)
Weight (Chair only)	2.2 lbs (1 kg)
Weight (Chair + 4 feet)	2.5 lbs (1.13 kg)
Maximum Load Capacity	330 lbs (150 kg)
Special Features	Ergonomic design, Side pocket, Foldable, Mesh back, Anti-sinking feet



Image: Key dimensions and specifications of the chair.

## 8. Safety Information

---

- Do not exceed the maximum load capacity of 330 lbs (150 kg).
- Ensure the chair is fully assembled and stable before sitting.
- Avoid using the chair on uneven or slippery surfaces without proper precautions.
- Keep away from open flames or extreme heat sources.
- This chair is intended for sitting purposes only. Do not stand on it.

## 9. Warranty and Support

---

iClimb products are manufactured to high-quality standards. For any questions, concerns, or warranty claims, please contact iClimb customer support through the retailer where you purchased the product. Please retain your proof of purchase for warranty service.

