

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cecotec](#) /

› [Cecotec Conga Rockstar 880 Ultimate ErgoFlex Cordless Vacuum Cleaner User Manual](#)

## Cecotec Conga Rockstar 880 Ultimate ErgoFlex

# Cecotec Conga Rockstar 880 Ultimate ErgoFlex Cordless Vacuum Cleaner User Manual

Model: Conga Rockstar 880 Ultimate ErgoFlex (05685)

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the power supply voltage matches the voltage indicated on the appliance.
- Do not use the appliance near water or in wet environments.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not vacuum flammable or combustible materials, hot ashes, or sharp objects.
- Always turn off the appliance and disconnect it from the power source before cleaning or maintenance.
- Do not operate the appliance with a damaged cord or plug.
- This appliance is for household use only.

## 2. PRODUCT COMPONENTS

The Cecotec Conga Rockstar 880 Ultimate ErgoFlex comes with the following components:

- 1 x Digital Vertical Vacuum Cleaner Unit
- 1 x Flexible Tube
- 1 x Wall Mount
- 1 x Jalisco Brush
- 1 x Corner Accessory
- 1 x Furniture Accessory

- 1 x Upholstery Accessory
- 1 x Instruction Manual



Image: The vacuum cleaner shown in various configurations (vertical, handheld, and with flexible tube) for different cleaning tasks.

### 3. SETUP AND ASSEMBLY

The Conga Rockstar 880 Ultimate ErgoFlex is designed for versatile cleaning. Follow these steps to assemble your vacuum cleaner:

#### 3.1. Assembling the Vertical Vacuum

1. Attach the main digital vacuum unit to the flexible tube.
2. Connect the desired brush (e.g., Jalisco brush for hard floors) to the end of the flexible tube.
3. Ensure all connections are secure.



Image: A person demonstrating the vacuum cleaner in its vertical configuration, cleaning a hard floor.

### **3.2. Assembling the Handheld Vacuum**

1. Detach the flexible tube from the main digital vacuum unit.
2. Attach the desired accessory (e.g., corner, furniture, or upholstery accessory) directly to the main unit.



Image: A close-up of the vacuum cleaner being used in handheld mode, ideal for cleaning upholstery or tight spaces.

### 3.3. Charging the Battery

Before first use, fully charge the lithium-ion battery. Connect the charger to the main unit and plug it into a power outlet. The digital display will indicate the charging status.

## 4. OPERATING INSTRUCTIONS

The Conga Rockstar 880 Ultimate ErgoFlex offers powerful and flexible cleaning with its 3-in-1 design and advanced features.

### 4.1. Powering On/Off and Mode Selection

- Press the power button to turn the vacuum cleaner on or off.
- Use the mode selection button on the digital display to switch between cleaning modes:
  - **Eco Mode:** Maximizes battery life for lighter cleaning tasks.

- **Daily Mode:** Provides a balance of efficiency and suction power for everyday cleaning.
- **Turbo Mode:** Delivers maximum suction for stubborn dirt and deep carpet cleaning.
- The vacuum also features an **Auto Carpet Mode** that automatically increases suction when detecting carpets.



Image: Icons representing the three cleaning programs (Eco, Daily, Turbo) and the automatic carpet detection feature.

## 4.2. Digital Display

The integrated digital display provides real-time information on battery level, current suction mode, and potential alerts.



Image: An icon illustrating the digital display feature, showing its interface for monitoring vacuum status.

## 4.3. ErgoFlex and 360° Technology

The ErgoFlex system and 360° technology allow the vacuum to reach difficult areas, including under furniture and high corners, with minimal effort. The flexible tube adapts to various angles for comprehensive cleaning.



Image: A person demonstrating the flexible tube feature, allowing the vacuum to clean under a low table.

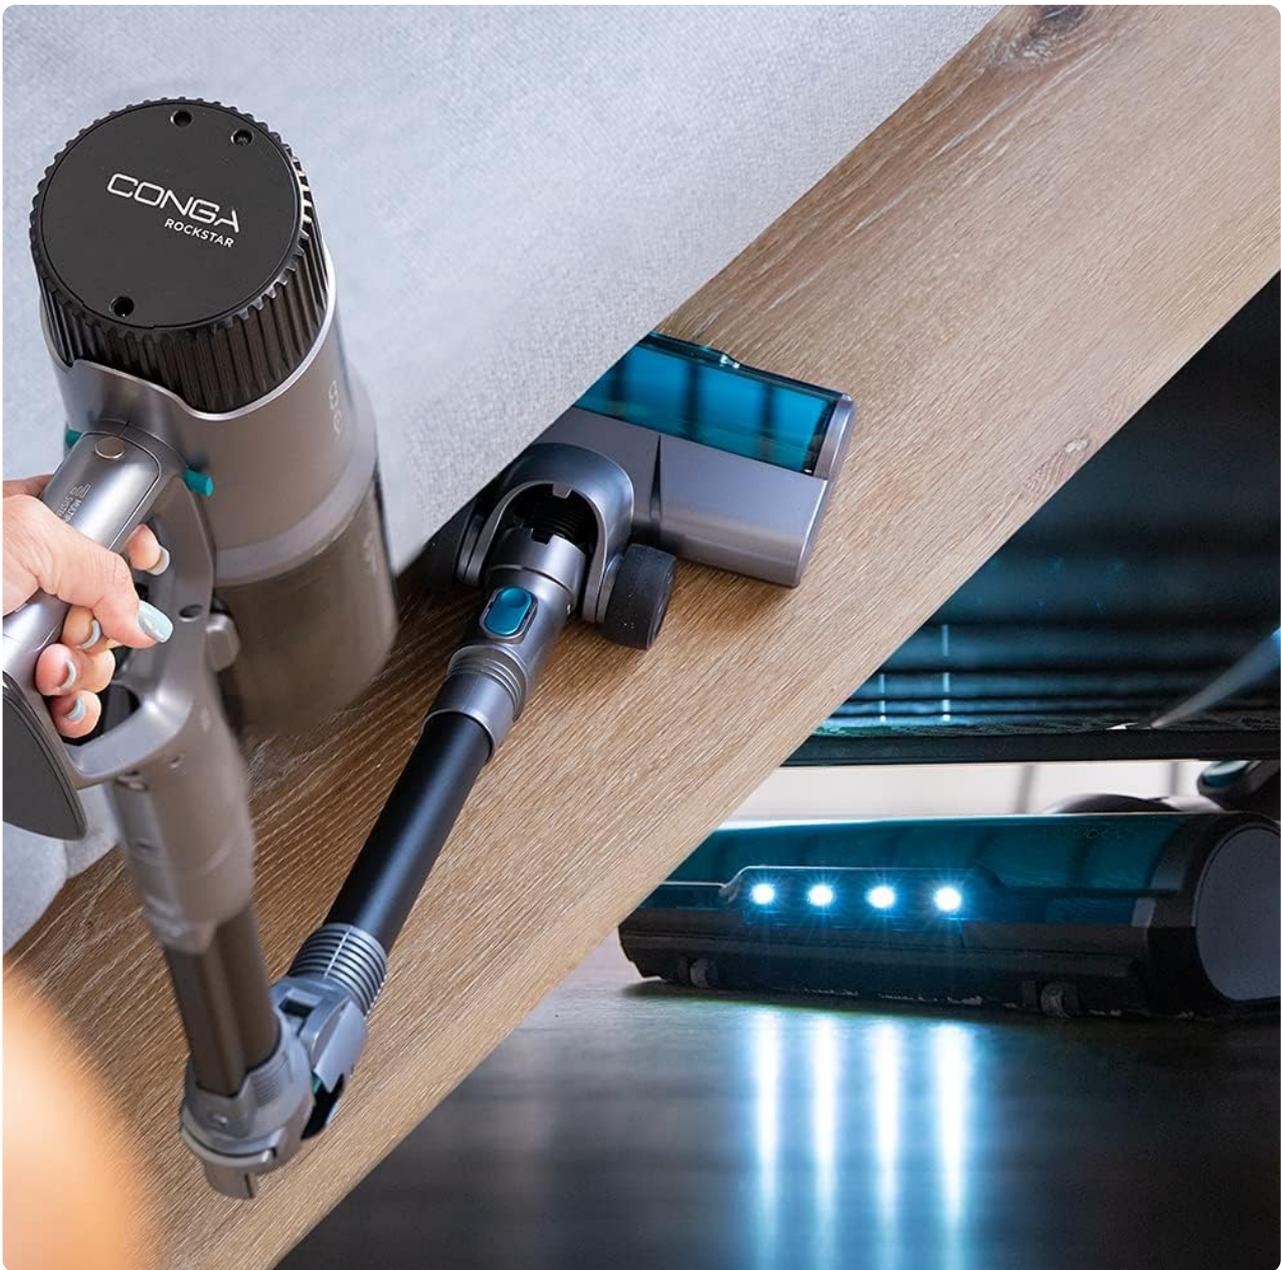


Image: A detailed view of the flexible tube mechanism and the brush head with integrated LED lights, highlighting its maneuverability.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 5.1. Emptying the Dust Tank

The vacuum cleaner features a 700 ml capacity dust tank. Empty the tank regularly to maintain suction power. Follow these steps:

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust tank release button.
3. Press the button to detach the dust tank.
4. Empty the contents into a waste bin.

5. Reattach the dust tank securely until it clicks into place.



Image: A detailed view of the vacuum's main unit, highlighting the transparent dust tank and cyclonic system.

## 5.2. Cleaning the High-Performance Filter

The high-performance filter retains a high percentage of dust and allergens. Clean the filter periodically to prevent clogging and maintain suction efficiency.

1. Remove the dust tank as described above.
2. Locate and remove the high-performance filter.
3. Tap the filter gently to dislodge dust or rinse it under running water if specified in the full manual (ensure it is completely dry before reinserting).
4. Reinsert the clean, dry filter and reattach the dust tank.

## 5.3. Cleaning the Jalisco Brush

The Jalisco brush is designed for effective dust removal. Regularly check and clean the brush to remove tangled hair or debris.

1. Ensure the vacuum cleaner is off and disconnected.
2. Detach the brush head from the flexible tube.
3. Remove the Jalisco brush from its housing.
4. Use scissors or a brush cleaning tool to remove any tangled hair or fibers.
5. Reinsert the clean brush and reattach the brush head.



Image: An icon illustrating the Jalisco brush, designed for efficient cleaning of various surfaces.

## 6. TROUBLESHOOTING

If you encounter any issues with your Cecotec Conga Rockstar 880 Ultimate ErgoFlex, please refer to the following common solutions:

- **No Power:** Ensure the battery is fully charged. Check if the power button is pressed correctly.
- **Reduced Suction:** Empty the dust tank. Clean the high-performance filter. Check the brush head for blockages or tangled debris. Ensure all connections are secure.
- **Unusual Noise:** Turn off the vacuum immediately. Check for any foreign objects lodged in the brush head, tube, or dust tank.
- **Short Battery Life:** Ensure the battery is fully charged before use. Operating in Turbo mode will consume battery faster.

For issues not resolved by these steps, please contact Cecotec customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	05685
Power	480 Watts
Voltage	37 Volts
Suction Power	30 kPa (ForceSonic), up to 130 aW (Typhoon System)
Battery Type	Lithium-ion (2500 mAh)
Autonomy	Up to 100 minutes (1 hour and 40 minutes)
Dust Tank Capacity	700 ml
Noise Level	62 dB
Number of Speeds/Modes	3 (Eco, Daily, Turbo) + Auto Carpet
Filter Type	High-performance filter
Weight	4 Kilograms
Dimensions (L x W x H)	25.8 x 13.7 x 76 cm



Image: Icons highlighting the 480W ForceSonic power and 30 kPa suction capability of the vacuum cleaner.

## 8. WARRANTY AND SUPPORT

---

Cecotec offers a commitment to product quality and customer satisfaction.

- **Spare Parts Availability:** Spare parts for this model are available for up to 10 years.
- For warranty claims, technical support, or to purchase spare parts, please contact Cecotec customer service through their official website or the retailer where the product was purchased.