

hofstein 4058383558720

hofstein Palanga Outdoor Wall Light User Manual

Model: 4058383558720

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the hofstein Palanga Outdoor Wall Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

The hofstein Palanga wall light is designed for outdoor use, featuring a black metal frame and an interchangeable glass shade (amber or clear). It accommodates one E27 bulb (not included) and is rated IP44 for protection against splashing water.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Risk of electric shock. Always disconnect power before installation, servicing, or cleaning.

- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the main power supply is switched off at the circuit breaker or fuse box before commencing any work.
- This fixture is designed for outdoor use (IP44 rated). Ensure it is installed in a location suitable for its IP rating.
- Do not exceed the maximum wattage of 40 Watts for the E27 bulb.
- Use only E27 base bulbs.
- Do not connect this fixture to a dimmer switch unless the bulb used is explicitly dimmable and the dimmer is compatible. An external dimmer is not included.
- Keep flammable materials away from the light fixture.

- Inspect the fixture for any damage before installation. Do not install if damaged.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all parts are present and undamaged. If any parts are missing or broken, contact your retailer immediately.

- 1x hofstein Palanga Wall Light fixture (black metal frame)
- 1x Glass shade (amber or transparent, depending on purchase)
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Note: E27 bulb is not included and must be purchased separately.

4. INSTALLATION GUIDE

Before starting, ensure the power supply is disconnected at the main circuit breaker.

4.1 Tools Required (Not Included)

- Screwdriver (Phillips head)
- Drill with appropriate drill bit for wall plugs
- Pencil
- Wire strippers
- Electrical tape (optional)

4.2 Mounting the Fixture

1. **Prepare the Mounting Surface:** Choose a suitable outdoor location on a wall. Ensure the surface is clean, dry, and capable of supporting the fixture's weight.
2. **Remove Mounting Plate:** Carefully detach the mounting plate from the back of the light fixture. This is typically secured with small screws.

hofstein®



Image: Exploded view of the light fixture components, including the mounting plate, internal wiring, and the removable glass shade. This shows how the fixture disassembles for installation.

3. **Mark Drilling Points:** Hold the mounting plate against the wall at the desired installation spot. Use a pencil to mark the positions for the drill holes.
4. **Drill Holes:** Drill holes at the marked positions. Insert the provided wall plugs into the drilled holes.
5. **Connect Wiring:** Route the electrical wires from the wall through the center hole of the mounting plate. Connect the wires according to local electrical codes:
 - Live (L) wire to the brown/red terminal.
 - Neutral (N) wire to the blue/black terminal.
 - Earth (E) wire to the green/yellow terminal.

Ensure all connections are secure.

hofstein®



Image: Detailed view of the internal wiring terminal block within the mounting base, illustrating where the live, neutral, and earth wires should be connected.

6. **Secure Mounting Plate:** Attach the mounting plate to the wall using the provided screws. Ensure it is firmly fixed.
7. **Attach Fixture Body:** Align the main body of the light fixture with the mounting plate and secure it with the screws previously removed.
8. **Install Bulb:** Screw an E27 bulb (max 40W) into the lamp holder.



Image: The hofstein Palanga wall light with an E27 bulb correctly installed within the amber glass shade and black metal frame.

9. **Attach Glass Shade:** Carefully place the glass shade over the bulb and secure it according to the fixture's design (e.g., by screwing it onto the base or using retaining clips).

Once installation is complete, restore power at the circuit breaker and test the light fixture.

5. OPERATING INSTRUCTIONS

The hofstein Palanga wall light operates via your standard wall switch. Once installed and powered, simply use the connected wall switch to turn the light on or off.

- **Power On/Off:** Use the wall switch connected to the fixture.
- **Dimmable Functionality:** If you wish to use a dimmable bulb, ensure the bulb itself is dimmable and that an external dimmer switch (not included) is properly installed by a qualified electrician.

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your wall light.

6.1 Cleaning

- Always disconnect power before cleaning.
- Wipe the metal frame with a soft, damp cloth. Do not use abrasive cleaners or solvents, as

these can damage the finish.

- Clean the glass shade with a soft cloth and a mild glass cleaner. Ensure the shade is completely dry before reattaching.

6.2 Bulb Replacement

- Ensure the power is off and the bulb has cooled down completely before attempting to replace it.
- Carefully remove the glass shade.
- Unscrew the old E27 bulb counter-clockwise.
- Screw in a new E27 bulb (maximum 40W) clockwise until snug.
- Reattach the glass shade.
- Restore power and test the new bulb.

7. TROUBLESHOOTING

If you encounter issues with your hofstein Palanga wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Faulty bulb. Loose wiring connection.	Check circuit breaker. Replace bulb. Verify wiring connections (ensure power is off).
Light flickers.	Loose bulb. Incompatible dimmer (if applicable). Faulty wiring.	Tighten bulb. Ensure dimmer and bulb are compatible. Consult a qualified electrician.
Glass shade is loose.	Shade not properly secured.	Re-secure the glass shade firmly.

If the problem persists after attempting these solutions, please contact customer support or a qualified electrician.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	4058383558720
Type	Outdoor Wall Light
Dimensions (H x D x L)	31 cm x 17 cm x 12 cm (approx. 12.2 in x 6.7 in x 4.7 in)
Material (Fixture)	Metal
Material (Shade)	Glass (Amber or Transparent)
Color (Fixture)	Black
Bulb Socket	1x E27

Feature	Detail
Max Wattage per Bulb	40 Watt
Bulb Included	No
Dimmable	Yes, with dimmable E27 bulb and external dimmer (not included)
Power Supply	230 Volt
Protection Rating	IP44 (Protection against splashing water)
Protection Class	Class I

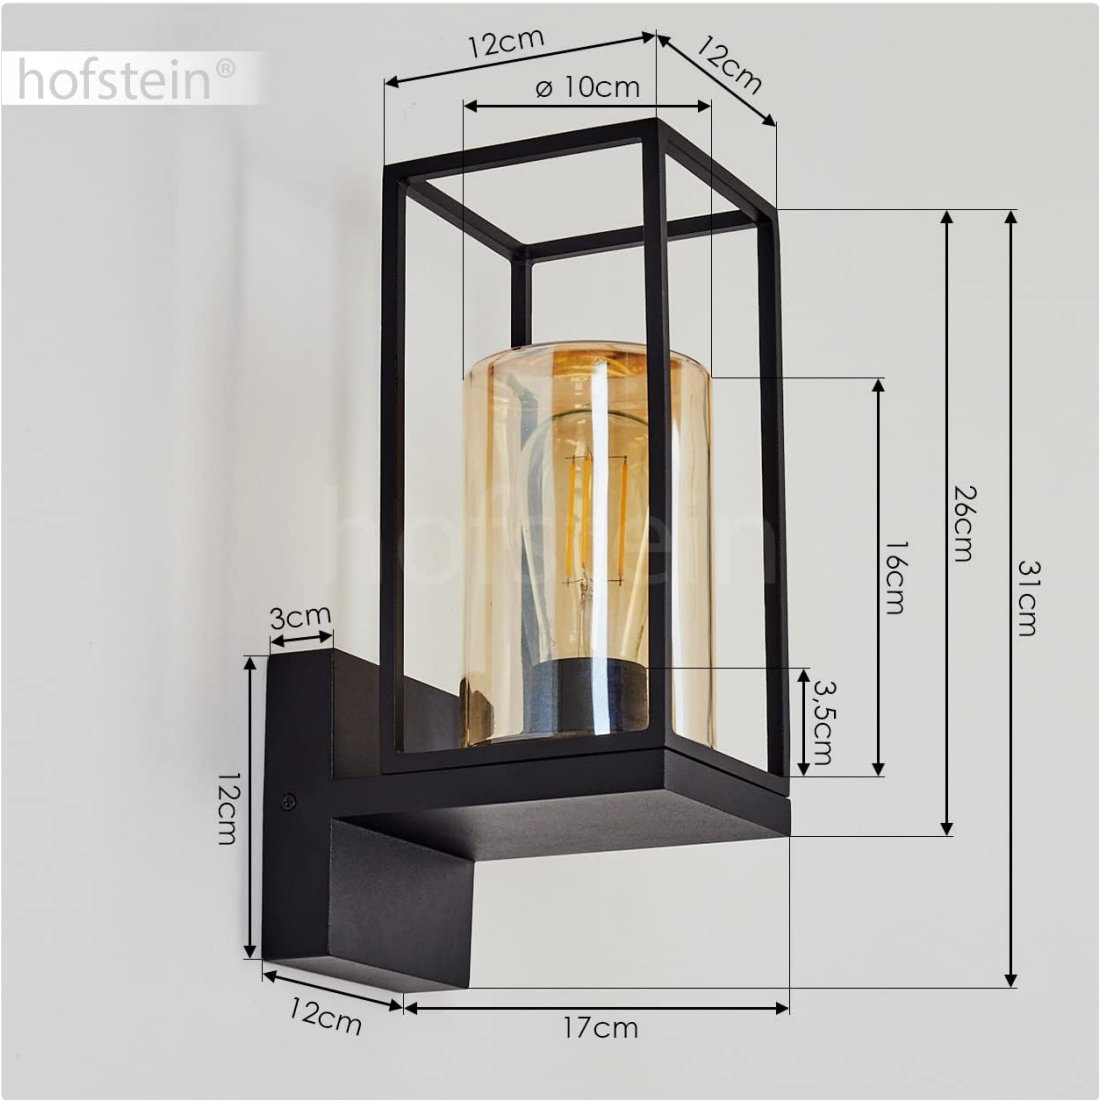


Image: Technical drawing showing the precise dimensions of the hofstein Palanga wall light, including height, depth, length, and diameter of the shade.

9. WARRANTY AND SUPPORT

hofstein products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official hofstein website.

If you require technical assistance, have questions about installation, or need to report a defect, please contact your retailer or hofstein customer support. When contacting support, please have your model number (4058383558720) and proof of purchase readily available.

For more information, you may visit the [hofstein Brand Store](#).

