

Sharp YC-PS201AE-S

SHARP YC-PS201AE-S Microwave Oven User Manual

Model: YC-PS201AE-S | Brand: Sharp

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new SHARP YC-PS201AE-S Microwave Oven. Please read these instructions thoroughly before using the appliance and retain them for future reference. This microwave oven features 700W power, a 20-liter capacity, 6 power levels, and a convenient defrost function.

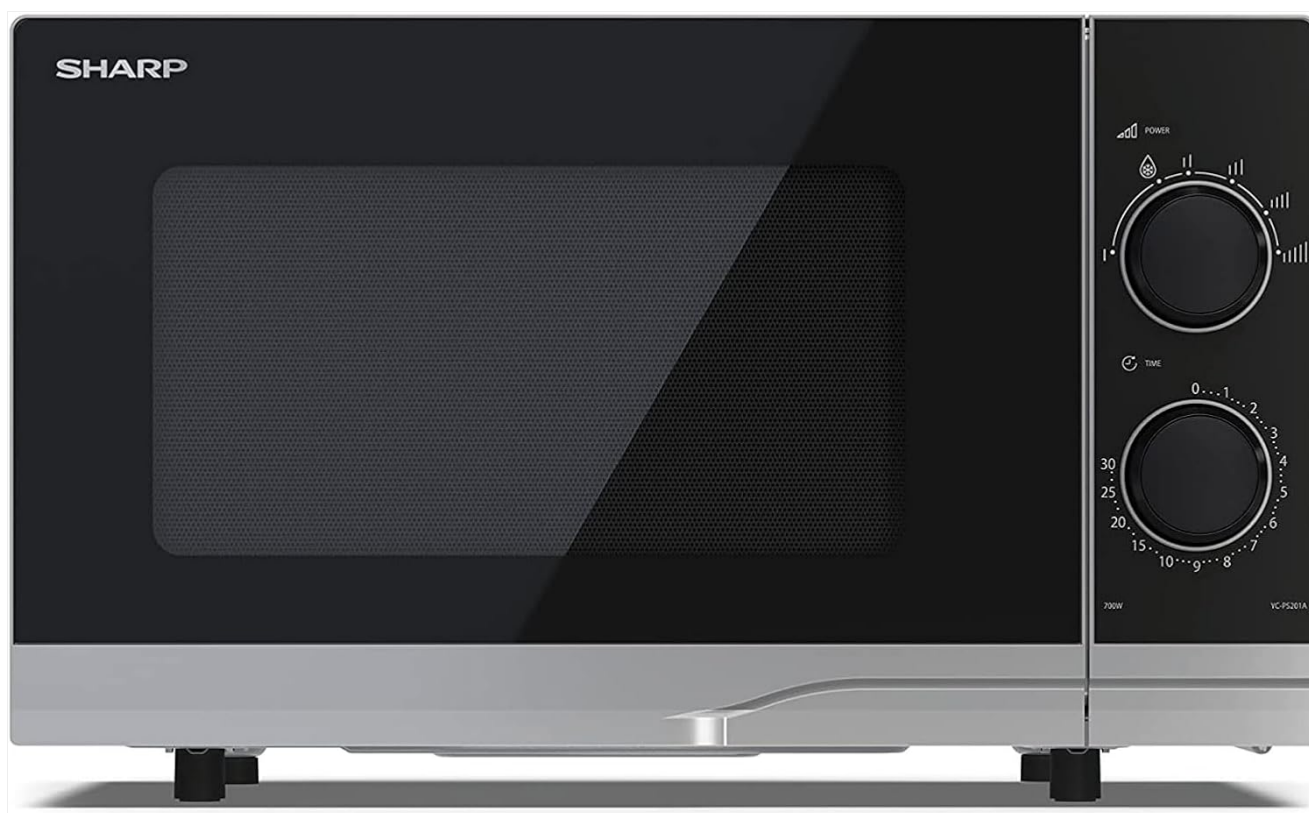 


Image 1.1: Front view of the SHARP YC-PS201AE-S Microwave Oven, silver and black design.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using

your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Always use microwave-safe cookware.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your microwave oven:

- **Oven Cavity:** The interior space where food is heated.
- **Glass Turntable:** A removable glass tray that rotates to ensure even cooking.
- **Turntable Support:** A ring with rollers that supports the glass turntable.
- **Door Assembly:** Includes the door, hinges, and latch system.
- **Control Panel:** Features mechanical dials for power level and timer settings.
- **Waveguide Cover:** Located inside the oven cavity, protects the microwave energy source. Do not remove.
- **LED Cavity Lighting:** Illuminates the interior during operation.



Image 3.1: Interior view of the microwave oven, highlighting the glass turntable and cavity.

4. INSTALLATION AND SETUP

4.1 Unpacking

1. Remove all packaging materials from inside and outside the oven.
2. Check the oven for any damage, such as a misaligned or bent door, damaged door seals, or dents in the cavity. If any damage is present, do not operate the oven and contact customer support.

4.2 Turntable Assembly

1. Place the turntable support ring in the center of the oven cavity floor.
2. Place the glass turntable onto the turntable support, ensuring it sits securely in the center hub.
3. Ensure the turntable rotates freely.

4.3 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
- Allow adequate ventilation space: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.
- Plug the oven into a standard grounded electrical outlet.



Image 4.1: Microwave oven dimensions for proper placement and ventilation.

5. OPERATING INSTRUCTIONS

Your SHARP YC-PS201AE-S microwave oven features simple mechanical controls for power and time settings.

5.1 Power Level Selection

The microwave offers 6 power levels. Rotate the upper dial (labeled 'Power') to select the desired power setting:

- **Low:** For softening butter, thawing.
- **Medium-Low (Defrost):** For defrosting foods.
- **Medium:** For simmering, baking.
- **Medium-High:** For reheating, cooking delicate foods.
- **High:** For fast cooking, boiling liquids. (700W)

5.2 Setting the Cooking Time

Rotate the lower dial (labeled 'Time') to set the desired cooking duration. The timer can be set up to 30 minutes.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Select the desired power level using the upper dial.
4. Rotate the lower dial to set the cooking time. The oven will start automatically.
5. The oven will stop and chime when the set time expires.

5.3 Defrost Function

The defrost function is ideal for thawing frozen foods evenly.

1. Place the frozen food on the glass turntable.
2. Rotate the upper dial to the 'Defrost' setting (usually indicated by a snowflake or specific defrost power level).
3. Rotate the lower dial to set the defrost time. Refer to food packaging for recommended defrosting times.
4. During defrosting, it may be necessary to turn the food over or separate pieces to ensure even thawing.



Image 5.1: Food placed inside the microwave oven for heating.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** For spills and splatters, wipe the interior cavity with a damp cloth immediately after use. For stubborn stains, place a bowl of water with lemon juice inside and heat for a few minutes to create steam, then wipe clean.
- **Cleaning the Turntable and Support:** The glass turntable and turntable support can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Keep the door seals and adjacent parts clean. Use a mild detergent and a soft cloth.
- **Never use harsh detergents, scouring pads, or abrasive cleaners on any part of the microwave.**
- Always unplug the microwave before cleaning.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating	Power level set too low; Cooking time too short; Incorrect cookware used.	Increase power level or cooking time; Use microwave-safe cookware.
Turntable not rotating	Turntable not properly seated; Debris under turntable support.	Ensure turntable and support are correctly positioned; Clean under the turntable support.
Sparkling inside oven	Metal or foil in oven; Damaged waveguide cover.	Remove any metal objects; Contact service if waveguide cover is damaged.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	YC-PS201AE-S
Brand	Sharp
Microwave Power Output	700 Watts
Capacity	20 Litres
Power Levels	6
Control Type	Mechanical Dials
Defrost Function	Yes
Cavity Lighting	LED
Turntable Diameter	24.5 cm
Product Dimensions (L x W x H)	45.5 cm x 32.9 cm x 27.4 cm
Weight	10.5 kg
Color	Silver/Black
Material	Stainless Steel

9. WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Sharp website. For technical assistance, spare parts, or service inquiries, please contact Sharp customer support through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and support on the official Sharp website: www.sharp.eu

Related Documents - YC-PS201AE-S

	<p>SHARP Microwave Oven User Manual</p> <p>User manual for SHARP microwave ovens, providing essential safety instructions, installation guides, operational procedures, and troubleshooting tips for models YC-PS204AE, YC-PS234AE, YC-PS254AE, YC-PG204AE, YC-PG234AE, YC-PG254AE, and YC-PG284AE.</p>
	<p>SHARP YC-QS204A Series Microwave Oven User Manual</p> <p>Comprehensive user manual for the SHARP YC-QS204A series microwave ovens, covering safety instructions, operation, installation, cleaning, and troubleshooting. Includes model numbers YC-QS204A, YC-QS254A, YC-QG204A, YC-QG234A, YC-QG254A.</p>
	<p>Sharp Microwave Oven User Manual: YC-QS204AU, YC-QS254AU, YC-QG204AU, YC-QG234AU, YC-QG254AU</p> <p>Comprehensive user manual for Sharp microwave oven models YC-QS204AU, YC-QS254AU, YC-QG204AU, YC-QG234AU, and YC-QG254AU. Includes safety instructions, operating guides, cleaning tips, and troubleshooting.</p>
	<p>Sharp Microwave Oven User Manual: YC-PS204AE, YC-PG204AE Series</p> <p>Comprehensive user manual for Sharp microwave ovens, covering safety, installation, operation, cleaning, and troubleshooting for models YC-PS204AE, YC-PS234AE, YC-PS254AE, YC-PG204AE, YC-PG234AE, YC-PG254AE, YC-PG284AE.</p>
	<p>Sharp Microwave Oven User Manual: Safety, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for Sharp microwave ovens, covering essential safety precautions, installation guidelines, operating instructions, cleaning tips, and troubleshooting for models like YC-PS204AE, YC-PG234AE, and others.</p>

YC-PS201AE-S
20 Litre Microwave Oven
Microwave Oven with Manual Control



HIGHLIGHTS
Capacity: 20 Litres
Microwave Power: 700W
Microwave Power Levels: 6
Control Type: Manual
Cavity Type: Turntable
Cavity Lighting: LED
Easy to Clean
Cabinet Colour: Silver
Door Colour: Silver
Accessories Included: Turntable



Sharpconnect (s) | Sharpconnect_official

SHARP
Hi-Grade

[\[pdf\]](#) User Manual Accessories

PS201AES en Микровълнова фурна Sharp YC PS201AE S механично JAR Computers 1686106392
jarcomputers images custom docs |||

YC-PS201AE-S 20 Litre Microwave Oven Microwave Oven with Manual Control

HIGHLIGHTS Capacity: 20 Litres Microwave Power: 700W Microwave Power Levels: 6 Control Type: Manual Cavity Type: Turntable Cavity Lighting: LED Easy to Clean Cabinet Colour: Silver Door Colour: Silver Accessories Included: Turnt...
lang:en **score:34** filesize: 920.34 K page_count: 2 document date: 2023-04-04

YC-PS201AE-S
20 Litre Microwave Oven
Microwave Oven with Manual Control



HIGHLIGHTS
Capacity: 20 Litres
Microwave Power: 700W
Microwave Power Levels: 6
Control Type: Mechanical
Cavity Type: Turntable
Cavity Lighting: LED
Easy to Clean
Cabinet Colour: Silver
Door Colour: Silver
Accessories Included: Turntable



Sharpconnect (s) | Sharpconnect_official

SHARP
Hi-Grade

[\[pdf\]](#) User Manual Datasheet Accessories Borchure

Sharp YC PS201AE S microwave Product Brochure Datasheet 0 9 MB mmo 109609741 1725037191
5589 272216 objects icecat biz |||

YC-PS201AE-S 20 Litre Microwave Oven Microwave Oven with Manual Control

HIGHLIGHTS Capacity: 20 Litres Microwave Power: 700W Microwave Power Levels: 6 Control Type: Mechanical Cavity Type: Turntable Cavity Lighting: LED Easy to Clean Cabinet Colour: Silver Door Colour: Silver Accessories Included: T...
lang:en **score:33** filesize: 930.12 K page_count: 2 document date: 2024-05-03

YC-PS201AE-S
Mikrowellenherd mit 20 Litern
Mikrowellenherd mit manueller Steuerung



HIGHLIGHTS
Kapazität: 20 Liter
Mikrowellenleistung: 700 W
Mikrowellenleistungsstufen: 6
Steuerungstyp: Handbuch
Garraumart: Drehteller
Garraumbeleuchtung: LED
leicht zu reinigen
Gehäusefarbe: Silber
Trfarbe: Silber
Zubehör enthalten: Drehteller



Sharpconnect (s) | Sharpconnect_official

SHARP
Hi-Grade


[\[pdf\]](#)

Datenblatt Sharp YC PS201AE S ab € 89 90 2023 Preisvergleich Geizhals Österreich
14c7e98e516c4103a72688627a8cc5b37706 gzhls at blob ldb 8 2 4 0 |||

YC-PS201AE-S Mikrowellenherd mit 20 Litern Mikrowellenherd mit manueller

Steuerung **HIGHLIGHTS** Kapazität: 20 Liter Mikrowellenleistung: 700 W Mikrowellenleistungsstufen: 6 Steuerungstyp: Handbuch Garraumart: Drehteller Garraumbeleuchtung: LED leicht zu reinigen Gehäusfarbe: Silber Trfarbe: Silber Zube...

 lang:de **score:33** filesize: 913.33 K page_count: 2 document date: 2023-01-26

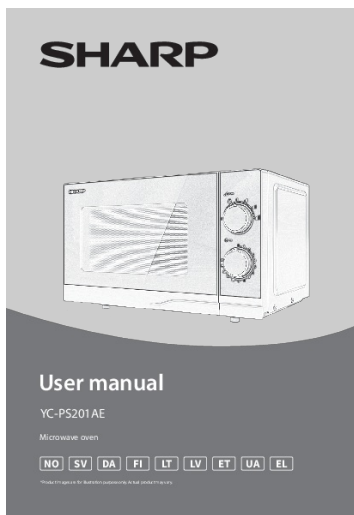


[\[pdf\]](#) User Manual Declaration of Conformity

SDA MAN 0157 ver4 20 Litre Microwave Oven YC PS201AE S Sharp Europe 99ddf4e2 a5f4 11ec 87d5 eefe16bc1cee s3 eu west 1 amazonaws accounts media SHRP DAM origin |||

User manual YC-PS201AE Microwave oven NO SV DA FI LT LV ET UA EL *Product images are for illustration purpose only. Actual product may vary. NO Obs: Produktet er markert med dette symbolet. Det betyr at brukte elektriske og elektroniske produkter ikke skal blandes med generelt husholdningsavfall...

 lang:no score:18 filesize: 3.68 M page_count: 208 document date: 2021-11-10

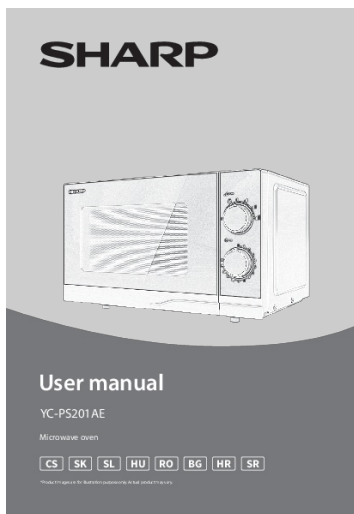


[\[pdf\]](#) User Manual Declaration of Conformity

SDA MAN 0158 ver4 20 Litre Microwave Oven YC PS201AE S Sharp Europe a0522ee2 a5f4 11ec 9fe2 eefe16bc1cee s3 eu west 1 amazonaws accounts media SHRP DAM origin |||

User manual YC-PS201AE Microwave oven CS SK SL HU RO *Product images are for illustration purpose only. Actual product may vary. BG HR SR CS Pozor: Vs produkt je oznacen tmto symbolem. To znamen, ze pouzit elektrick a elektronick produkty nesm bt smseny s bznm domcm odpadem. Pro tyto produk...

 lang:hr score:17 filesize: 3.3 M page_count: 188 document date: 2021-11-10

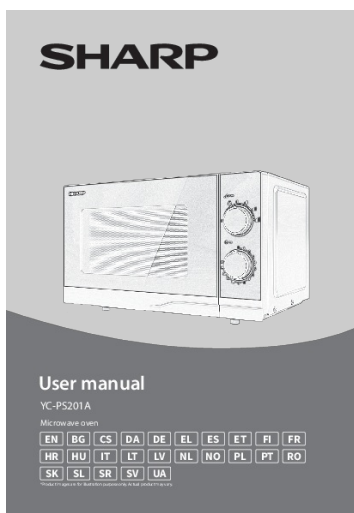

[\[pdf\]](#) User Manual Declaration of Conformity


User manual26 lug 2025 — Do not cook eggs in their shells and whole hard boiled should be heated microwave ovens since they may explode even after cooking hasSharp YC PS201AE S használati útmutatóimages euronics hu product documents

U2hcnAgWUMtUFMyMDFBRS1TIGhnc3puw6FsYXRpIMO6dG11dGF0w7MucGRm sharp yc ps201ae s hasznalati utmutato 4dy9r5b7 v 1 manual EuronicsThe oven lamp will turn off automatically the turntable stops rotating Open door remove food container carefully Leave to stand as 26 útmutatóSharp 1images hasJul 26 When using a browning dish or self heating material always place heat resistant insulator such as porcelain plate under it prevent damage ovenSharp útmutató383163684images 1content2 rozetka ua goods original 383163684 ||| ||| User manual YC-PS201A Microwave oven EN BG CS DA DE EL ES ET FI FR HR HU IT LT LV NL NO PL PT RO SK SL SR SV UA *Product images are for illustration purpose only. Actual product may vary. EN Attention: Your product is marked with this symbo

User manual YC-PS201A Microwave oven EN BG CS DA DE EL ES ET FI FR HR HU IT LT LV NL NO PL PT RO SK SL SR SV UA *Product images are for illustration purpose only. Actual product may vary. EN Attention: Your product is marked with this symbol. It means that used electrical and electronic products...

lang:en score:17 filesize: 10.03 M page_count: 580 document date: 2023-07-25

 [pdf]

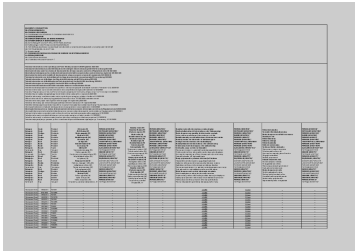

Demet Ergun Product information for Stand by modes SHARP SJ BE210T0XS EU 54cm Fridge Freezer
Standby Reg List 070525 Sharp update v 1749534333 cdn shopify s files 1 0722 9485 8997 |||
EN-ENERGY CONSUMPTION DE-STROMVERBRAUCH ES-CONSUMO DE
ENERGA FR-CONSOMMATION D NERGIE IT-CONSUMO ENE ... -GS01E-B YC-
PC254AE-S YC-PC284AE-S YC-PC322AE-S YC-PG204AE-S YC-PG234AE-S YC-
PG254AE-S YC-PG284AE-S **YC-PS201AE-S** YC-PS204AE-S YC-PS234AE-S YC-
PS254AE-S YC-QC254AE-B YC-QG204AE-B YC-QG234AE-B YC-QG254A...
lang:it score:13 filesize: 417.8 K page_count: 5 document date: 2025-05-30