

## ghd 5060760617462

# ghd Original Professional Ceramic Hair Straightener

Model: 5060760617462

## 1. INTRODUCTION

The ghd Original professional hair straightener, with its new design, allows you to create smooth and silky looks every day. It features a rounded barrel and ceramic floating plates. For added safety, the sleep mode function automatically switches off the device after 30 minutes of inactivity.

This manual provides essential information for the safe and effective use of your ghd Original hair straightener. Please read it thoroughly before first use and keep it for future reference.

### Key Features:

- New and improved straightener with Single-Zone ceramic technology that maintains the optimal styling temperature for impeccable results.
- Rounded barrel and ceramic floating plates to easily create all types of styling, from perfect straight hair to soft or defined waves.
- Optimal temperature of 185°C that does not compromise the health of your hair.
- Achieve smooth and silky looks, always shinier, every day.
- Additional features: 30-second heat-up time; automatic switch-off after 30 minutes of inactivity; 2-year ghd manufacturer's warranty; 2.7m swivel cord; universal voltage.

## 2. SAFETY INFORMATION

Please read and follow all safety instructions carefully to prevent injury or damage to the appliance.

- Always unplug the appliance immediately after use.
- Do not use while bathing or in the shower.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If the appliance falls into water, do not reach for it. Unplug immediately.
- Keep away from water.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always ensure the appliance is completely cool before storing.
- Do not wrap the cord around the appliance.
- Keep the appliance out of reach of children.

- Do not use if the cord or plug is damaged.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.

### 3. PACKAGE CONTENTS

---

Verify that all items are included in your package:

- 1 x ghd Original Styler - Professional Hair Straightener



Image: ghd Original Professional Ceramic Hair Straightener, showing the device and its power cord.

### 4. SETUP

---

1. **Unpack the Device:** Carefully remove the ghd Original hair straightener from its packaging.
2. **Inspect for Damage:** Before first use, inspect the straightener and its power cord for any signs of damage. Do not use if damaged.
3. **Plug In:** Insert the power plug into a suitable electrical outlet. The straightener is designed with universal voltage, making it suitable for travel.
4. **Power On:** Press the power button located on the straightener. You will hear an audible signal, and an indicator light will illuminate, signifying that the device is heating up.
5. **Heat-Up Time:** The ghd Original heats up in approximately 30 seconds to its optimal styling temperature of 185°C. A second audible signal will indicate when it is ready for use.



Image: Close-up of the ghd Original straightener plates and power button, highlighting the 185°C optimal styling temperature and 30-second heat-up time.

## 5. OPERATING INSTRUCTIONS

The ghd Original hair straightener is designed for versatile styling, allowing you to create straight, wavy, or curly looks.

### General Styling Tips:

- Ensure hair is clean, dry, and detangled before styling.
- For best results and hair protection, apply a heat protectant spray before use.
- Work with small sections of hair for even heat distribution and better styling control.
- The optimal styling temperature of 185°C is pre-set to protect your hair from excessive heat damage while delivering effective results.

### Creating Straight Styles:

1. Take a small section of hair (approximately 2cm wide).

2. Place the section between the ceramic plates, close to the roots.
3. Gently glide the straightener down the hair section from root to tip in one smooth motion. Avoid stopping or holding the straightener in one place for too long.
4. Repeat for all sections until desired straightness is achieved.



Image: A user demonstrating the process of straightening hair with the ghd Original straightener.

### Creating Waves and Curls:

The rounded barrel and floating plates make it easy to create various wavy and curly styles.

1. Take a small section of hair.
2. Place the section between the plates, close to the roots.
3. Rotate the straightener 180 degrees (half turn) away from your face.
4. Slowly glide the straightener down the hair section, maintaining the rotation. The speed of gliding will affect the tightness of the curl or wave.

5. Release the hair and allow it to cool before touching to set the style.
6. For softer waves, gently brush through the cooled curls.



Image: A visual comparison of straight and wavy hairstyles achievable with the ghd Original straightener.

## 6. MAINTENANCE AND CARE

---

Proper maintenance ensures the longevity and optimal performance of your ghd Original hair straightener.

### Cleaning:

- Always ensure the straightener is unplugged and completely cool before cleaning.
- Wipe the ceramic plates and the exterior of the straightener with a soft, damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the surfaces.
- Ensure no moisture enters the internal components.

### Storage:

- Store the straightener in a safe, dry place, away from moisture and extreme temperatures.
- Allow the appliance to cool completely before storing.
- Do not wrap the power cord tightly around the straightener, as this can cause damage to the cord.

## 7. TROUBLESHOOTING

| Problem                                               | Possible Cause                                                   | Solution                                                                                                                            |
|-------------------------------------------------------|------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Straightener does not turn on.                        | Not plugged in correctly, power outlet issue, or internal fault. | Ensure the plug is fully inserted. Test the outlet with another device. If still not working, contact customer support.             |
| Straightener is not heating up.                       | Device not powered on, or internal heating element issue.        | Press the power button. Wait 30 seconds for heat-up. If no heat, contact customer support.                                          |
| Automatic switch-off (sleep mode) activates too soon. | No activity detected for 30 minutes.                             | This is a safety feature. The device will turn off after 30 minutes of inactivity. Turn it back on if you wish to continue styling. |
| Hair is not straightening or curling effectively.     | Hair is too wet, sections are too large, or improper technique.  | Ensure hair is completely dry. Work with smaller sections. Review operating instructions for proper technique.                      |

## 8. SPECIFICATIONS

| Feature                     | Detail                                     |
|-----------------------------|--------------------------------------------|
| Brand                       | ghd                                        |
| Model Name                  | Nuova Original                             |
| Item Model Number           | 5060760617462                              |
| Product Dimensions          | 24.5 x 4 x 3.5 cm (9.6 x 1.6 x 1.4 inches) |
| Item Weight                 | 340 Grams (0.75 lbs)                       |
| Color                       | Black Previous Packaging                   |
| Material Type               | Ceramic                                    |
| Heater Surface Material     | Ceramic                                    |
| Power Source                | Corded Electric                            |
| Cable Length                | 2.8 Meters (9.2 feet)                      |
| Maximum Temperature Setting | 185°C (365°F)                              |
| Hair Type                   | All                                        |
| Automatic Shut-off          | Yes, after 30 minutes of inactivity        |
| Heat-up Time                | 30 seconds                                 |

## 9. WARRANTY AND SUPPORT

Your ghd Original Professional Ceramic Hair Straightener comes with a manufacturer's warranty.

- **Warranty Period:** 2 years from the date of purchase.
- **What is Covered:** Defects in materials and workmanship under normal use.
- **What is Not Covered:** Damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact ghd customer service through their official website or the retailer where the product was purchased.

© 2024 ghd. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question