

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Outsunny](#) /

> [Outsunny Folding Chaise Lounge Chair Model 84B-206MX Instruction Manual](#)

Outsunny 84B-206MX

Outsunny Folding Chaise Lounge Chair Instruction Manual

Model: 84B-206MX | Brand: Outsunny

1. INTRODUCTION

Thank you for choosing the Outsunny Folding Chaise Lounge Chair. This manual provides essential information for the safe and effective use, maintenance, and care of your new outdoor lounge chair. Please read these instructions thoroughly before use and retain them for future reference.



Image: Outsunny Folding Chaise Lounge Chair in Rainbow Striped design, perfect for relaxing outdoors.

2. SAFETY INFORMATION

- **Maximum Weight Capacity:** This chaise lounge chair is designed to support a maximum weight of **264 lbs (120 kg)**. Do not exceed this limit to prevent injury or damage to the product.
- **Secure Locking:** Always ensure the backrest and footrest mechanisms are securely locked in place before sitting or reclining.
- **Outdoor Use:** This product is intended for outdoor use. It should not be used during strong winds, heavy rain, or storms. Store indoors or cover during inclement weather to prolong its lifespan.
- **Stable Surface:** Place the chair on a flat, stable, and level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the chair during setup and folding to avoid pinching or injury.
- **Inspection:** Regularly inspect all parts for wear, damage, or loose connections. Do not use the chair if any part is damaged.

3. PACKAGE CONTENTS

Your Outsunny Folding Chaise Lounge Chair comes fully assembled and ready for use. The package includes:

- 1 x Outsunny Folding Chaise Lounge Chair (Model: 84B-206MX)
- 1 x Removable Pillow

4. SETUP INSTRUCTIONS

The Outsunny Folding Chaise Lounge Chair requires no assembly. Simply unfold it to prepare for use.

4.1 Unfolding the Chair

1. Place the folded chair on a flat, stable surface.
2. Gently pull the two main sections of the chair apart until the frame extends fully.
3. Ensure all four legs are fully extended and locked into position for stability.
4. Adjust the backrest to your desired reclining position (see Section 5.1).



Image: The foldable design allows for easy transport and storage.

4.2 Folding the Chair for Storage

1. Ensure the backrest is in its lowest, flat position.
2. Carefully lift the chair from the middle section, allowing the legs to fold inward.
3. Continue folding until the chair is compact. Secure with any integrated straps if available.

Video: Official demonstration of the Outsunny 84B-206MX Folding Lounger, showcasing its features and ease of use.

5. OPERATING INSTRUCTIONS

5.1 Adjusting the Backrest

The chaise lounge features a 4-position adjustable backrest for customizable comfort. To adjust:

1. Slightly lift the backrest to disengage the locking mechanism.
2. Move the backrest to your desired angle.
3. Lower the backrest until it securely locks into one of the four available positions. Ensure it is stable before applying full weight.



Image: The 4-level adjustable backrest allows for various reclining positions.

5.2 Using the Footrest

The footrest can be adjusted up or down to enhance your comfort, whether you prefer sunbathing, tanning, or taking a nap. Simply lift or lower the footrest to the desired position.

6. MAINTENANCE

6.1 Cleaning

To clean your chaise lounge chair, simply wipe it clean with a damp cloth. For stubborn dirt, a mild soap solution can be used. Rinse thoroughly and allow to air dry completely before folding or storing.



Image: The breathable mesh fabric is designed to keep you cool and dry, and is easy to clean.

6.2 Storage

When not in use, especially during off-seasons or inclement weather, fold the chair and store it in a dry, protected area to prevent damage from elements and prolong its lifespan.

7. TROUBLESHOOTING

- **Chair is unstable:** Ensure all legs are fully extended and locked into place on a flat, level surface. Check for any obstructions under the legs.
- **Backrest not locking:** Make sure the backrest mechanism is free of debris and is properly aligned with the locking grooves. Apply gentle pressure to ensure it clicks into position.
- **Difficulty folding/unfolding:** Check for any fabric or frame parts that may be caught in the folding mechanism. Ensure the backrest is in the lowest position before folding.

If you encounter any issues not listed here, please contact Outsunny customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	84B-206MX
Material	Steel, Mesh Fabric
Frame Material	Alloy Steel
Seat Material	Mesh
Fill Material	Foam (for pillow)
Overall Dimensions (L x W x H)	74.5" x 22.75" x 11.75"
Foldable Dimensions (L x W x H)	29.25" x 22.75" x 5.5"
Item Weight	11.9 Pounds
Maximum Weight Capacity	264 lbs (120 kg)
Reclining Positions	4
Assembly Required	No (Completely assembled)
Product Care	Wipe Clean

9. WARRANTY AND SUPPORT

For specific warranty information regarding your Outsunny Folding Chaise Lounge Chair, please refer to the documentation provided at the time of purchase or contact Outsunny customer support directly. Standard return policies typically allow for returns within 30 days of purchase, but this may vary by retailer.

For any questions, concerns, or support needs, please visit the official Outsunny website or contact their customer service department.

