

[Manuals.plus](#) /

› [TWZ](#) /

› MasterPRO Dual Air Fryer Instruction Manual

TWZ MPUS80009-WHTMS

MasterPRO Dual Air Fryer Instruction Manual

Model: MPUS80009-WHTMS

INTRODUCTION

Thank you for choosing the MasterPRO Dual Air Fryer. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals. With its dual basket system and advanced features, you can prepare a variety of dishes with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Front view of the MasterPRO Dual Air Fryer, showcasing its sleek design and dual basket configuration.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not block any air vents. Allow sufficient space around the appliance for proper ventilation.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly. Check that all components are present and undamaged.



Large two-basket capacity makes making family meals a breeze by eliminating back-to-back cooking

The MasterPRO Dual Air Fryer with both frying baskets partially pulled out, showing the interior compartments.

2. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper air circulation.




Rear view of the air fryer, highlighting the ventilation grilles that require clear space for optimal performance.

3. **Initial Cleaning:** Before first use, clean the frying baskets and crisper racks with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.



360° complete hot air technology
ensures perfectly cooked meals

The two non-stick frying baskets and crisper racks, detached from the main unit for cleaning.

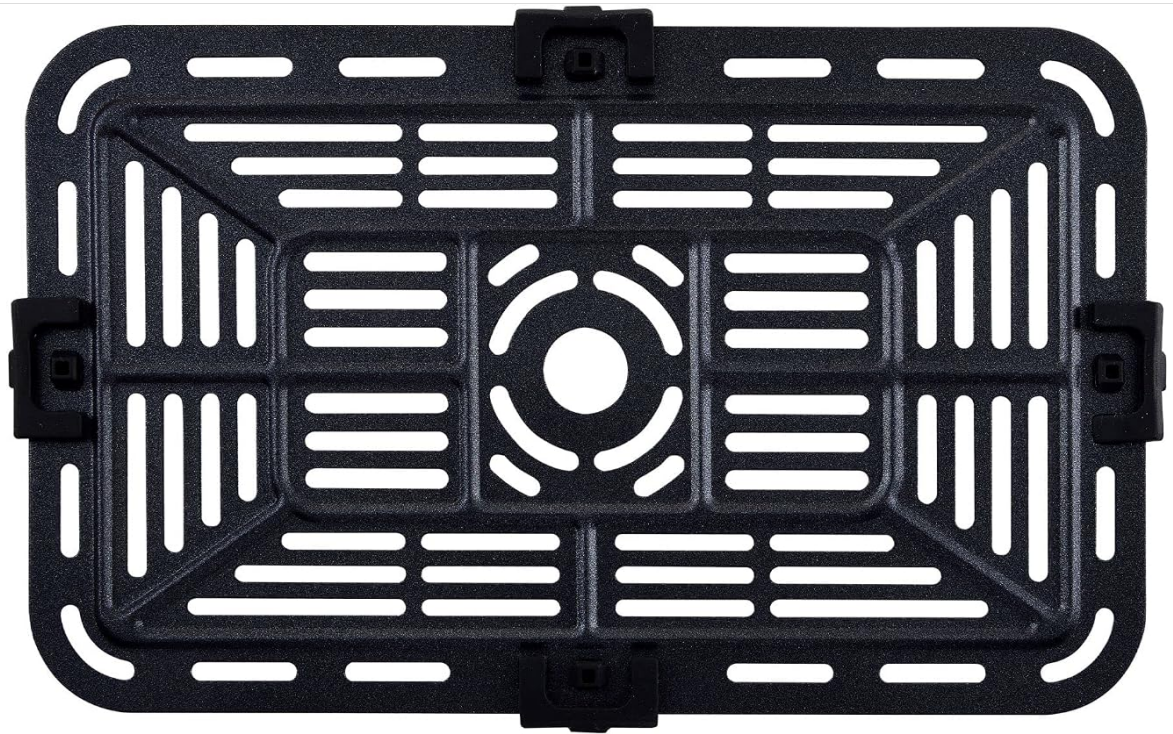

Crisper plates allow hot air to circulate around and under food

A detailed view of one of the crisper plates, designed to allow hot air to circulate around food for even cooking.

4. **Insert Components:** Place the crisper racks into the frying baskets, then slide the baskets back into the air fryer until they click into place.

OPERATING INSTRUCTIONS

Control Panel Overview

The MasterPRO Dual Air Fryer features an intuitive digital touch screen for easy operation.



Sync finish technology prepares two different foods, two unique ways, and finishes at the same time

The digital control panel displaying various cooking functions and settings.



A closer look at the touch controls, including temperature, time, and pre-programmed settings.

Pre-Programmed Settings

The air fryer comes with 8 pre-programmed settings for common dishes:

- Air Fry
- Roast
- Broil
- Bake
- Reheat
- Keep Warm
- French Fries
- Dehydrate

To use a pre-programmed setting, simply select the desired function on the control panel. The appliance will automatically set the optimal temperature and time, which can then be adjusted manually if needed.

Dual Cook and Sync Finish Technology

This air fryer features two independent cooking zones, allowing you to cook two different foods at different temperatures and times simultaneously. The **Sync Finish** technology ensures both baskets complete cooking at the same time,

providing a stress-free meal preparation experience. The **Dual Cook** feature allows you to easily match the settings of one basket to the other with a single button press.

General Cooking Steps

1. Place food in the frying basket(s). Do not overfill.
2. Slide the basket(s) back into the air fryer.
3. Press the Power button to turn on the appliance.
4. Select a pre-programmed setting or manually set the temperature and time for each basket using the '+' and '-' buttons.
5. Press the 'Start/Pause' button to begin cooking.
6. Some recipes may require shaking or flipping food halfway through cooking. The appliance may beep to remind you.
7. Once cooking is complete, carefully pull out the basket(s) and remove the food.

Official Product Video

Your browser does not support the video tag.

This video demonstrates the key features and benefits of the MasterPRO Dual Air Fryer, including its adjustable temperature range, total capacity, pre-programmed settings, and Sync Finish technology.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

- **Cleaning the Baskets and Racks:** The frying baskets and crisper racks are non-stick. Clean them with hot water, dish soap, and a non-abrasive sponge after each use.**Note:** These components are *not* dishwasher safe.
- **Cleaning the Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scourers.
- **Storage:** Ensure the appliance is completely cool and clean before storing. Store it in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Check power cord connection; try a different outlet; contact customer support.
Food not cooked evenly.	Baskets overloaded; food not shaken/flipped; uneven heating (rare).	Do not overload baskets; shake or flip food halfway through cooking; if persistent, contact customer support.
White smoke coming from appliance.	Grease residue from previous use; fatty food being cooked.	Clean baskets and crisper racks thoroughly; remove excess oil from food.
Food not crispy.	Too much moisture; not enough oil; temperature too low.	Pat food dry before air frying; lightly coat with oil; increase temperature or cooking time.

SPECIFICATIONS

Brand: TWZ (MasterPRO)

Model Number: MPUS80009-WHTMS

Capacity: 8.4 Quarts Total (4.2 Quarts per basket)

Wattage: 1700 Watts

Product Dimensions: 14.72 x 15.12 x 12.13 inches (Length x Width x Height)

Item Weight: 20 Pounds

Material: Plastic (Outer), Stainless Steel (Inner)

Non-stick Coating: Yes

Dishwasher Safe Components: No

Controller Type: Push Button / Digital Touch Screen



Diagram showing the overall dimensions of the MasterPRO Dual Air Fryer.



Diagram illustrating the dimensions of the individual frying baskets.

WARRANTY AND SUPPORT

The MasterPRO Dual Air Fryer comes with a standard manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official MasterPRO website.

For further assistance, you may contact customer support via:

Website: [MasterPRO Official Store](#)

Email: support@masterpro.com (Example email, actual email not provided)

Phone: 1-800-XXX-XXXX (Example phone, actual phone not provided)

© 2024 MasterPRO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question